


RH

BOULE DE CRISTAL VANITY SCONCE 16.5"

PARTS ENCLOSED

- (A) Metal Anchors (8)
- (B) Mounting Plate (1)
- (C) Wood Screws (8)
- (D) Canopy Screws (4)
- (E) Mounting Screws (2)
- (F) Canopy (1)
- (G) Allen Wrench (1)
- (H) Glass Shades (3)
- (I) Bulbs (3)

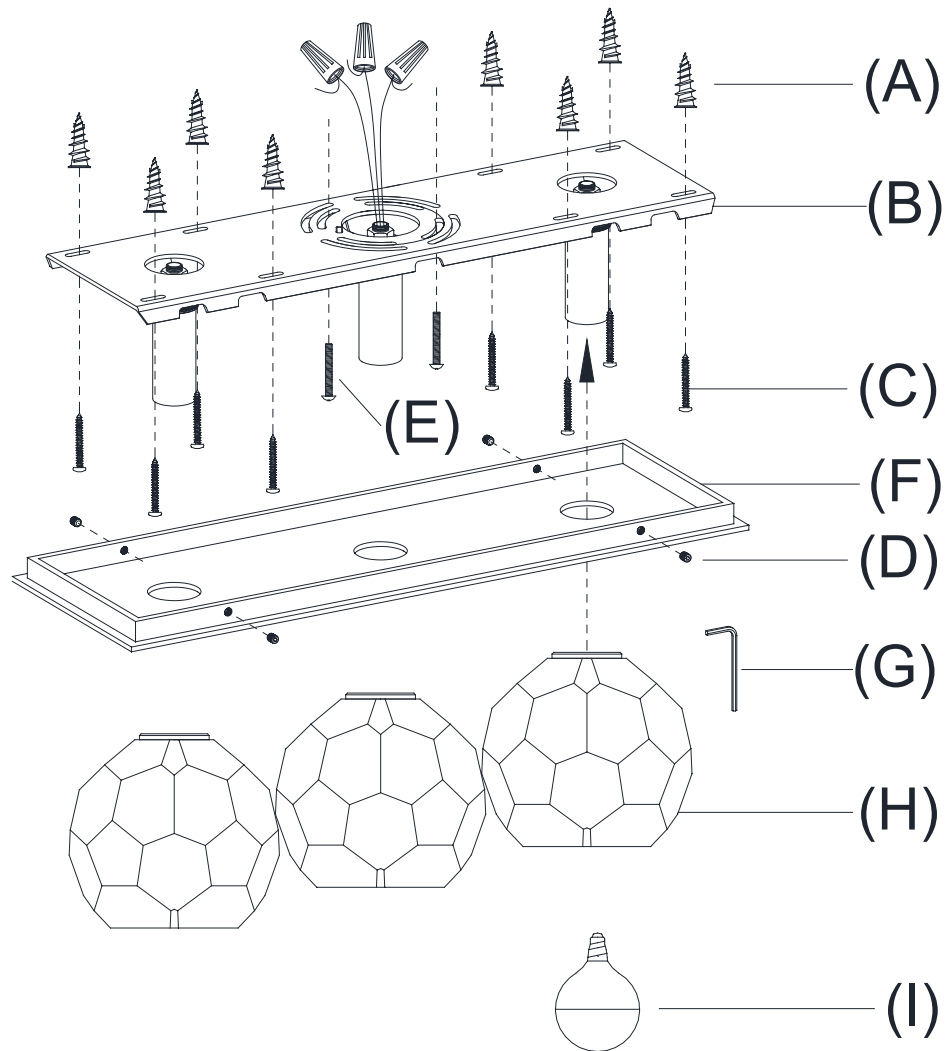

BOULE DE CRISTAL VANITY SCONCE 16.5"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to three (3) 40-Watt maximum Type G lightbulbs (included) or three (3) 9-Watt compact fluorescent lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings.
- Remove Mounting Plate (B) from Canopy (F) by unscrewing Canopy Screws (D) using Allen Wrench (G).
- Place Mounting Plate (B) against the wall junction box. Mark center point locations for eight hanging holes with a pencil. Remove Mounting Plate (B).

ASSEMBLY & INSTALLATION CONT.

- Drill small holes on each pencil mark on the wall. Each hole should be large enough to accommodate Metal Anchors (A). Push Metal Anchors (A) into the holes on the wall.
- Attach Mounting Plate (B) to the wall junction box by aligning the holes and secure by inserting Wall Screws (C) into Metal Anchors (A) and Mounting Screws (E) to the wall junction box.
- Attach the fixture ground wire (green) to the ground wire from the junction box (usually green) with a wire connector and wrap the connection with electrical tape.
- Connect the hot wire (black wire) to the hot wire from junction box (usually black) with a plastic wire connector and wrap the connection with electrical tape.
- Connect the neutral wire (white wire) to the neutral wire from junction box (usually white) with a plastic wire connector and wrap the connection with electrical tape.
- Attach Canopy (F) to the affixed Mounting Plate (B) and secure with Canopy Screws (D). Tighten using Allen Wrench (G).
- Screw Glass Shades (I) to the threaded section of each of the sockets.
- Insert Bulbs (I) into the sockets.
- Restore power to outlet box and check operation of fixture.
- Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.