

## **CRATE STORAGE**

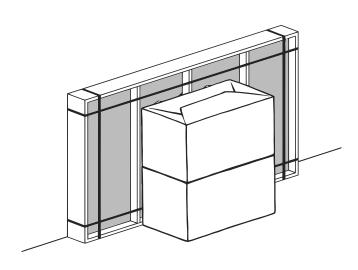


- Keep Stone Top in its crate until installation
- Store crate vertically in a safe location

• Do not stack anything on top of crate

### STONE TOP TRANSPORT

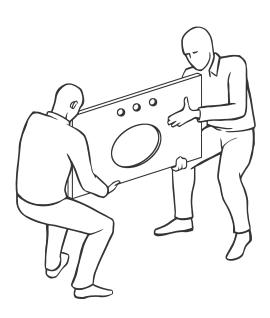


- When moving Stone Top always use a two-person crew.
- Always carry Stone Top vertically.

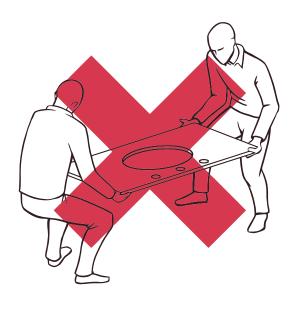


 Do not carry Stone Top horizontally as it increases the risk of breakage or cracking.

# STONE TOP UNPACKING

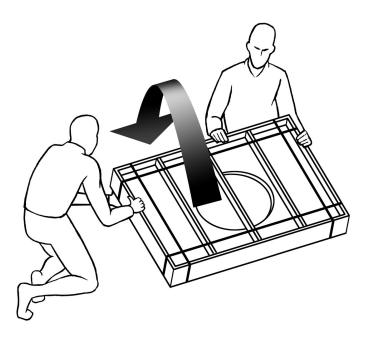


• Carefully, without allowing any freefall, rotate the crate from vertical to flat.

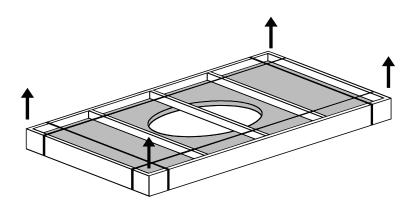


• Remove metal bands, unscrew the slats or lid, and lift the Stone Top out of the crate.

# **PARTS LIST**


A. Stone Top




B. Backsplash



C. Basin x2



D. Washstand Base

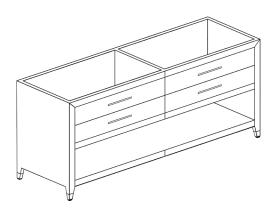


E. Mounting Bracket (x8)



F. Lock Washer (x8)



G Threaded Rod (x8)



H. Wing Nut (x8)



#### STONE TOP INSPECTION

• Before you begin, inspect the Stone Top for cracks and defects. If defects are detected, do not install and please call 800-762-1005. If no defects are detected, clean Stone Top with a soft cloth.

## TOOL AND MATERIAL REQUIREMENTS


- Flat, non-abrasive work surface (blanket or smooth cardboard)
- Sealant
- · Carpenter's level


### PRIMARY INSTALLATION REQUIREMENTS


- Professional two-person crew
- · Water supply and drain piping installed according to local plumbing and building codes (sold separately)
- Wall and floor are square and plumb at installation site
- Washstand Base [D] installed square and plumb with wall and floor. Washstand Base [D] also needs to be level
- Ensure Stone Top [A] is the correct size to match the Washstand Base [D]

#### **BASIN INSTALLATION**

- 1. Place Stone Top [A] upside down on a blanket or smooth cardboard. Four holes with threaded inserts should be visible for each sink.
- 2. Apply a continuous bead of silicone sealant to the top surface of lavatory Basin [C] rim where it comes in contact with underside of Stone Top [A] (see illustration below).
- 3. Position Basin [C] in its final location. The Basin may need to be repositioned slightly to fit the screws into each hole. Secure Mounting Bracket [E] under the Basin lip. Make sure overflow of Basin is located on the same side as the pre-drilled faucet holes in Stone Top [A].
- 4. Align Threaded Rod [G], Lock Washer [F] and Wing Nut [H] with pre-installed stone top threaded insert and secure on all 4 points with mounting bracket [E].

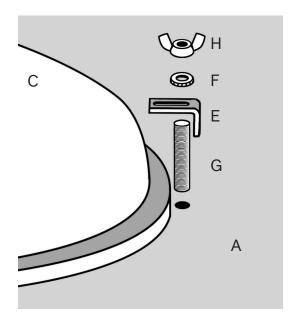

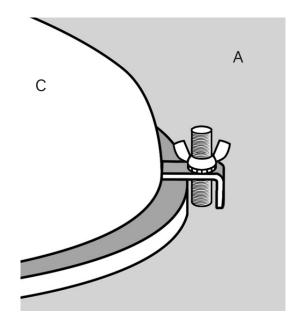

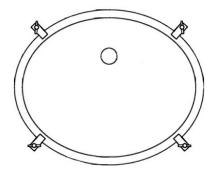

Sink Bracket Locations

### STONE TOP INSTALLATION



Caution! Installation between two walls requires special care.

If Installing between two walls, stop here and follow the next set of instructions.

### STANDARD STONE TOP INSTALLATION GUIDELINES

- 1. Using a two-man crew, lift Stone Top and set it on top of the Washstand Base [D].
- 2. Apply Silicone sealant at the seam where Backsplash [B] meets the wall.


#### STONE TOP INSTALLATION BETWEEN TWO WALLS

- 1. Using a two-person crew, lift Stone Top and set its rear edge on the back of the Washstand Base [D] (closest to the rear wall). See below illustration.
- 2. Lower front of Stone Top onto the Washstand Base, making sure both ends are lowered at the same rate.
- 3. Do not shimmy, twist or turn the Stone Top while lowering as this increases the risk of breakage.
- 4. Apply Silicone sealant at the seam where Backsplash [B] meets the wall.





### **CLEANING AND MAINTENANCE**

- Avoid abrasive and harsh chemical cleaners.
- RH Stone Tops have a honed finish, hand-polished edges, and are sealed twice with inert silicone sealant.
- Stone Tops should be re-sealed annually.

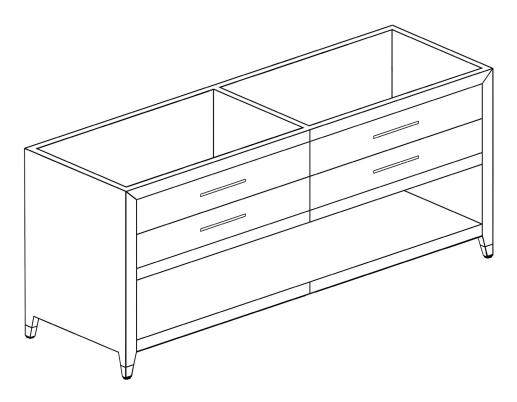


WASHSTAND DIMENSIONS
IN MILLIMETERS

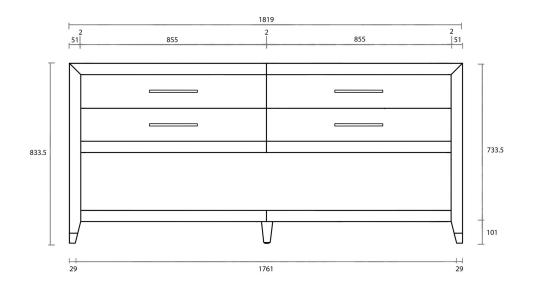


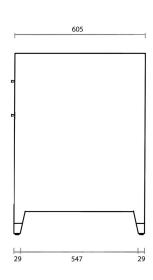



# OVAL STONE TOP IN MILLIMETERS



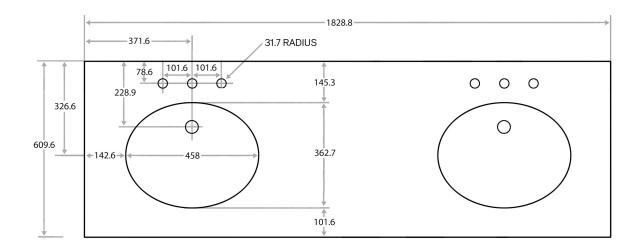

## OVAL BASIN IN INCHES

