


### SUTTON GRAND LINEAR SCONCE

#### PARTS ENCLOSED:

#### HARDWARE INCLUDED:

- (A) Mounting plate (2)
- (B) Back plate (2)
- (C) Glass shade (2)
- (D) Long Glass shade
- a. Green ground screw (1)
- **b.** Plastic wire connector (2)
- c. Mounting screw (2)
- d. Plate screw (2)
- e. Wall anchor (2)
- f. Metal ring (2)
- g. Shade ring (2)
- **h.** Tool (1)
- i. Lock-up tool (1)

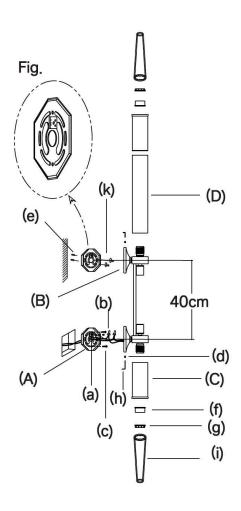

#### IMPORTANT SAFETY INSTRUCTIONS

### WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to four (4) 60-watt maximum Type T bulbs.

To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing lightbulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.

Keep flammable materials away from lit bulb.

⚠ WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

## **ASSEMBLY & INSTALLATION**

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Turn OFF power to the junction box where the lamp will be installed.
- 3. Pull the electrical cord of "J BOX" through the exit hole of the mounting plate (A).
- **4.** Attach the ground wire from the fixture to the ground junction box wire from the outlet box (Usually green or bare wire) with a plastic wire connector (b) and wrap the connection with electrical tape. Screw the green ground screw (a) into the mounting plate (A), and wrap the fixture's bare ground wire around the ground screw.
- **5.** Connect the hot wire to the hot junction box wire (usually black) with a plastic wire connector (b) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white) with a plastic wire connector (b) and wrap the connection with electrical tape.
- **6.** Attach the mounting plate (A) to the outlet box using the mounting screws (c). Tighten with a screwdriver.
- 7. Fig. Please note, mounting plate is a scalene hexagon, when assemble it should place the smaller side close to the screw hole of back plate (B), so that the plate screw (d) can fasten the mounting plate.
- 8. Mark the location of the top mounting plate hole on the wall using a pencil according to distance between two central holes of the mounting plate about 40cm, and then using the mark as a guide, drill holes for the wall anchor. Insert the wall anchor (e) into the holes, using a hammer to fully insert until flush with the wall.
- **9.** Align the holes in the top mounting plate with the wall anchors in the wall, using a screwdriver, secure the mounting plate to the wall with the enclosed mounting screws (k).
- **10.** Attach the back plate to the mounting plate using the enclosed plate screw (d). Tighten screws with tool (h). The other back plate assembly step is the same as above.
- **11.** Insert two 60-watt Type T bulbs into two central threaded sockets and insert long glass shade (D) onto double central sockets.

### SUTTON GRAND LINEAR SCONCE


## PARTS ENCLOSED:

# (A) Mounting plate (2)

- (B) Back plate (2)
- (C) Glass shade (2)
- (D) Long Glass shade

## HARDWARE INCLUDED:

- a. Green ground screw (1)
- **b.** Plastic wire connector (2)
- c. Mounting screw (2)
- d. Plate screw (2)
- e. Wall anchor (2)
- f. Metal ring (2)
- g. Shade ring (2)
- **h.** Tool (1)
- i. Lock-up tool (1)

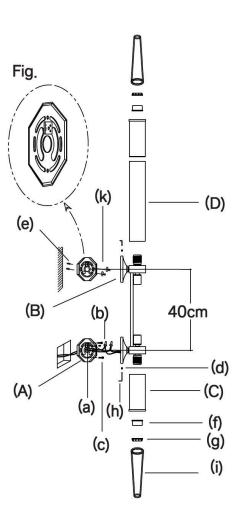

# ASSEMBLY & INSTALLATION, CONT.

- 12. Place glass shade (C) onto the socket, put the metal ring (f) and shade ring (g) over the socket and fasten the glass shade by tightening the shade ring with the lock-up tool (i). The other glass shade assembly step is the same as above.
- 13. Insert the other two (2) bulbs into the top and bottom threaded sockets.
- 14. Restore power to the junction box and test lamp fixture.
- 15. Installation is complete.

# CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. JUST WIPE CLEAN WITH SOFT CLOTH.