

# RH


DELORMÉ SCONCE

ASSEMBLY & INSTALLATION INSTRUCTIONS

**ENGLISH**

**DELORMÉ SCONCE****PARTS INCLUDED**

- (A) Plastic Anchors (2)
- (B) Mounting Plate (1)
- (C) Wood Screws (2)
- (D) Fixture Base (1)
- (E) Set Screws (2)
- (F) Screwdriver (1)
- (G) Shade (1)
- (H) Bulb (1)
- (I) Shade Holder (1)
- (J) Terminal Block (1)

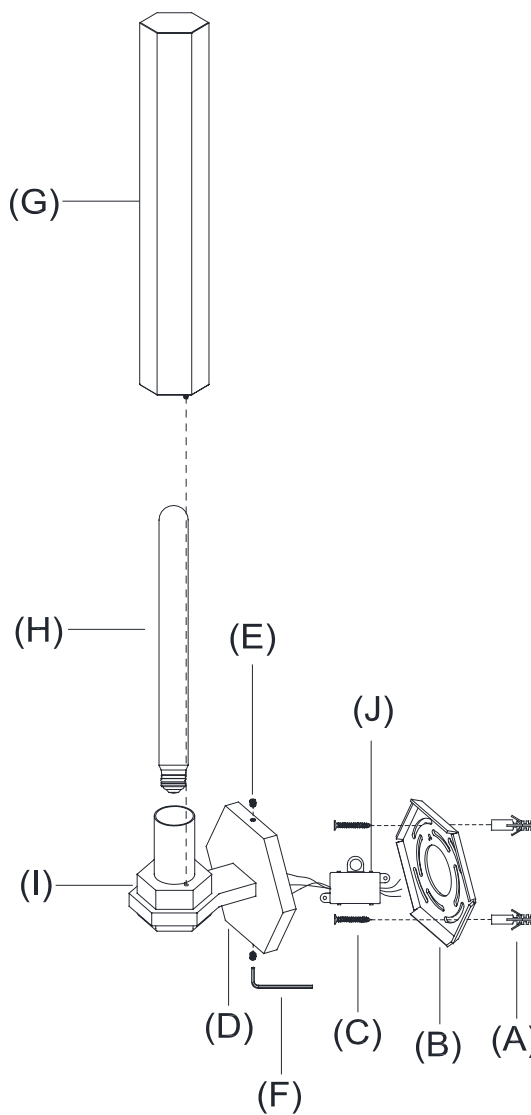

**IMPORTANT: PLEASE READ****IMPORTANT SAFETY FEATURES****BULBS**

This fixture has been rated for up to one (1) 5-watt maximum Type T LED light bulb. To avoid the risk of fire, do not exceed the recommended wattage.

**DIMMER SWITCH COMPATIBILITY**

This fixture is dimmer-switch compatible, and may only be used with a forward dimmer switch.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**

**ASSEMBLY AND INSTALLATION****SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove mounting plate (B) from fixture by removing set screws (E) using provided screwdriver (F).
3. Using the mounting plate (B) as a guide, line up with the junction box and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (A) into the holes using hammer.
5. Install mounting plate (B) to wall and secure with wood screws (C) to anchors (A).
6. Open terminal block (J) to prepare for installation of electrical wires.
7. Connect fixture ground (green) and supply ground (usually green or yellow) to terminal block (J) and secure with screws. NOTE: It is imperative that the fixture is grounded.
8. Connect neutral wires (blue) to terminal block (J) and secure with screws.
9. Connect hot wires (brown) to terminal block (J) and secure with screws. Close terminal block (J). CAUTION: Do not reverse the hot and neutral connections.
10. Attach fixture base (D) to the affixed mounting plate (B) and secure with set screws (E). Tighten with screwdriver (F).
11. Insert the recommended bulb (H) (not included) into the socket.
12. Install shade (G) to shade holder (I).
13. Restore power to outlet box and check operation of fixture.
14. Assembly is complete.

**CARE INSTRUCTIONS**

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.