



MODERN EDGE PULL

ASSEMBLY AND INSTALLATION INSTRUCTIONS

**ENGLISH**

**MODERN EDGE PULL**

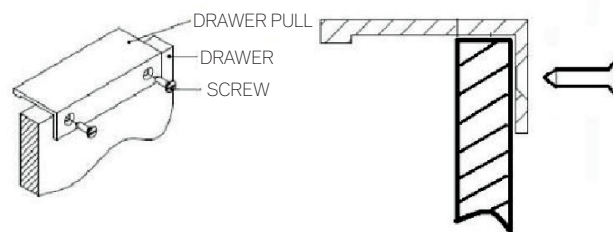
This pull includes hardware that is designed to mount securely to drawer-fronts or cabinet doors that have a thickness range between ½ inch (1 cm) and 1¼ inches (3 cm). If your drawer- front or door is thicker or thinner than this range, please obtain the appropriate size screw from your local hardware store.

**PARTS INCLUDED**

(A) Drawer Pull (1)

(B) Screw (2)

1. Carefully determine a desired pull location and use a 3/16 inch (5 mm) diameter drill bit and an appropriate drill to make the hole through the drawer/door front
2. Insert the appropriate length screw.
3. Attach the pull onto the protruding threads of the screw and rotate clockwise until snug. Use a screwdriver to tighten the screw while gently holding the pull.

**CARE INSTRUCTIONS**

Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.