

# NICCOLO FLOATING MIRROR 26" (66 CM) X 48" (122 CM)



# NICCOLO FLOATING MIRROR 26" (66 CM) X 48" (122 CM)

# PART LIST

- (A) Mirror With Bracket (1)
- (B) Steel screw (5)
- (C) EZ mini anchor (5)
- (D) Aluminum hanger (1)
- (E) Buffer (4)

# WARNING

- 1. In order to prevent falling down this product must be used with the wall attachment device provided.
- 2. Assess the suitability of the wall to ensure that the fastening devices will withstand the forces generated.

# STORAGE

- 1. Do not stack anything on top of the mirror.
- 2. Keep the mirror packaged until installation.
- 3. Store mirror upright on the long edge.


# MIRROR HANDLING INSTRUCTIONS


Caution:

- 1. Remove vertically from package.
- 2. Always carry mirror vertically as illustrated. Carrying flat will cause breakage.


# **BEFORE YOU BEGIN**

- 1. Professional installation recommended.
- Tool and materials required:
  Carpenter's level
  Phillips head screwdriver
- 3. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture.
- 4. For your safety, it is recommended that two people hang the fixture.
- Check with a professional to ensure your wall can tolerate a fixture weighing 80 lbs (36 kg).
- 6. When wall mounting, stud mounting is strongly recommended.










(E)

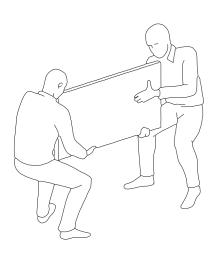




\*\*NOTE: Before hanging the mirror on the wall remove the support bars.

# REMOVE THE WOOD SUPPORT

#### FIGURE 1

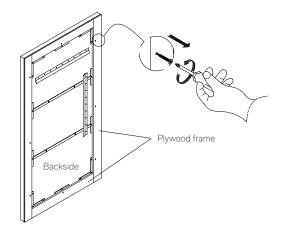

# WALL MOUNTING

- 1. Unpack all parts and place them on a protected work surface.
- 2. Determine the exact location of the fixture and mark the holes on the wall surface using the holes in the aluminum hanger (D) as a guide.
- 3. Drill small holes on each point location on the wall. Each hole should be just large enough to accommodate EZ mini anchor (C).
- 4. Insert the EZ mini anchors (C) into the holes on the wall.
- 5. Mount the aluminum hanger (D) into the wall using screws (B).
- 6. Check that the aluminum hanger fixture is securely screwed into the wall.
- 7. Attached buffer (E) at 4 corners of the back mirror (A).
- 8. Place the mirror with hanger cleat (A) into the aluminum hanger fixture.
- 9. Installation is complete.

# WALL MOUNTING

FIGURE 2

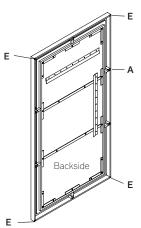


FIGURE 3


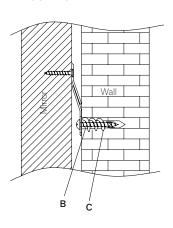


FIGURE 4

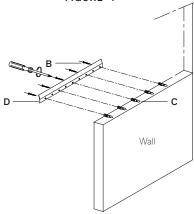

\*\*NOTE: MAKE SURE THAT THE TWO (2) CLEATS (1 ON MIRROR AND 1 ON WALL) ARE LOCKED AND SECURED WITH EACH OTHER. A LEVEL CHECK IS HIGHLY RECOMMENDED. CHECK AND ADJUST IF NEEDED.

# **CLEANING INSTRUCTIONS**

To clean, use a soft dry or damp cloth.

Do not use abrasive cleaners.

FIGURE 5


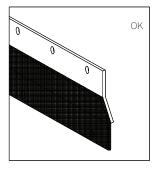


FIGURE 6



REVISION 24-05-22 RH.COM

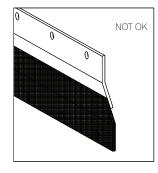

# NICCOLO FLOATING MIRROR 30" (76 CM) X 40" (102 CM)



# NICCOLO FLOATING MIRROR 30" (76 CM) X 40" (102 CM)

# PART LIST

- (A) Mirror With Bracket (1)
- (B) Steel screw (6)
- (C) EZ mini anchor (6)
- (D) Aluminum hanger (1)
- (E) Buffer (4)

# WARNING

- 1. In order to prevent falling down this product must be used with the wall attachment device provided.
- 2. Assess the suitability of the wall to ensure that the fastening devices will withstand the forces generated.

# STORAGE

- 1. Do not stack anything on top of the mirror.
- 2. Keep the mirror packaged until installation.
- 3. Store mirror upright on the long edge.


# MIRROR HANDLING INSTRUCTIONS


Caution:

- 1. Remove vertically from package.
- Always carry mirror vertically as illustrated. Carrying flat will cause breakage.


# **BEFORE YOU BEGIN**

- 1. Professional installation recommended.
- Tool and materials required:
  Carpenter's level
  Phillips head screwdriver
- 3. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture.
- 4. For your safety, it is recommended that two people hang the fixture.
- Check with a professional to ensure your wall can tolerate a fixture weighing 50 lbs (22 kg).
- 6. When wall mounting, stud mounting is strongly recommended.










(E)

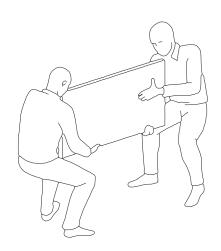




\*\*NOTE: Before hanging the mirror on the wall remove the support bars.

# REMOVE THE WOOD SUPPORT

#### FIGURE 1

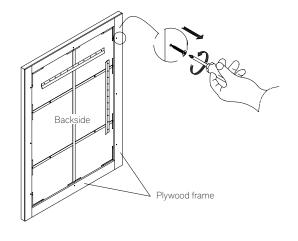


# WALL MOUNTING


- 1. Unpack all parts and place them on a protected work surface.
- 2. Determine the exact location of the fixture and mark the holes on the wall surface using the holes in the aluminum hanger (D) as a guide.
- 3. Drill small holes on each point location on the wall. Each hole should be just large enough to accommodate EZ mini anchor (C).
- 4. Insert the EZ mini anchors (C) into the holes on the wall.
- 5. Mount the aluminum hanger (D) into the wall using screws (B).
- 6. Check that the aluminum hanger fixture is securely screwed into the wall.
- 7. Attached buffer (E) at 4 corners of the back mirror (A).
- 8. Place the mirror with hanger cleat (A) into the aluminum hanger fixture.
- 9. Installation is complete.


# WALL MOUNTING

FIGURE 2

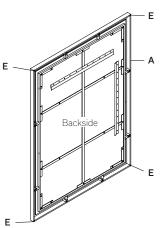



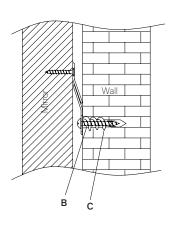

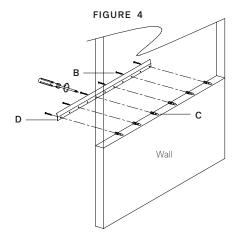

\*\*NOTE: MAKE SURE THAT THE TWO (2) CLEATS (1 ON MIRROR AND 1 ON WALL) ARE LOCKED AND SECURED WITH EACH OTHER. A LEVEL CHECK IS HIGHLY RECOMMENDED. CHECK AND ADJUST IF NEEDED.

# **CLEANING INSTRUCTIONS**

To clean, use a soft dry or damp cloth.

Do not use abrasive cleaners.

FIGURE 5

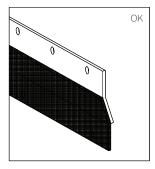


FIGURE 6



REVISION24-05-22 RH.COM



# NICCOLO FLOATING MIRROR 36" (92 CM) X 48" (122 CM)



# NICCOLO FLOATING MIRROR 36" (92 CM) X 48" (122 CM)

# PART LIST

- (A) Mirror With Bracket (1)
- (B) Steel screw (6)
- (C) EZ mini anchor (6)
- (D) Aluminum hanger (1)
- (E) Buffer (4)

# WARNING

- 1. In order to prevent falling down this product must be used with the wall attachment device provided.
- 2. Assess the suitability of the wall to ensure that the fastening devices will withstand the forces generated.

# STORAGE

- 1. Do not stack anything on top of the mirror.
- 2. Keep the mirror packaged until installation.
- 3. Store mirror upright on the long edge.


# MIRROR HANDLING INSTRUCTIONS


Caution:

- 1. Remove vertically from package.
- Always carry mirror vertically as illustrated. Carrying flat will cause breakage.


# **BEFORE YOU BEGIN**

- 1. Professional installation recommended.
- Tool and materials required:
  Carpenter's level
  Phillips head screwdriver
- 3. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture.
- 4. For your safety, it is recommended that two people hang the fixture.
- Check with a professional to ensure your wall can tolerate a fixture weighing 70 lbs (31 kg).
- 6. When wall mounting, stud mounting is strongly recommended.










(E)

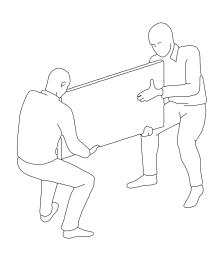




\*\*NOTE: Before hanging the mirror on the wall remove the support

# REMOVE THE WOOD SUPPORT

#### FIGURE 1

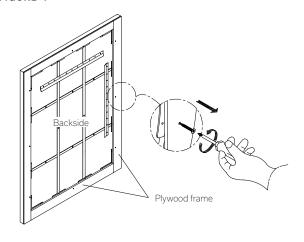

# WALL MOUNTING

- 1. Unpack all parts and place them on a protected work surface.
- 2. Determine the exact location of the fixture and mark the holes on the wall surface using the holes in the aluminum hanger (D) as a guide.
- 3. Drill small holes on each point location on the wall. Each hole should be just large enough to accommodate EZ mini anchor (C).
- 4. Insert the EZ mini anchors (C) into the holes on the wall.
- 5. Mount the aluminum hanger (D) into the wall using screws (B).
- 6. Check that the aluminum hanger fixture is securely screwed into the
- 7. Attached buffer (E) at 4 corners of the back mirror (A).
- 8. Place the mirror with hanger cleat (A) into the aluminum hanger
- 9. Installation is complete.

# WALL MOUNTING

FIGURE 2

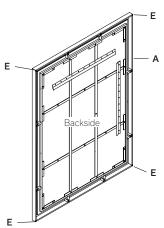


FIGURE 3


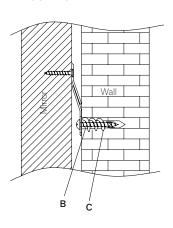


FIGURE 4

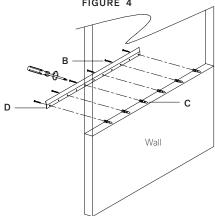

\*\*NOTE: MAKE SURE THAT THE TWO (2) CLEATS (1 ON MIRROR AND 1 ON WALL) ARE LOCKED AND SECURED WITH EACH OTHER. A LEVEL CHECK IS HIGHLY RECOMMENDED. CHECK AND ADJUST IF NEEDED.

# **CLEANING INSTRUCTIONS**

To clean, use a soft dry or damp cloth.

Do not use abrasive cleaners.

FIGURE 5

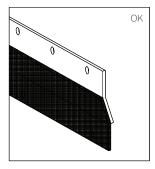


FIGURE 6



REVISION 24-05-22 RH.COM



# NICCOLO FLOATING MIRROR 60" (153 CM) X 60" (153 CM)



# NICCOLO FLOATING MIRROR 60" (153 CM) X 60" (153 CM)

# PART LIST

- (A) Mirror With Bracket (1)
- (B) Steel screw (6)
- (C) EZ mini anchor (6)
- (D) Aluminum hanger (1)
- (E) Buffer (4)

# WARNING

- 1. In order to prevent falling down this product must be used with the wall attachment device provided.
- 2. Assess the suitability of the wall to ensure that the fastening devices will withstand the forces generated.

# STORAGE

- 1. Do not stack anything on top of the mirror.
- 2. Keep the mirror packaged until installation.
- 3. Store mirror upright on the long edge.


# MIRROR HANDLING INSTRUCTIONS

Caution:


- 1. Remove vertically from package.
- Always carry mirror vertically as illustrated. Carrying flat will cause breakage.

# **BEFORE YOU BEGIN**

- 1. Professional installation recommended.
- Tool and materials required:
  Carpenter's level
  Phillips head screwdriver
- These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture.
- 4. For your safety, it is recommended that two people hang the fixture.
- Check with a professional to ensure your wall can tolerate a fixture weighing 145 lbs (65 kg).
- 6. When wall mounting, stud mounting is strongly recommended.

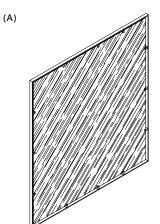

- (B) { \( \tag{11111111}\)
- (C)
- (E)

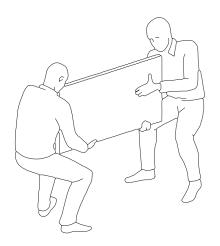




\*\*NOTE: Before hanging the mirror on the wall remove the support

# REMOVE THE WOOD SUPPORT

#### FIGURE 1

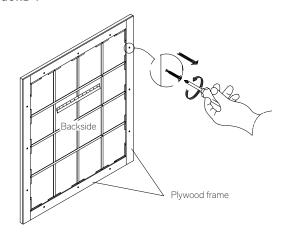


# WALL MOUNTING

- 1. Unpack all parts and place them on a protected work surface.
- 2. Determine the exact location of the fixture and mark the holes on the wall surface using the holes in the aluminum hanger (D) as a guide.
- 3. Drill small holes on each point location on the wall. Each hole should be just large enough to accommodate EZ mini anchor (C).
- 4. Insert the EZ mini anchors (C) into the holes on the wall.
- 5. Mount the aluminum hanger (D) into the wall using screws (B).
- 6. Check that the aluminum hanger fixture is securely screwed into the
- 7. Attached buffer (E) at 4 corners of the back mirror (A).
- 8. Place the mirror with hanger cleat (A) into the aluminum hanger
- 9. Installation is complete.

# WALL MOUNTING

FIGURE 2

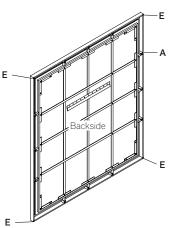




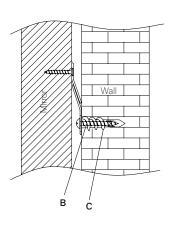


FIGURE 4

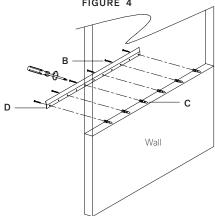

\*\*NOTE: MAKE SURE THAT THE TWO (2) CLEATS (1 ON MIRROR AND 1 ON WALL) ARE LOCKED AND SECURED WITH EACH OTHER. A LEVEL CHECK IS HIGHLY RECOMMENDED. CHECK AND ADJUST IF NEEDED.

# **CLEANING INSTRUCTIONS**

To clean, use a soft dry or damp cloth.

Do not use abrasive cleaners.

FIGURE 5


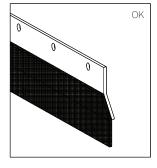


FIGURE 6

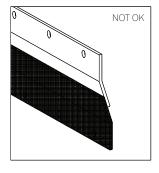

REVISION 24-05-22 RH.COM