

# PALAZZO ANTIQUED - GLASS MIRROR


ASSEMBLY AND INSTALLATION INSTRUCTIONS **ENGLISH** 




# PALAZZO ANTIQUED-GLASS MIRROR

# PART LIST

- (A) Mirror With Bracket (1)
- (B) Screw M4 x 30 mm (5)
- (C) EZ Mini Anchor (5)
- (D) Aluminum Hanger (1)









(D)



## WARNING

- IN ORDER TO PREVENT FALLING DOWN THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED.
- ASSESS THE SUITABILITY OF THE WALL TO ENSURE THAT THE FASTENING DEVICES WILL WITHSTAND THE FORCES GENERATED.

#### STORAGE

- 1. Do not stack anything on top of the mirror.
- 2. Keep the mirror packaged until installation.
- 3. Store mirror upright on the long edge.


#### MIRROR HANDLING INSTRUCTIONS

## CAUTION

- 1. Remove vertically from package.
- 2. Always carry mirror vertically as illustrated. Carrying flat will cause breakage.

# BEFORE YOU BEGIN


- 1. Professional installation recommended.
- Tool and materials required: Carpenter's level Phillips head screwdriver
- 3. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the
- 4. For your safety, it is recommended that two people hang the fixture.
- 5. Check with a professional to ensure your wall can tolerate a fixture weighing 35 lbs (16 kg).
- 6. When wall mounting, stud mounting is strongly recommended.

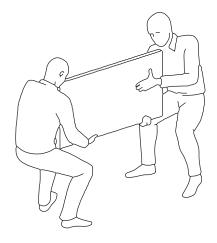



#### **INSTALLATION OF MIRROR**

- 1. Unpack all parts and place them on a protected work surface.
- 2. Determine the exact location of the fixture and mark the holes on the wall surface using the holes in the aluminum hanger (D) as a guide.
- 3. Drill small holes on each point location on the wall. Each hole should be just large enough to accommodate EZ mini anchor (C).
- 4 Insert the EZ mini anchors (C) into the holes on the wall.
- 5. Mount the aluminum hanger (D) into the wall using screws (B).
- 6. Check that the aluminum hanger fixture is securely screwed into the wall.
- 7. Place the mirror with hanger cleat (A) into the aluminum hanger fixture.
- 8. Installation is complete.

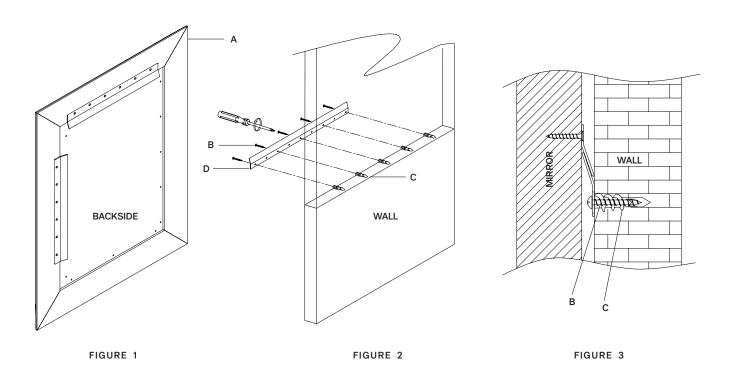

<sup>\*\*</sup>NOTE: MAKE SURE THAT THE TWO (2) CLEATS (1 ON MIRROR AND 1 ON WALL) ARE LOCKED AND SECURED WITH EACH OTHER. A LEVEL CHECK IS HIGHLY RECOMMENDED. CHECK AND ADJUST IF NEEDED.




FIGURE 4



## **CLEANING INSTRUCTIONS**

To clean, use a soft dry or damp cloth. Do not use abrasive cleaners.

**REVISION 10-06-22** RH.COM