



RECLAIMED RAILROAD TIES MIRROR

ASSEMBLY & INSTALLATION INSTRUCTIONS

ENGLISH

RECLAIMED RAILROAD TIES MIRROR**PARTS INCLUDED**

- (A) RAILROAD MIRROR (1)
 (B) HANGMAN (FOR WALL) (1)
 (1) Toggle Anchors (2)
 (2) Toggle Screws (2)
 (3) Stud Mounting Screws (12)
 (4) Toggle EZ Mini Anchor (2)
 (5) Toggle EZ Screw (2)
 (6) Bubble Level (1)

TOOLS

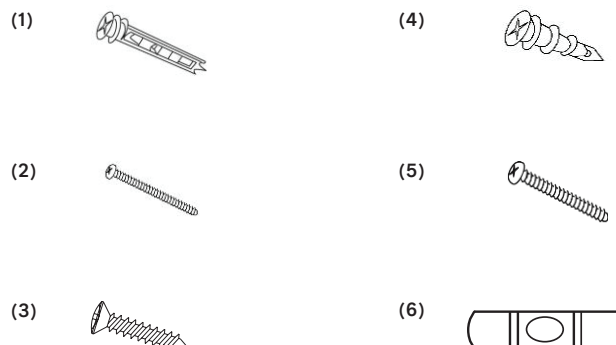
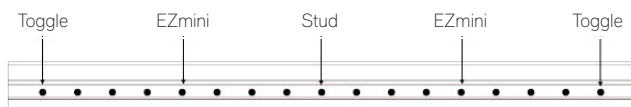
Electronic stud finder
 #2 Phillips screwdriver
 Drill with #2 Phillips bit
 Pencil

IMPORTANT PLEASE READ**PROFESSIONAL INSTALLATION RECOMMEND****SAFETY INSTRUCTIONS**

This hanging system is meant for drywall stud mounting only. If walls are concrete, brick or plaster, please consult your local hardware store for assistance. For safety and ease of mounting, two people are recommended for installation.

MOUNTING INSTRUCTIONS

1. Determine the desired placement on the wall for the wall panel (frame can be hang horizontally as well as vertically). Within the desired mounting location, locate the wall studs using the electronic stud finder and mark stud locations using the pencil. (Note: It is best to mount the bracket to at least one stud, using the illustrative graph shown above for reference.)
2. Determine which wall-mount bracket hole or holes on the wall will be centered on the stud. The hole positions that are centered over studs will use the Stud Mounting Screws for mounting the bracket.
3. Insert the included Bubble Level into the Bubble Level track, as close to the center of the wall-mount bracket as possible.
4. Place the wall-mount bracket at the desired location on the wall and confirm that the bracket is level.
5. Using the pencil, mark the mounting screw hole locations on the wall.
6. Remove the wall-mount bracket and set aside.

**STUD MOUNTING**

1. Install the wall-mount bracket onto the wall using the Stud Mounting Screw at one of the stud locations first, using the #2 Phillips screwdriver or the drill with a #2 Phillips bit.
2. Insert the first Stud Mounting Screw through the hole in the wall-mount bracket and tighten clockwise. Leave the Stud Mounting Screw slightly loose so that the wall-mount bracket can still be rotated and the wall-mount bracket area on the wall is exposed for installing the drywall toggle anchor(s).

DRY WALL MOUNTING

1. Use the #2 Phillips screwdriver to install the toggle anchor(s).

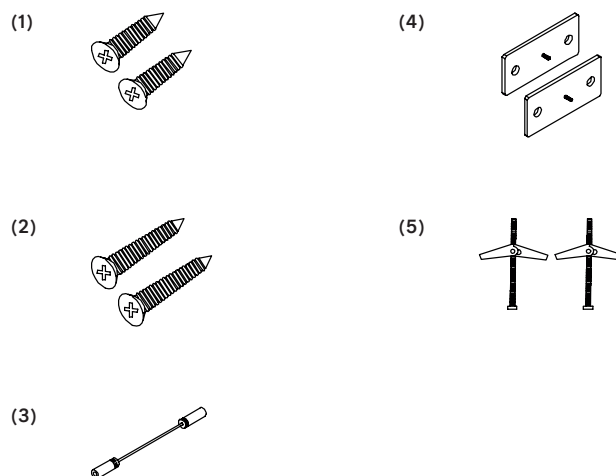
HANGING THE PRODUCT

1. On the back of the wall panel is an affixed product-mounting bracket.
2. Carefully position the product-mounting bracket over the wall-mount bracket, ensuring that the two brackets are aligned.
3. Press down firmly to engage the two brackets.
4. Your product is ready for use.

ANTI-TIP ASSEMBLY INSTRUCTIONS**PARTS INCLUDED**

A complete kit contains 1 sets of the following

- (1) Screw-0.75" (2 cm) (2)
- (2) Screw-1.5" (4 cm) (2)
- (3) Steel cable (1)
- (4) Steel Brackets (2)
- (5) Mini Anchors (2)

**WARNING**

Serious or fatal crushing injuries can occur from furniture tip-over.
To help prevent tip-over:

- Place heaviest item in the lowest drawers.
- Do not set TVs or other heavy objects on the top of this product.
- Never allow children to climb or hang drawers, doors, or shelves.
- Never open more than one drawer at a time.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

ASSEMBLY INSTRUCTIONS

Professional installation recommended.

1. Tighten the metal bracket on to the wall and furniture piece with the help of the screw given. For dry wall Fixing, mini anchors are to be used along with the screws.
2. Tighten the steel cable (3) on to the brackets (4) on the wall and on the product as shown below.
3. Tighten the cord grip as required and adjust the spacing with the wall accordingly.

