

THADDEUS ROUND MIRROR 42" (107CM)

ASSEMBLY AND INSTALLATION INSTRUCTIONS ENGLISH



THADDEUS ROUND MIRROR 42" (107CM)

PART LIST

1. Mirror

HARDWARE LIST

- (A) Hangman Wall Bracket 24" (61cm) (1)
- (B) Screw (18)

TOOL AND MATERIALS REQUIRED

- (1) Screwdriver
- (2) Pencil
- (3) 3/8 Drill Bit (for wall anchor)
- (4) Hand Drill
- (5) Carpenter Level







BEFORE YOU BEGIN

- Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.
- 2. Professional installation recommended.

STORAGE

- 1. Do not stack anything on top of the mirror.
- 2. Keep the mirror packaged until installation.
- 3. Store mirror upright on the long edge.


MIRROR HANDLING INSTRUCTIONS

CAUTION

- 1. Remove vertically from package
- 2. Always carry mirror vertically as illustrated. Carrying flat will cause breakage.

SAFETY INSTRUCTIONS

- 1. Professional installation is strongly recommended.
- 2. For your safety, it is recommended that two people hang the fixture.
- 3. These instructions are provided for your safety. They must be read carefully and completely before the installation of the fixture.
- 4. Check with a professional installer to ensure your wall can tolerate a fixture with two times the weight of the mirror.
 - NOTE: For safe mounting, it is important to use the proper hardware for your wall type. The included hardware is for stud mounting only. If the mounting bracket cannot be secured to a wall stud because of inappropriate spacing and/or because you have a different wall type (e.g., plaster, concrete, brick, etc.) please consult your local hardware store for fastener advice.

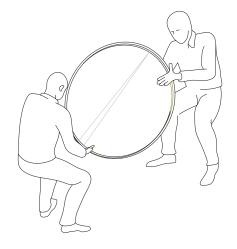




WARNING


- These mirror parts can be cumbersome to some people, therefore
 the assistance of two or more people is recommended to prevent
 personal injury and ensure the mirror is not damaged during the
 assembly process.
- Serious injury or death can occur if the mirror is not hung correctly.
 Do not use wire to hang. Please follow the correct hanging methods for the wall type. Consult a professional before hanging.

HERE ARE SOME GUIDELINES AS FOLLOW


- If the wall is CONCRETE/MASONRY, drill a hole on each mark and then insert a plastic wall anchor on each hole. Use a screwdriver to attach the bracket to the wall.
- 2. If the mirror wall bracket will be installed on DRYWALL ALONG WITH THE STUDS use a screw to fasten the wall bracket.
- 3. If the mirror wall bracket will be installed only on the DRYWALL, use hollow wall anchors to fasten the bracket.



CONCRETE/MASONRY

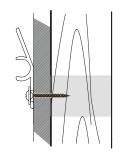





DRYWALL WITHOUT AVAILABLE WOOD STUD Plug with wall anchor

ASSEMBLY INSTRUCTIONS

- Pre-set the mirror on your desired location and mark the location with a light pencil mark. Use tape or pencil to transcribe the location of the wall into the mirror bracket.
- Hold the bracket against the wall and check the alignment of both ends of the bracket that has the same distance on the floor or ceiling surface.
- After checking the level, fasten the brackets against the wall with screws provided in your hardware packed. Please see FIGURE 01.
- 4. Install the mirror on the wall bracket as illustrated in FIGURE 02.

FIGURE 01


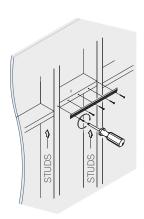


FIGURE 02



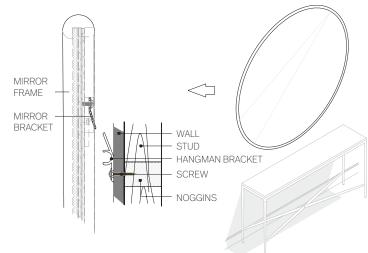

WARRANTY

If you are not completely satisfied with your purchase, please contact us to return or exchange your item(s) within 30 days of the delivery date, with proof of purchase. Note that returns or exchanges are not accepted for special orders, items that have been installed, mattresses and/or foundations no longer in their original packaging, and other items listed below. Other exclusions may apply. Contact us for details. Unfortunately, galleries cannot accept returns of furniture or other large items.

CLEANING INSTRUCTIONS

To maintain and protect the luster of all product clean with a soft damp cloth only.



THADDEUS ROUND MIRROR 60" (152CM)

ASSEMBLY AND INSTALLATION INSTRUCTIONS ENGLISH



THADDEUS ROUND MIRROR 60" (152CM)

PART LIST

1. Mirror

HARDWARE LIST

- (A) Hangman Wall Bracket 34" (86cm) (1)
- (B) Screw (18)

TOOL AND MATERIALS REQUIRED

- (1) Screwdriver
- (2) Pencil
- (3) 3/8 Drill Bit (for wall anchor)
- (4) Hand Drill
- (5) Carpenter Level







BEFORE YOU BEGIN

- Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.
- 2. Professional installation recommended.

STORAGE

- 1. Do not stack anything on top of the mirror.
- 2. Keep the mirror packaged until installation.
- 3. Store mirror upright on the long edge.


MIRROR HANDLING INSTRUCTIONS

CAUTION

- 1. Remove vertically from package
- 2. Always carry mirror vertically as illustrated. Carrying flat will cause breakage.

SAFETY INSTRUCTIONS

- 1. Professional installation is strongly recommended.
- 2. For your safety, it is recommended that two people hang the fixture.
- 3. These instructions are provided for your safety. They must be read carefully and completely before the installation of the fixture.
- 4. Check with a professional installer to ensure your wall can tolerate a fixture with two times the weight of the mirror.
 - NOTE: For safe mounting, it is important to use the proper hardware for your wall type. The included hardware is for stud mounting only. If the mounting bracket cannot be secured to a wall stud because of inappropriate spacing and/or because you have a different wall type (e.g., plaster, concrete, brick, etc.) please consult your local hardware store for fastener advice.

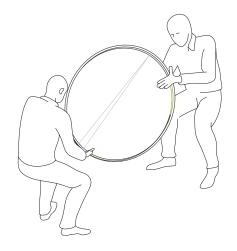




WARNING


- These mirror parts can be cumbersome to some people, therefore
 the assistance of two or more people is recommended to prevent
 personal injury and ensure the mirror is not damaged during the
 assembly process.
- Serious injury or death can occur if the mirror is not hung correctly.
 Do not use wire to hang. Please follow the correct hanging methods for the wall type. Consult a professional before hanging.

HERE ARE SOME GUIDELINES AS FOLLOW


- If the wall is CONCRETE/MASONRY, drill a hole on each mark and then insert a plastic wall anchor on each hole. Use a screwdriver to attach the bracket to the wall.
- 2. If the mirror wall bracket will be installed on DRYWALL ALONG WITH THE STUDS use a screw to fasten the wall bracket.
- 3. If the mirror wall bracket will be installed only on the DRYWALL, use hollow wall anchors to fasten the bracket.



CONCRETE/MASONRY

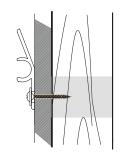





DRYWALL WITHOUT AVAILABLE WOOD STUD Plug with wall anchor

ASSEMBLY INSTRUCTIONS

- Pre-set the mirror on your desired location and mark the location with a light pencil mark. Use tape or pencil to transcribe the location of the wall into the mirror bracket.
- Hold the bracket against the wall and check the alignment of both ends of the bracket that has the same distance on the floor or ceiling surface.
- After checking the level, fasten the brackets against the wall with screws provided in your hardware packed. Please see FIGURE 01.
- 4. Install the mirror on the wall bracket as illustrated in FIGURE 02.

FIGURE 01


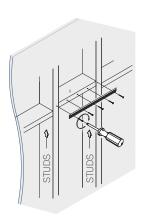


FIGURE 02



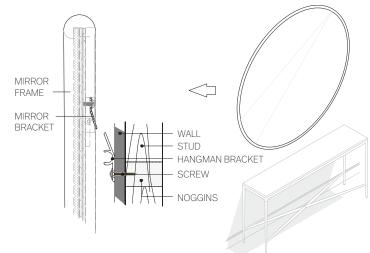

WARRANTY

If you are not completely satisfied with your purchase, please contact us to return or exchange your item(s) within 30 days of the delivery date, with proof of purchase. Note that returns or exchanges are not accepted for special orders, items that have been installed, mattresses and/or foundations no longer in their original packaging, and other items listed below. Other exclusions may apply. Contact us for details. Unfortunately, galleries cannot accept returns of furniture or other large items.

CLEANING INSTRUCTIONS

To maintain and protect the luster of all product clean with a soft damp cloth only.