

## ASTON KING AND CAL KING BED WITH FOOTBOARD INSTRUCTIONS

### CARE INSTRUCTIONS


1. Dust often using a clean, soft, dry and lint-free cloth.
2. Blot spills immediately and wipe with a clean, damp cloth.
3. We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.

### IMPORTANT SAFETY INSTRUCTIONS

1. Please read all instructions carefully before assembling.
2. For your safety, assembly by two or more adults is strongly recommended.
3. Keep these instructions for future use.
4. Use only vendor-supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

### PARTS INCLUDED

- A [1] HEADBOARD
- B [2] SIDE RAILS
- C [1] FOOTBOARD
- D [13] BED SLATS
- E [2] SUPPORT SLAT

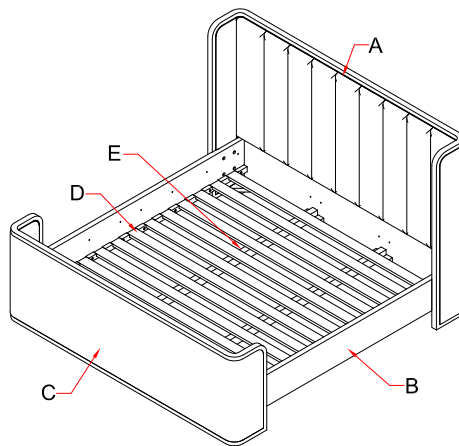


### HARDWARE INCLUDED

NO.	ITEM	DESCRIPTION	QTY.
1		Allen bolt	16 pcs.
2		Lock washer	16 pcs.
3		Flat washer	16 pcs.
4		Allen wrench	1 pc.

### ASSEMBLY INSTRUCTIONS


1. Place the headboard (A) and footboard (C) upright in the location you wish the bed to be in when fully assembled.
2. Align and insert the side rails (B) to the headboard and the footboard. Attach the side rails to the headboard and footboard by using Allen bolts (1), lock washers (2) and flat washers (3). See FIGURE 1.

**FIGURE 1**

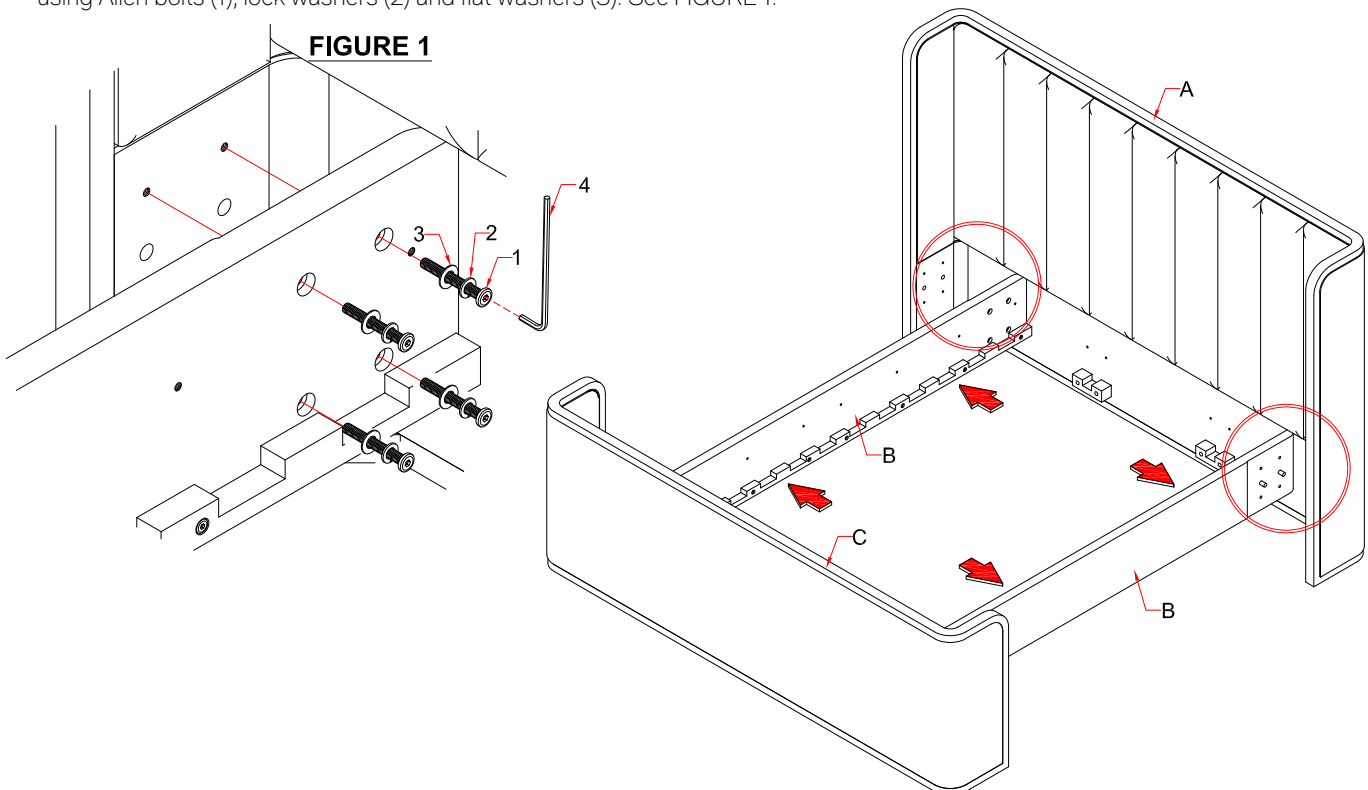


## ASTON KING AND CAL KING BED WITH FOOTBOARD INSTRUCTIONS



3. On the inside of both headboard and footboard are pre-installed wooden brackets for the support slat (E). Set the support slat on the wood bracket, as shown in FIGURE 2.
4. On the inside surface of both side rails are cavities designed to hold the individual bed slats (D). Set individual slats on both sides of the rails, as shown in FIGURE 3.

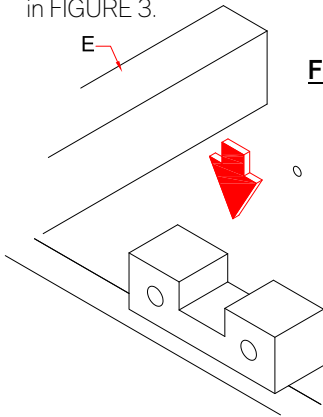

**FIGURE 2**

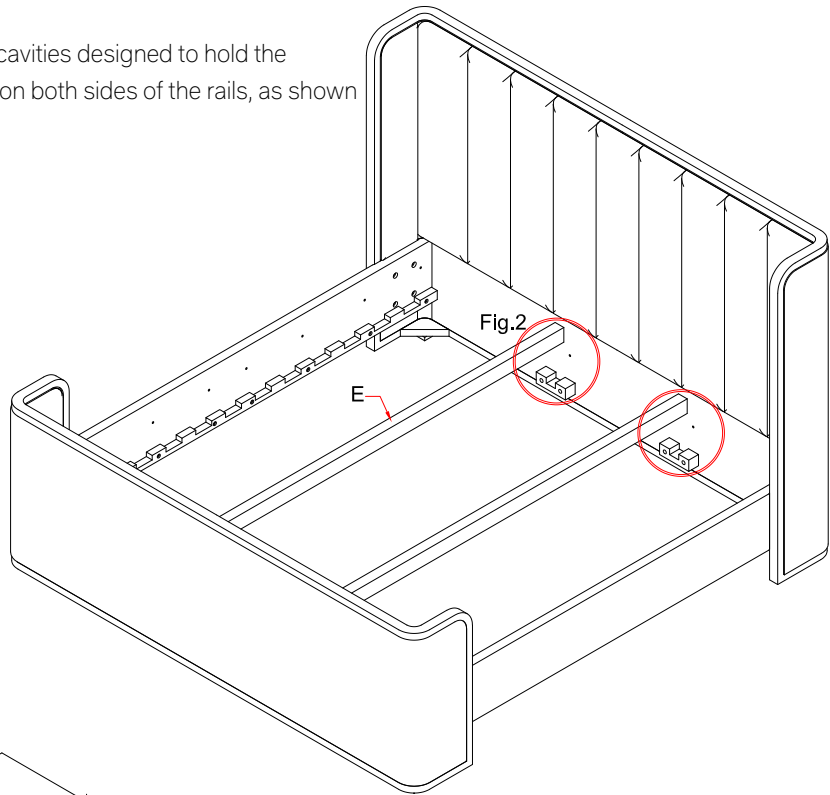

**FIGURE 3**

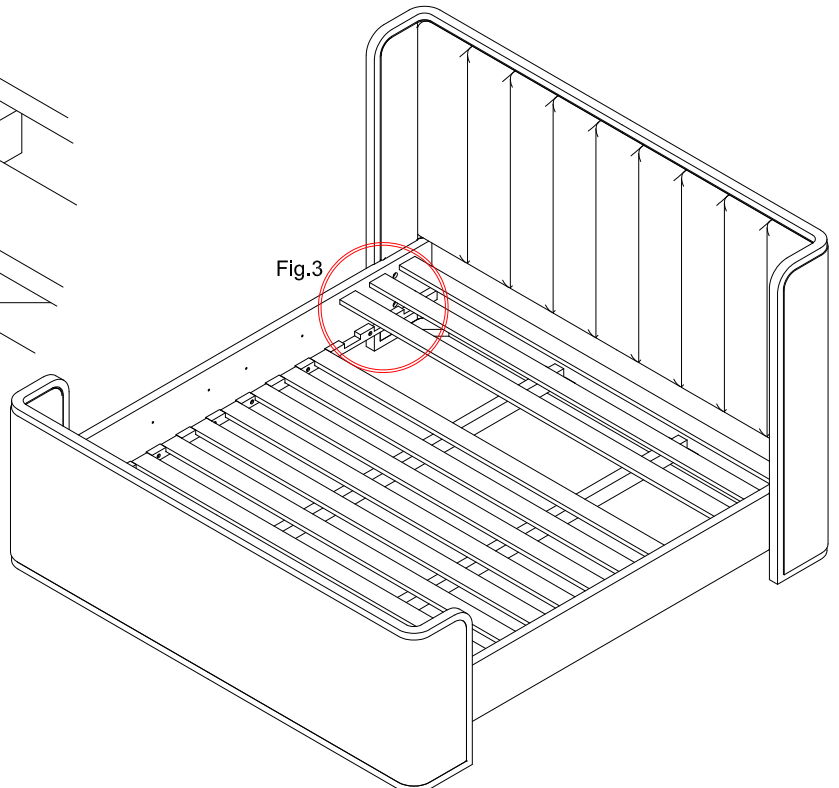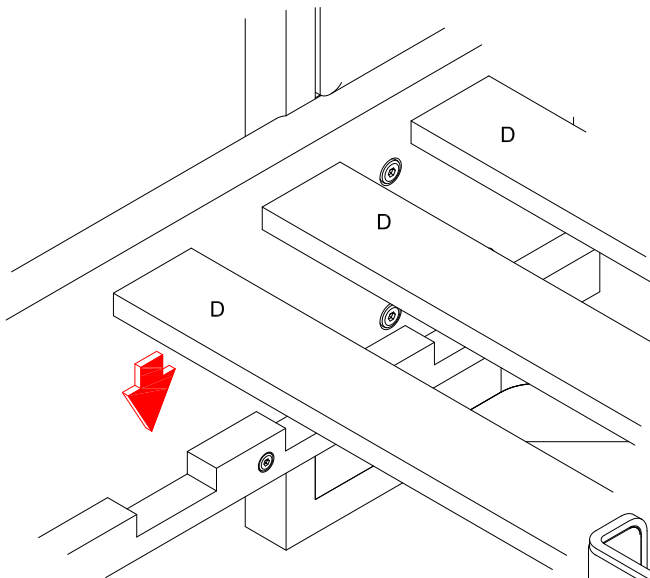


## ASTON KING AND CAL KING BED WITH FOOTBOARD INSTRUCTIONS

### SET UP THE HEIGHT OF THE MATTRESS

**NOTE:** Before starting this step, securely remove all slats and support slat from the assembled bed.

- For the default setting, the slat support rail will be attached to the lower setting on the side rail. If you want to attach the support rail to the higher setting, please unscrew all bolts and move the support rail to the top setting on side rails. Re-install the bolts and slat support rail to secure to the side rail. Refer to FIGURE 4A - 4B.
- Repeat the previous step for the wood brackets at front of headboard and back of footboard. Refer to FIGURE 5A - 5B.

**FIGURE 4A**

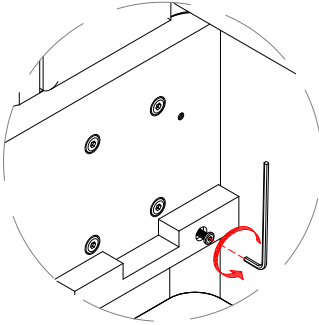

**FIGURE 4B**


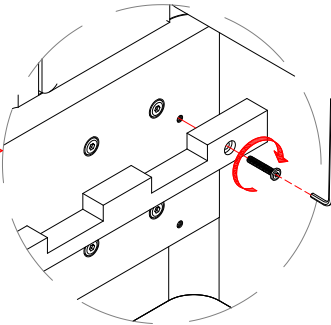


Fig. 4A

Fig. 5A

**FIGURE 5A**

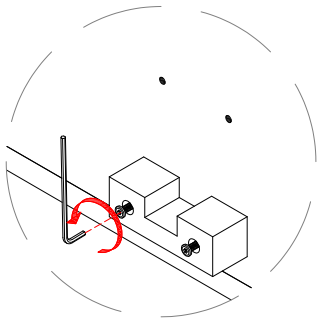

**FIGURE 5B**

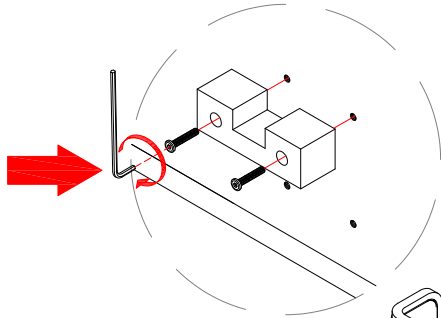


Fig. 4B

Fig. 5B