







BEZIER SHELTER BED INSTRUCTIONS

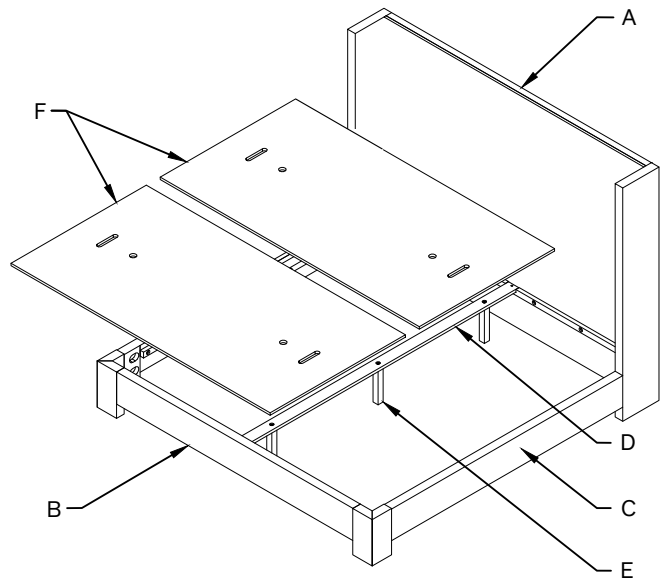
Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These bed parts can be cumbersome and heavy; the assistance of two or more people is recommended in order to prevent personal injury and ensure the bed parts are not damaged during the assembly process.

PARTS INCLUDED

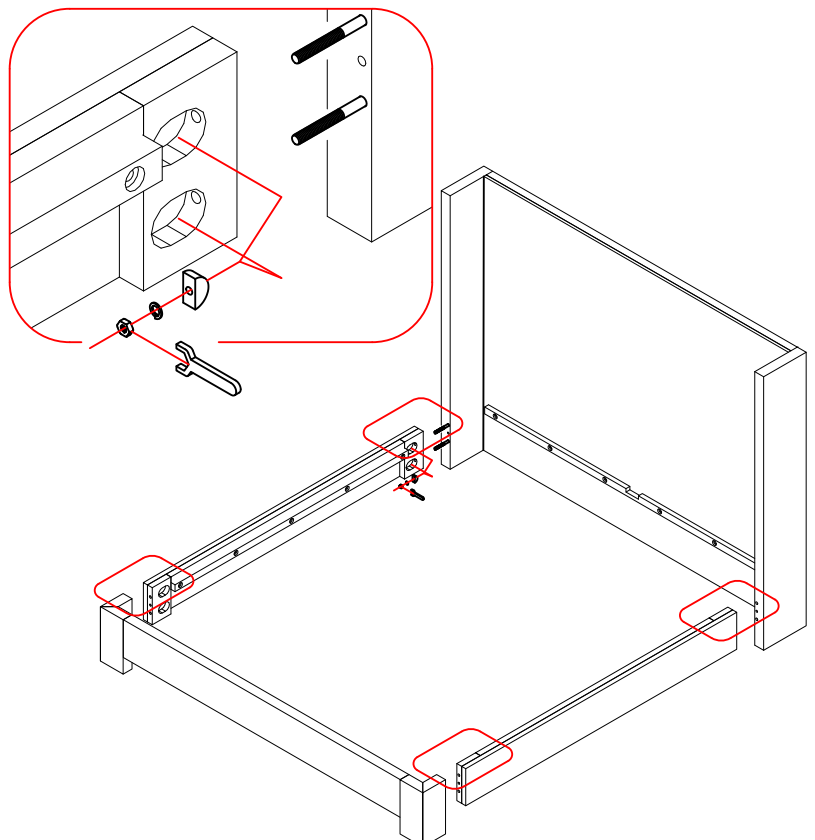
- A [1] HEADBOARD
 B [1] FOOTBOARD
 C [2] SIDE RAILS
 D [1] SUPPORT SLAT
 E [3] LEG
 F [2] FLAT FORM PANEL

NO.	ITEM	DESCRIPTION	QTY.
1		Threaded rod	8 pcs.
2		Hex nut	8 pcs.
3		Lock washer	8 pcs.
4		Curved slotted washer	8 pcs.
5		Wrench	1 pcs.
6		Screws	2 pcs.

**STEP 1:**

Place the headboard (A) upright in the location you wish the bed to be in when fully assembled. The headboard (A) fast hardware should be facing the inside, toward the mattress. Secure the threaded rods (1) to the fixed nuts in the headboard (A) by turning manually. Raise the side rail (C) up and align the threaded rods (1) with the bore holes on the end of the side rails (C). Put the side rails (C) up against the headboard (A) so the threaded rods (1) go through the bore holes. Insert the curved slotted washers (4), lock washers (3) and hex nuts (2) onto the threaded rods (1). Tighten with the Allen wrench (5) provided. Refer to FIGURE 01.

FIGURE 01

**STEP 2:**

Repeat the above procedure with the other side rail (C) to attach it to the headboard (A). Repeat to connect the side rails (C) to the footboard (B).

FIGURE 02

STEP 3:

On the inside face of both the headboard (A) and the footboard (B) are pre-installed cleats with cavities for the support slats (D). Install the legs (E) on the support slats (D), as shown in FIGURE 02-A. Secure the support slats (D) on the cavities of the headboard (A) and footboard (B) with the screws (6) provided, as illustrated in FIGURE 02-B.

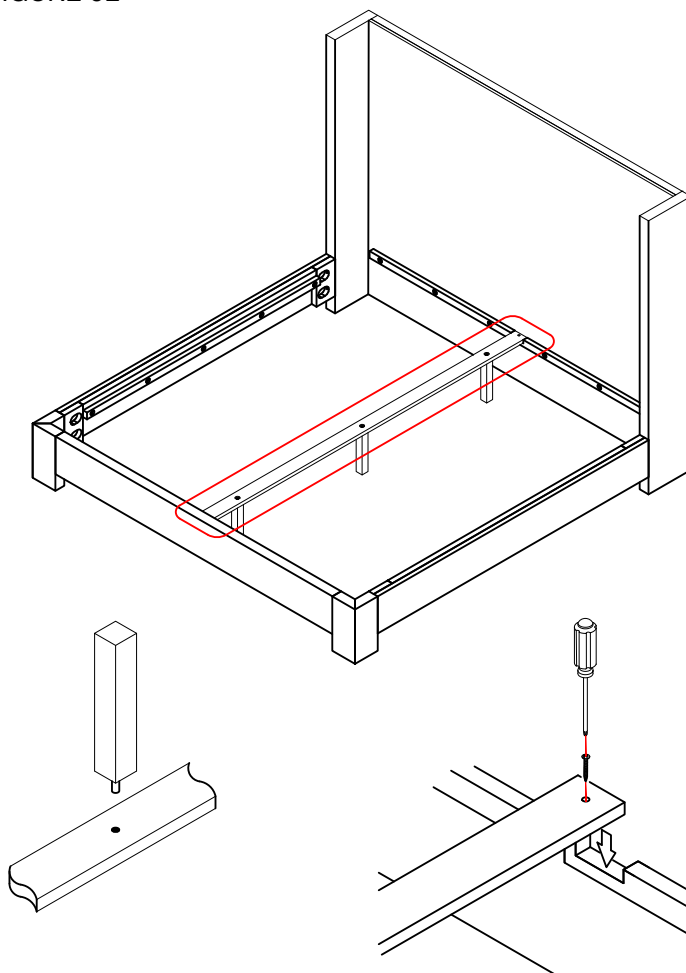


FIGURE 02-A

FIGURE 02-B

FIGURE 03

STEP 4:

Set the flat form panel (F) in the middle, as shown in FIGURE 03. Assembly is complete.

