


## KEMPTON UPHOLSTERED PLATFORM QUEEN BED INSTRUCTIONS


## PARTS INCLUDED

- A [1] HEADBOARD
- B [2] SIDE RAILS
- C [1] FOOTBOARD
- D [3] BED SLATS
- E [1] SUPPORT SLAT
- F [2] SUPPORT LEGS
- G [2] PLATFORM PANELS
- H [2] WOOD BRACKETS

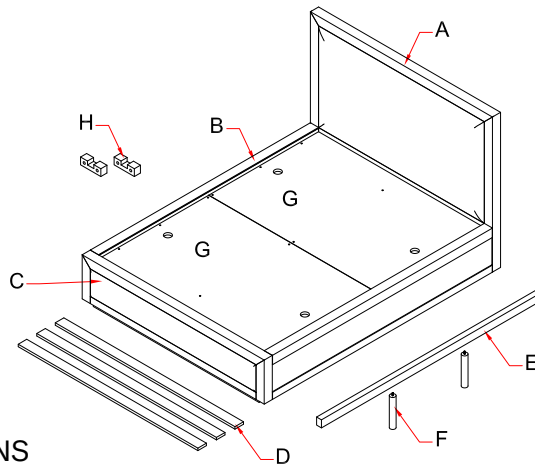


## ASSEMBLY INSTRUCTIONS

1. Gently lay the headboard(A) and footboard (C) on a flat and non-abrasive surface.
2. Attach the wood brackets (H) to the headboard and footboard. Align the wood brackets to the fixed nuts on the headboard and footboard. Insert Allen bolts(1) through the holes on the wood brackets into the fixed nuts on the headboard and footboard. DO NOT OVER TIGHTEN. Refer to FIGURE 1.

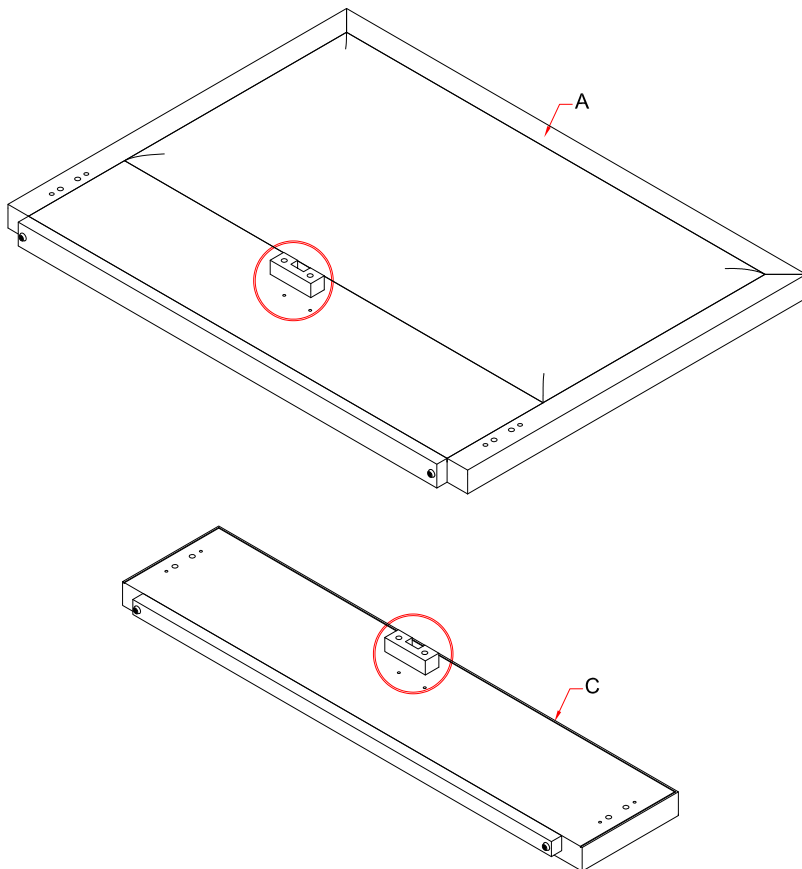

## TOOLS NEEDED

Phillips Screwdriver (Not provided)



## HARDWARE INCLUDED

NO.	ITEM	DESCRIPTION	QTY.
1		Allen Bolt M6 x 40mm	4 pcs.
2		Allen Wrench	1 pc.
3		Threaded Rod	8 pcs.
4		Curved Washer	8 pcs.
5		Lock Washer	8 pcs.
6		Hex Nut	8 pcs.
7		Wrench	1 pc.
8		Round Head Screw M4 x 25mm	16 pcs.


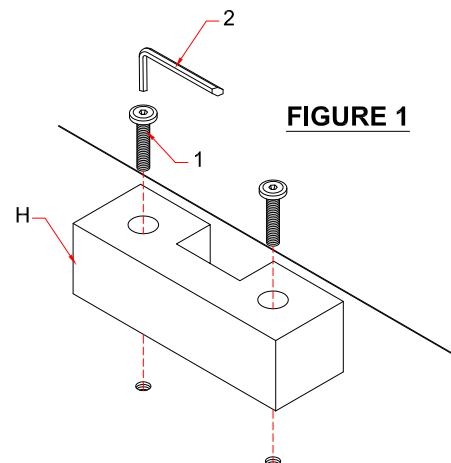


FIGURE 1

## KEMPTON UPHOLSTERED PLATFORM QUEEN BED INSTRUCTIONS


- Place the headboard upright in the location you wish the bed to be in when fully assembled. Secure the Threaded Rod (3) to the fixed nut in the headboard by simply turning it manually. Raise the Side Rail (B) up and place the rod to align with the bore holes on the end of the side rails. Put the side rail up against the headboard so the threaded rods go through the bore holes. Insert Curved Washer (4) and Lock Washer (5), place Hex Nuts (6) on threaded rod and tighten hex nuts with Wrench (7). See FIGURE 2
- Repeat the above procedure with the other side rail to attach it to the headboard. And then repeat to connect both side rails to the footboard.

**FIGURE 2**

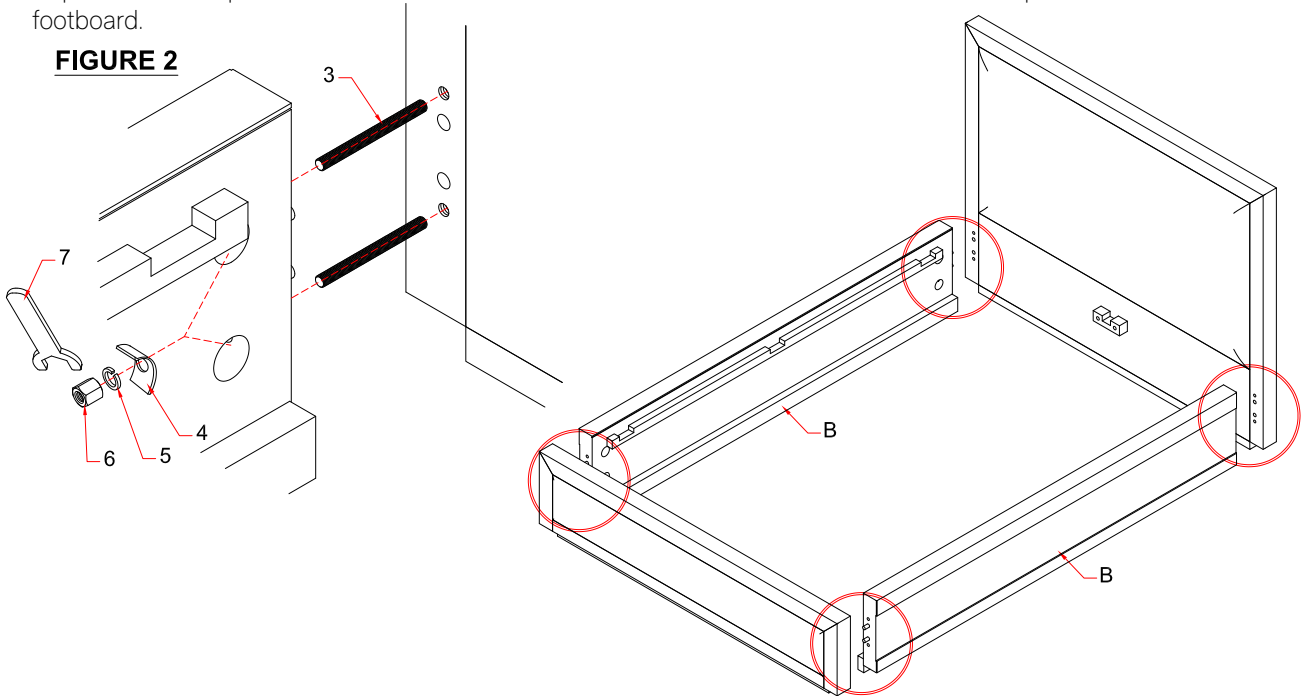


- Attach the Support Leg (F) to the Slat Support (E) by turning it manually. See FIGURE 3
- There are pre-installed wooden brackets on inside of both headboard and footboard for the slat support rail. Set the slat support on the wood brackets as shown in FIGURE 4. If necessary, adjust the leveler on bottom of the support leg to make sure the slat support is level. See FIGURE 5


**FIGURE 3**

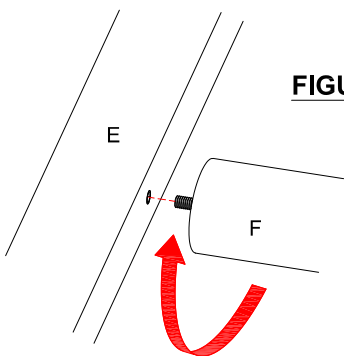

**FIGURE 4**

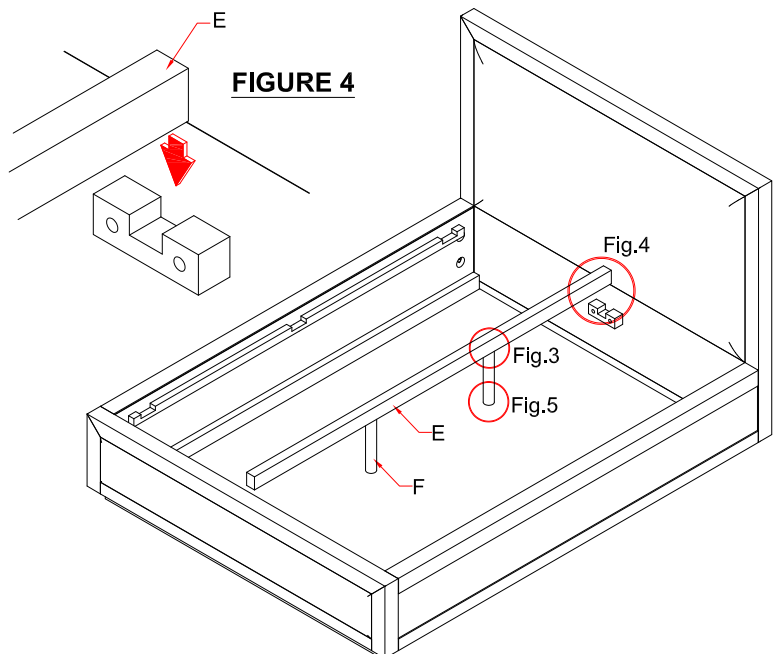


**FIGURE 5**

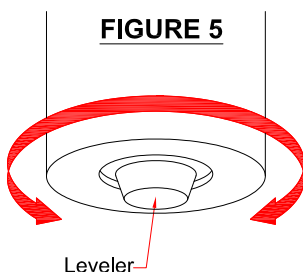

## KEMPTON UPHOLSTERED PLATFORM QUEEN BED INSTRUCTIONS

7. On inside surface of both side rails are cavities designed to hold the individual bed slats. Set individual bed slats on both sides of the side rails as shown in FIGURE 6
8. Place the Platform Panels (G) on the bed slats, then fix them with screws(8) provided. See FIGURE 7
9. Assembly is complete.

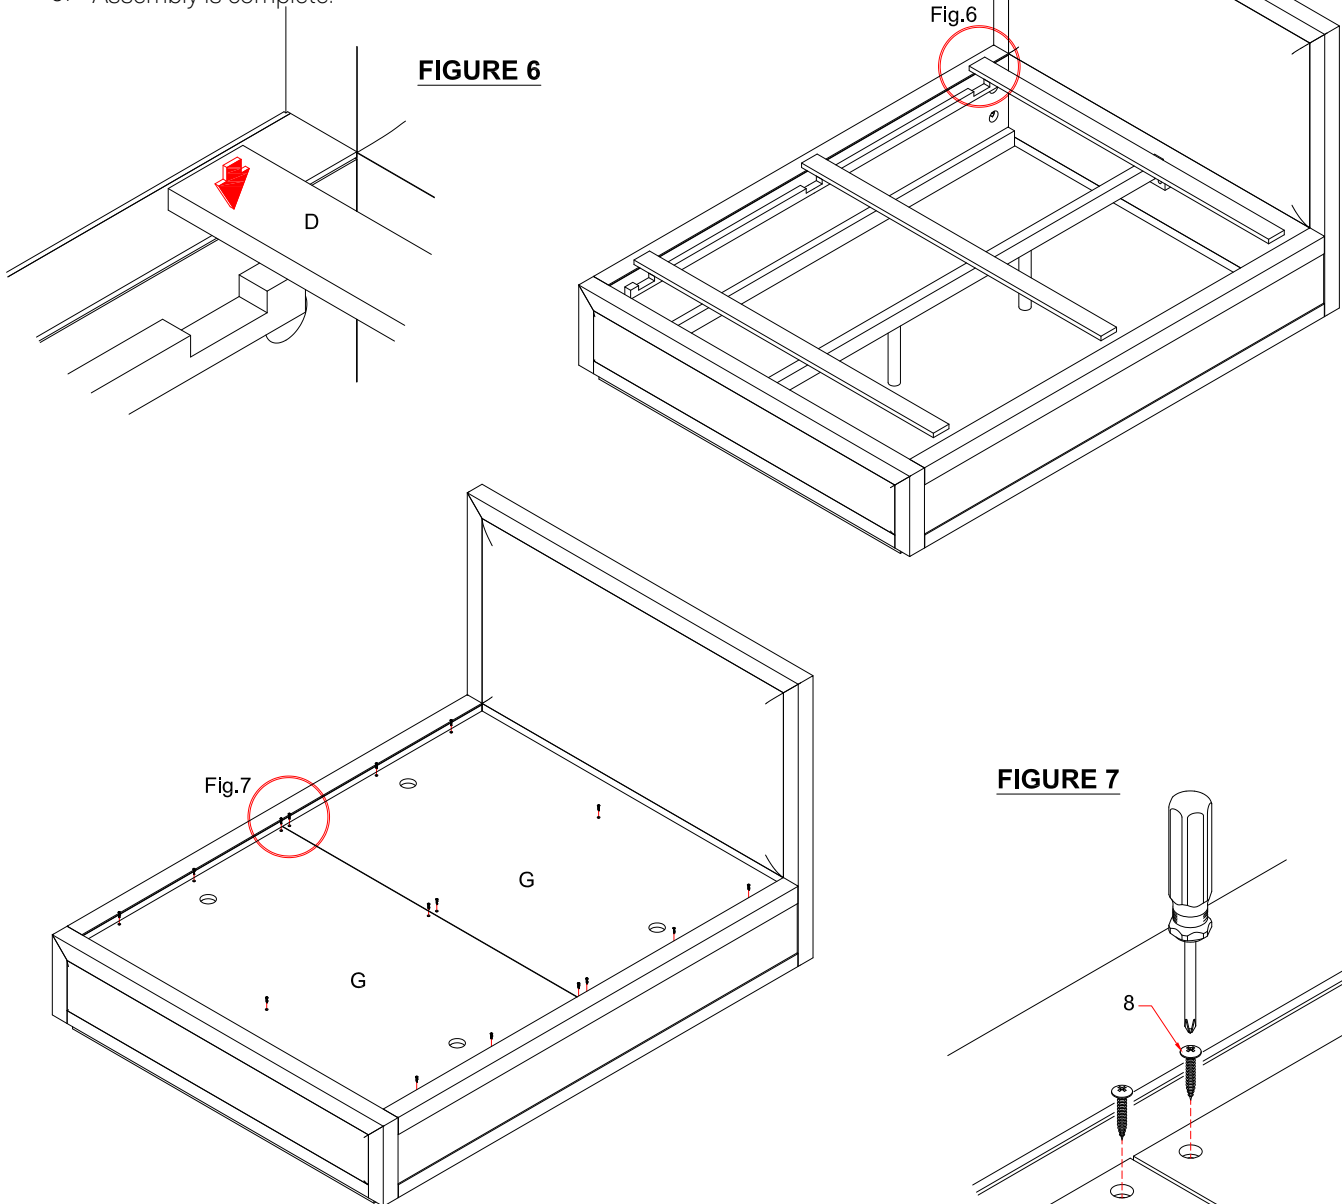

### CARE INSTRUCTIONS

1. Dust often using a clean, soft, dry and lint-free cloth.
2. Blot spills immediately and wipe with a clean, damp cloth.
3. We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

### IMPORTANT SAFETY INSTRUCTIONS

1. Please read all instructions carefully before assembling.
2. For your safety, assembly by two or more adults is strongly recommended.
3. Keep these instructions for future use.
4. Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item