





Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.


WARNING: These bed parts can be cumbersome and heavy; the assistance of two or more people is recommended in order to prevent personal injury and ensure the bed parts are not damaged during the assembly process.

PARTS INCLUDED

- A. [1] HEADBOARD
- B. [1] FOOTBOARD
- C. [2] STORAGE SIDE RAILS
- D. [2] PLATFORM PANEL

HARDWARE INCLUDED

NO.	ITEM	DESCRIPTION	QTY.
1		Allen head bolt	12 PCS
2		Lock washer	12 PCS
3		Plain washer	12 PCS
4		Allen wrench	2 PCS

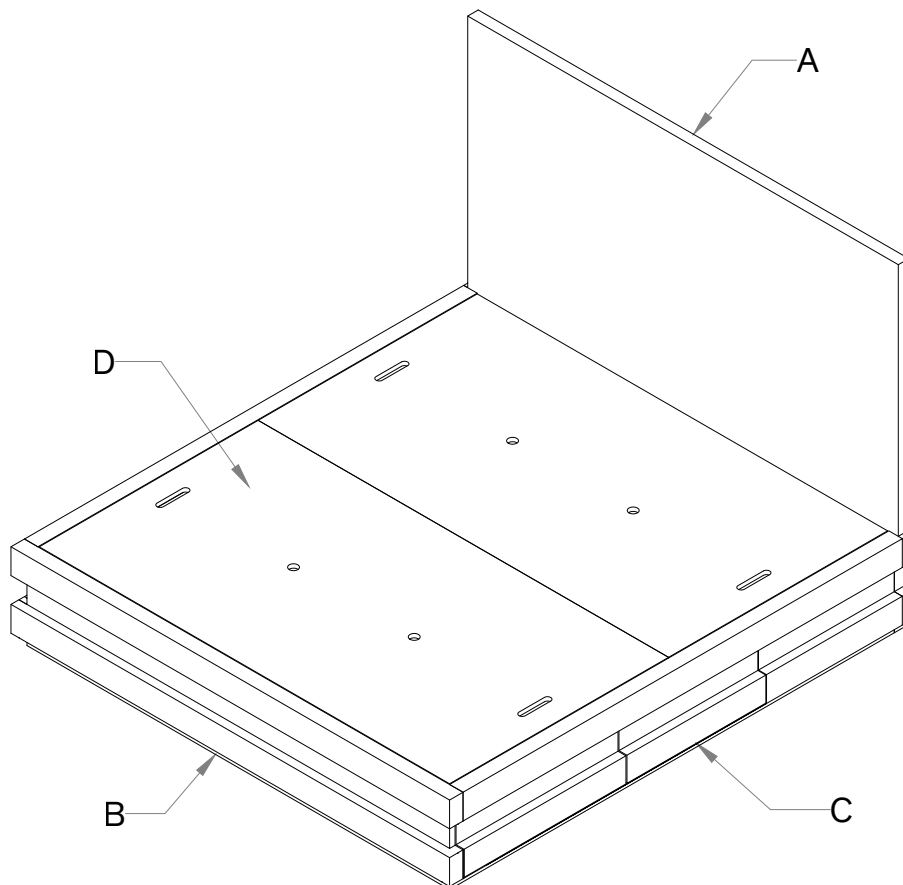

ASSEMBLY INSTRUCTIONS

STEP 1:

On both ends of the headboard (A) and footboard (B) are holes with insert nuts pre-installed and holes for the wooden dowel that correspond to the holes on both ends of the storage side rails (C). Place the headboard (A) upright in the location you wish the bed to be in when fully assembled. The headboard (A) hardware should be facing the inside, toward the mattress. Bring the storage side rails (C) against the headboard (A) and align the wooden dowels to the hole. Once the storage side rails (C) are set, engage Allen head bolts (1) together with lock washers (2) and plain washers (3) provided. Please see **FIGURE 01**.

STEP 2:

Repeat the above procedure with the other storage side rail (C) to attach it to the headboard (A) and then repeat to connect both storage side rails (C) to the footboard (B).

DRAWER REMOVAL

- To access the holes of the footboard (B) you will need to remove one drawer on the storage side rails (C). Slightly push the drawer to open and then press the catches of the runner or slides underneath the bottom panel while pulling the drawer until it is released.
- After fastening all the components, tighten all the bolts to a snug fit.

DRAWER INSTALLATION

- Fit the drawer horizontally on the runners and push into place. The catch automatically locks the drawer onto the runners for a secure fit.

STEP 3:

Place the platform panel (D) on top of assembled bed as shown in **FIGURE 02**.

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.

FIGURE 01


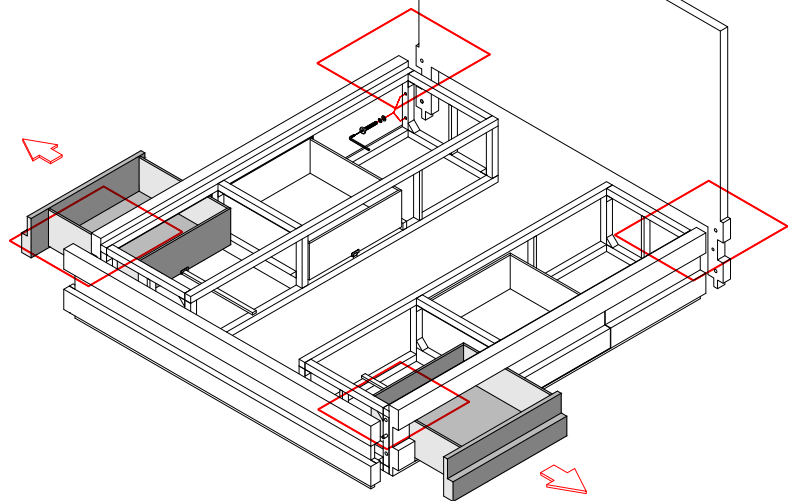


FIGURE 02

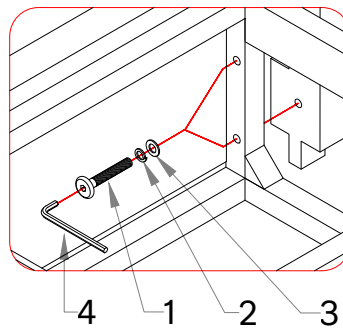