

## WYETH SPLIT BAMBOO TAPERED SHELTER BED INSTRUCTIONS

### PARTS INCLUDED

A [1] HEADBOARD

B [1] FOOTBOARD


C [2] SIDE RAIL

D [3] SLAT PANEL

E [2] SUPPORT SLAT

## **ASSEMBLY INSTRUCTIONS**

- 1. Unpack all parts, and place them on a protected work surface.
- 2. Insert the steel bolts (1) into threaded holes in headboard (A) and footboard (B). (Detail A)
- 3. Attach side rails (C) into headboard (A) with steel bolts through the holes at the end of side rails (C); secure using curved washer (2), spring washer (3), nut (4) and wrench (5). Do not over tighten.(Detail B)
- 4. Repeat step 3 to install side rails (C) into footboard (B).

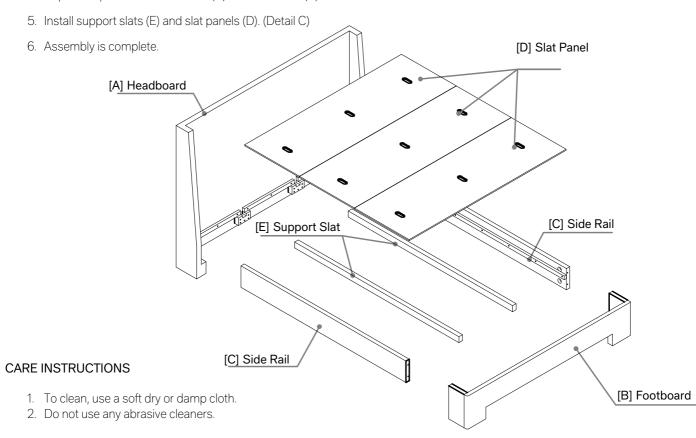


# IMPORTANT SAFETY INSTRUCTIONS


- 1. Professional installation is strongly recommended.
- 2. For your safety, it is recommended that two people assemble.
- 3. These instructions are provided for your safety. It is important that they are read carefully and completely before installation.

### HARDWARE INCLUDED


NO.	ITEM	DESCRIPTION	QTY.
1		Steel bolts M8 x 110	8 pcs.
2	6	Steel curved washer	8 pcs.
3	0	Spring washer	8 pcs.
4		Nut M8	8 pcs.
5		Wrench No. 12	1 pc.

10/1/18 Page 1 of 3

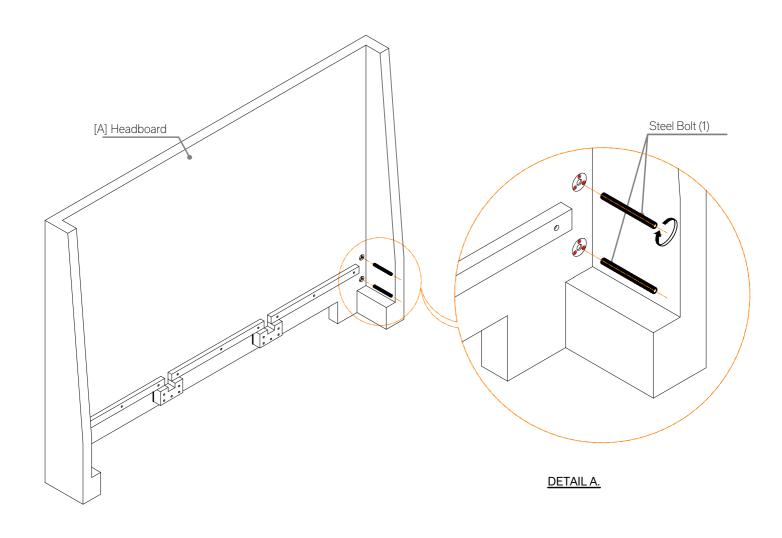

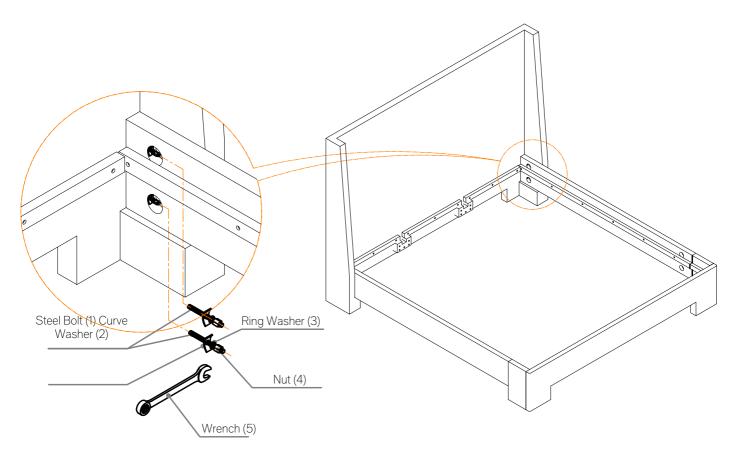

DETAIL B.

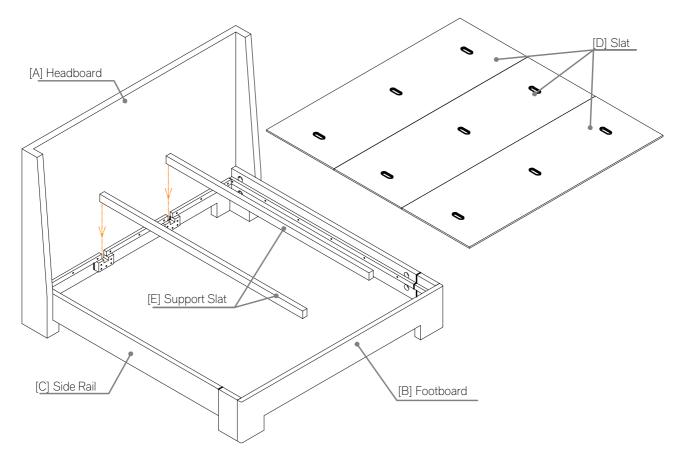

DETAIL C.

