

RESTORATION HARDWARE

Our lighting assortment is crafted from high quality materials such as cast brass and solid crystal. Each lamp is clad in one of our signature finish options and the surfaces sealed to eliminate the need for polishing. A full-range dimmer switch housed in a cast socket is included on most styles.

PARTS ENCLOSED:

- | | |
|---------------------|------------------|
| (A) MOUNTING PLATE | (K) HOUSING |
| (B) MOUNTING SCREWS | (L) SHADE SCREWS |
| (C) CANOPY | (M) GLASS SHADE |
| (D) CANOPY SCREWS | (N) GLASS SHADE |
| (E) CHAIN | (O) METAL FRAME |
| (F) TOP LOOP | |
| (G) BOTTOM LOOP | |
| (H) EXTENSION ARM | |
| (I) QUICK LINK | |
| (J) COLUMN | |

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

***DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**

WARNINGS:


Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

TO ASSEMBLE:

***TOOLS REQUIRED: CHAIN BREAK

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Remove canopy screws (D) from canopy (C). Remove mounting plate (A) from canopy (C).
4. Guide wires from "J BOX" through center hole in mounting plate (A). Affix mounting plate (A) to "J BOX" using mounting screws (B) provided.
5. Guide wiring from housing (K) through column (J) and out of the center hole at top loop (F).
6. Thread housing (K) onto threaded nipple of column (J).
7. Measure desired drop for fixture to hang and add/remove chain links (E) accordingly. Chain break required, not provided.
8. Attach quick link (P) to top loop (F). Close opening in quick link (P) to secure chain (E) to top loop (F). Guide wiring through chain links (E) and center hole in canopy (C).
9. Attach ground fixture wire (GREEN) to either the ground screw on mounting plate (A) or to the ground wire in the wall outlet box (usually GREEN or COPPER in color). If attaching to ground wire in outlet box, fasten together with a plastic wire connector and tightly wrap with electrical tape. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
10. Connect the neutral (WHITE or RIBBED BLACK) fixture wire to the neutral (usually WHITE) wire from the outlet box. Fasten wires together with a plastic wire connector and tightly wrap connector with electrical tape.
11. Connect the hot (BLACK or SMOOTH BLACK) fixture wire to the hot (BLACK) wire from the outlet box. Fasten wires together with a plastic wire connector and tightly wrap connector with electrical tape.
12. Align screw holes in canopy (C) with holes in mounting plate (A). Holding canopy over mounting plate (A), thread canopy screws (D) into canopy (C) and mounting plate (A) to secure fixture to "J BOX."
13. Place hook connections of extension arms (H) onto bottom loop (G). Repeat step for each tube.
14. Install three (3) B10 candelabra base, 60 watt maximum bulbs into sockets.
15. Carefully slide glass shade (M) over socket assembly and insert shade screws (L) into holes in glass shade (M). Thread screws (L) into holes in housing (K).
16. Carefully insert glass shade (N) into metal frame (O).
17. Lift metal frame (O) and glass shade (N) to bottom loops of extension arms (H). Attach loops of extension arms (H) to hooks on metal frame (O).

QUENTIN ENTRY PENDANT

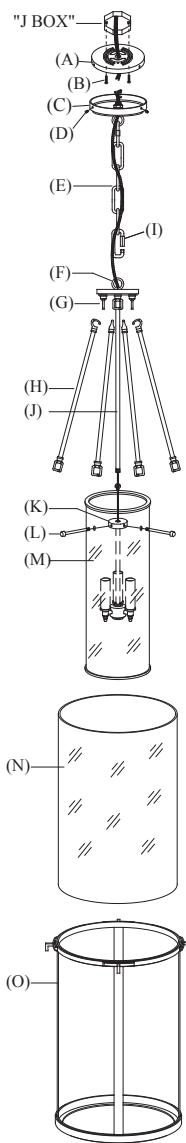

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.