
RESTORATION HARDWARE

19TH C. ROCOCO IRON & CRYSTAL ROUND CHANDELIER 60"

PARTS ENCLOSED

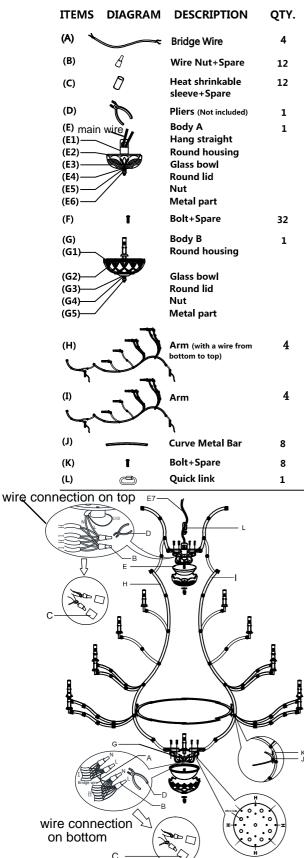

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation. Electrician must be familiar with commercial-type applications of very heavy chandeliers.

- 2. This fixture has been rated for 49 x 25-watt maximum E12 standard bulb.
- 3. To avoid the risk of fire, do not exceed the recommended wattage.
- 4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 260kg (573,19lb) is required.
- 5. The manufacturer and distributor accepts no liability for incorrect installation.
- 6. For indoor use only.
- 7. Keep away from children.
 - 8. Please make sure the fuse box have at least capacity of 1225W.
 9. Please add the steel wire to the chain for security.

Warnings:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.

2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.

3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.

4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Iron & Chinese Crystal Height: 190.0 cm (74.80in) Diameter: 150.0 cm (59.06in) Weight: 52.0 kg (114.64lb) Grounded / Hardwired

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.

2. Loosen metal part (G5) and detach nut (G4), round lid (G3), glass bowl (G2) and round housing (G1) from body (G). Loosen metal part (E6) and detach nut (E5), round lid (E4), glass bowl (E3) and round housing (E2) from body (E).


3. Insert the branch wire of arm(H) and arm(I) to body (G) and body(E) through the wire holes on the metal plate. Please note the rank of the two arms is arm(H)-arm(I)-arm (H)-arm(I).

- 4. Fix arm(H) and arm(I) to body (E) and body (G) with bolts (F)
- 5.1.Connect the live (L) and neutral (N) of branch wire to mian wire one main wire is to connect wires of 2 arms (H) and wires of 2 arms (I). Then clip the wire nut (B) and wrap the heat shrinkable tube.
 "wire connection on top" shows the details as left.
- 5.2 Bottom wire connection as left, one wire of Arm (I) connect to one wire of Arm (H) with bridge wire (A),Then clip the wire nut (B) and wrap the heat shrinkable tube. "wire connection on bottom" shows the details as left.
- 6. Fasten curve metal bar(J) to arm(H) or arm(I) with bolt(K).
- 7. Re-attach the round housing (E2), glass bowl (E3) and round lid (E4), nut (E5) to body(E) and fasten metal part(E6) to body(E).
- 8. Re-attach the round housing (G1), glass bowl (G2) and round lid (G3), nut (G4) to body(G) and fasten metal part(G5) to body(G).
- 9. Attach quick link (L) to the hang straight (E1) on body (E).,

To be continued.

RESTORATION HARDWARE

19th ROCOCO IRON & CRYSTAL 60IN CHANDELIER - B

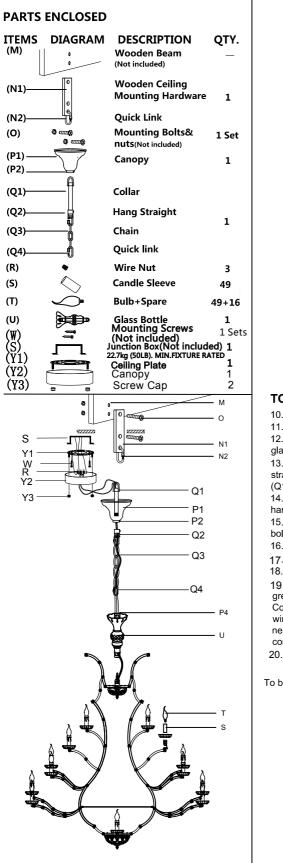

TO ASSEMBLE:

10. Turn OFF power to the junction box where the ceiling light will be installed.

11. Put main wire(H) go through glass bottle (U), chain (P3) and collar (Q1).

12. Unlock the quick link (L) to attach the hang straight (O) at the opposite end of the glass bottle (J).

13. Loosen the bolt of hang straight (Q2) and remove the collar (Q1) from the hang straight (Q2) by unscrewing it. Then insert collar (Q1) into canopy (P1) and re-attach collar (P1) into canopy (P1) and re-attach collar (P1) into canopy (

(Q1) to hang straight (Q2). Tighten the bolt of the hang straight (Q2). 14. Unlock the guick link (Q4) at the opposite end of the chain (Q3) and attach to the top

hang straight on the glass bottle (U).

15. Attach the wooden ceiling mounting hardware (N) to the wooden beam (M) with mounting bolts and nuts (O).

16. Unlock quick link (N2) to attach the end of the collar (Q1).

17. Move the canopy (P1) up to the ceiling, then fasten the bolt (P2).

18.Attach the Ceiling Plate (Y1) to the ceiling with mounting screws (W).


19. Connect the ground wire from the fixture to the ground junction box wire (Usually the green or bare wire) with a wire nut (R) and wrap the connection with electrical tape. Connect the hot wire to the hot junction box wire (Usually black or smooth) with a plastic wire nut (R) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (Usually white or ribbed) with a plastic wire nut (R) and wrap the connection with electrical tape.

20.Move the canopy (Y2) up to the ceiling, then fasten the Screw Cap (Y3)

To be continued.

RESTORATION HARDWARE

19TH C. ROCOCO IRON & CRYSTAL ROUND CHANDELIER 60"-C

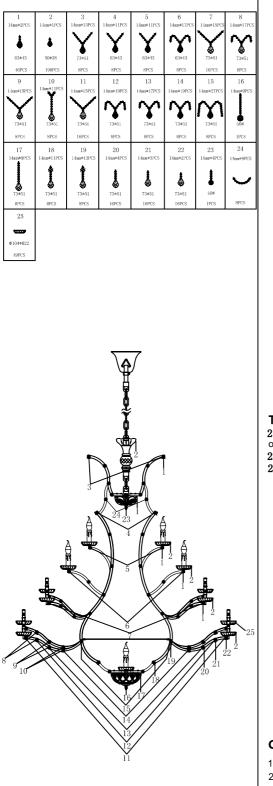

TO ASSEMBLE:

 ${\bf 21}.$ Position glass dish (25) and candle sleeves (S), and hang the crystal as per drawing on left.

22. Fasten lightbulbs (T) to the lampholders.

23. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

Make sure that the power is turned off and bulb has cooled before handling.
 Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
 The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.

CEILING SAFETY CABLE ASSEMBLY

- 1. Remove the Nut locker A & B by loosening the Screw from the Ceiling safety cable before installation.
- 2. Insert the Ceiling safety cable through the Nut lockers as the drawing shows.
- 3. Fasten the Nut locker A with Screw by screwdriver.
- 4. Fasten the Nut locker B with Screw by screwdriver.

