


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) FINIAL (X2)
- (B) DECORATIVE PLATE (X2)
- (C) SHADE
- (D) BACK PLATE
- (E) MOUNTING TAB (X2)
- (F) SOCKET (X2)
- (G) THUMB SCREW (X2)
- (H) SUPPORT HOLE (X4)
- (I) WIRE NUT (X3)
- (J) BACK PLATE COVER
- (K) BULB

MERIDIAN 15" SCONCE

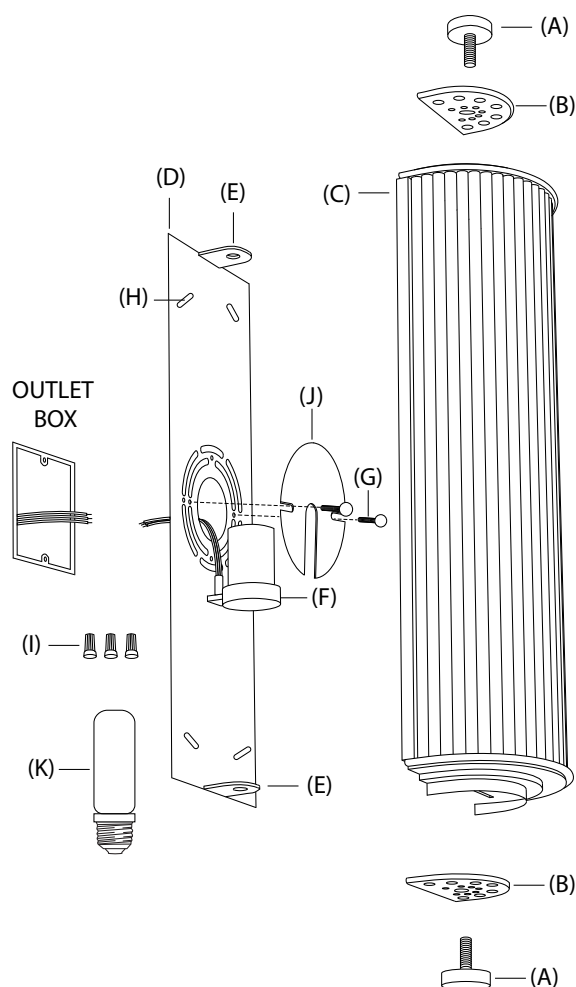

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

*This fixture has been rated for up to (1) 75W MAX T8 120V halogen bulb. To avoid risk of fire, do not exceed the recommended wattage.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down.

DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove the fixture and all parts from carton. Do not throw away any parts.
3. Remove all packaging material from fixture.
4. Remove back plate (D) from shade (C) by removing finials (A) and decorative plates (B). Set finials (A) and decorative plates (B) aside.
5. Lift back plate (D) to wall outlet box and make proper electrical connections described in steps 6 - 8. A LICENSED ELECTRICIAN IS RECOMMENDED.
6. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
7. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
8. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (I) and tightly wrap connection with electrical tape.
9. Carefully push wire connections back into wall outlet box. Place back plate (D) over wall outlet box. Align cover (J) with universal mounting holes in the center of back plate (D). Use thumbscrews (G) to attach back plate (D) and cover (J) to wall outlet box.
10. Install one (1) 75W MAX T8 120V halogen bulb (K) into socket (F).
11. Slide shade (C) over back plate (D), making sure to align holes in mounting tabs (E) with holes in top and bottom of shade (C).
12. Place decorative plate (B) on top of shade (C). Use finial (A) to attach shade (C) and plate (B) to mounting tab (B).
13. Repeat step 12 for decorative plate and finial at bottom of shade.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.