

RESTORATION HARDWARE

BENSON EXTRA WIDE PENDANT

PARTS:

| ITEM | DESCRIPTION | QTY. |
|------|-----------------------------------|------|
| (A) | CORD GRIP | 1 |
| (B) | CEILING BOLT WITH GROUNDING SCREW | 1 |
| (C) | CEILING ROSE | 1 |
| (D) | RETAINING NUT | 1 |
| (E) | EXTENSION TUBES | 3 |
| (F) | HORSE SHOE HOLDER | 1 |
| (G) | POWER CORD | 1 |
| (H) | GROUND WIRE | 1 |
| (I) | LOCKING SCREW | 1 |
| (J) | ALLEN SCREW | 1 |

IMPORTANT SAFETY INSTRUCTIONS:


These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

Turn off electricity at the main circuit breaker panel before beginning installation.

This direct wire fixture must be installed by a certified and licensed electrician. Customer should not attempt to install.

This fixture has been rated for one 150W Incandescent Edison bulb. To avoid risk of fire, do not exceed the recommended wattage.

If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with the N.E.C. requirements. If there are any questions, contact a licensed electrical contractor.

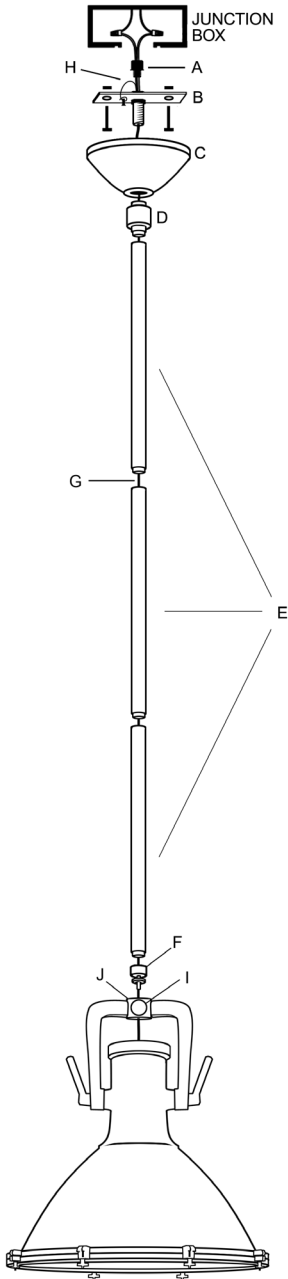

INSTRUCTIONS:

1. Shut off electrical supply at main fuse box / circuit breaker. **A licensed electrician should install this fixture.**
2. Attach ceiling bolt (B) to junction box using mounting screws provided.
3. Screw one type A 150W bulb into the socket of the pendant as explained in a separate sheet.
4. Unroll power cord (G) and ground wire (H) so they lay parallel on the floor.
5. Connect desired number of extension tubes (E), and secure horse shoe holder (F) at what will be the lamp end of the tubes, and retaining nut (D) to what will be the ceiling end.
6. Weave the power cord (G) and ground wire (H) through the horse shoe holder (F), extension tubes and the retaining nut (D).
7. Lift Pendant and guide the wires through the ceiling rose (C), and the threaded tube of the ceiling bolt (B).
8. Place the cord grip over the wires and tighten the cord grip securing screw.
9. Connect the grounding wire (silver colored, un-laminated) to the grounding screw in the ceiling bolt (B).
10. Connect the wires from the lamp to the wires in the junction box, neutral to neutral, live wire to live wire, with plastic wire connectors (not provided) and wrap with electrical tape.
11. Push ceiling rose (C) up to ceiling bolt (B) and screw the retaining nut (D) to the threaded pipe on the ceiling bolt (B). Tighten until ceiling rose (C) is flush with the ceiling.
12. Now insert the horse shoe holder (F) in the horse shoe socket on the pendant, tighten the locking screw (I), and tighten the allen screw (J) with the allen wrench provided. Make sure the connection is strong.
13. Check all connections before leaving pendant.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.