

RESTORATION HARDWARE

SUBMARINE MIRROR CABINET ASSEMBLY INSTRUCTIONS


NOTE:

For safe mounting, it is essential to use the proper hardware for your wall type (drywall, concrete, etc.). Contact your local hardware store for assistance if necessary. For safety and ease of mounting, installation is recommended using two people.


TOOLS AND MATERIAL REQUIRED:

- 1.) Screw Driver
- 2.) Carpenter's Level

PARTS LISTED: A.) CABINET

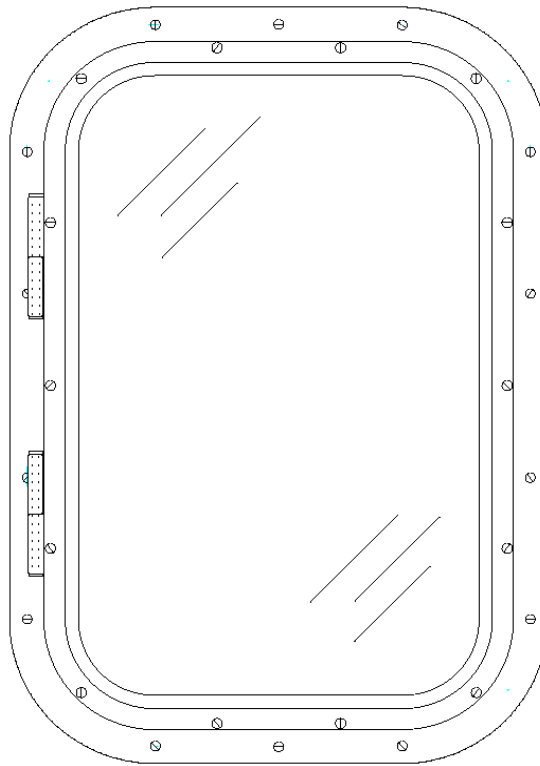

B.) WOOD SCREWS x 4



ASSEMBLY INSTRUCTION:

1.) Measure a space for cabinet body (A). Blocking is recommended to ensure adequate support. Inset (recessed) box measurements will vary according to cabinet model (see below)

Large Size Dimensions

24 inch Wide
34 inch High
5½ inch Deep


Small Size Dimensions

18 inch wide
24 inch high
5½ inch deep


RESTORATION HARDWARE

SUBMARINE MIRROR CABINET ASSEMBLY INSTRUCTIONS

Install the cabinet with recessed box set back within the wall cavity.

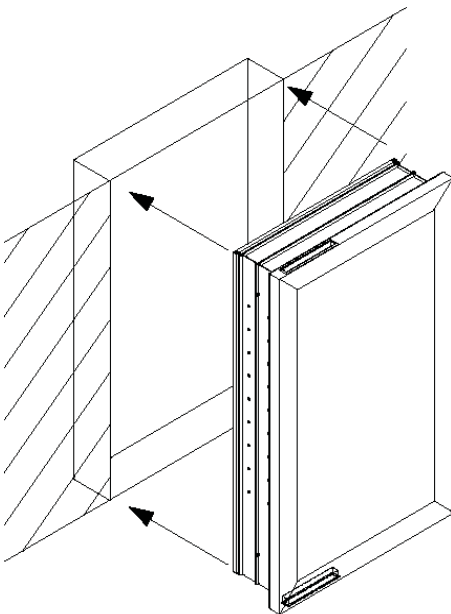

Mount cabinet by fastening the enclosed wood screws (B) to the inner side panels. Enclosed screws are to be used for installations into wood frames. For different wall material type additional screws / anchors may need to be purchased.

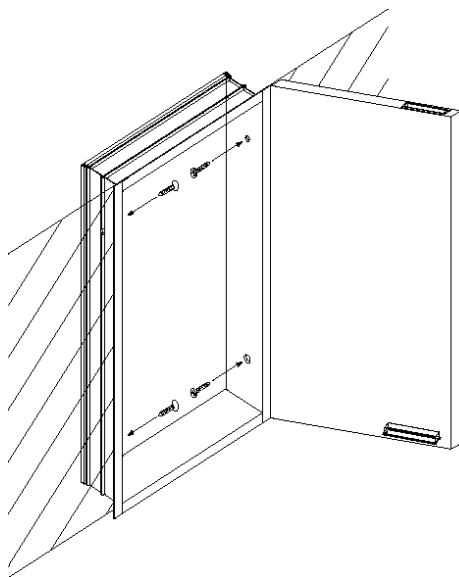

CLEANING INSTRUCTION:

To maintain and protect the luster of all products. Clean with a soft, damp cloth only.

Thank you for your purchase.

MADE IN INDIA

Page 02 Of 02