# RESTORATION HARDWARE

## ESTATE FINIALS ASSEMBLY INSTRUCTIONS

### To fit the Estate finials onto custom rods:

1. Fit the Estate finials onto the ends of the Custom rod. (see Fig A-1)

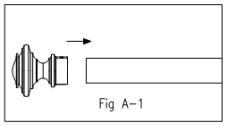


2. Use the included Allen Wrench to tighten the set-screw on the lip of the finials. (see Fig A-2)

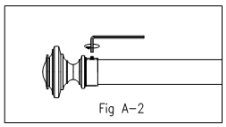


3. Rod and finial assembly is complete. (see Fig A-3)

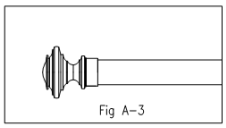


### To fit the Estate finials onto telescoping rods:

1. Pull the inner rod out of outer rod a minimum of 1 inch. (see Fig B-1)

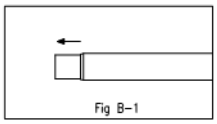


2. Fit the Estate finials onto the ends of the rod. (see Fig B-2)

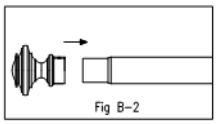


3. Use the included Allen Wrench to tighten the set-screw on the lip of the finials. (see Fig B-3)

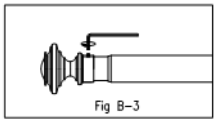

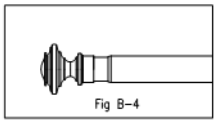
4. Rod and finial assembly is complete. (see Fig B-4)