


RESTORATION HARDWARE

SPANISH TORCH GRAND SCONCE

PARTS ENCLOSED: HARDWARE INCLUDED:

- | | |
|------------------------|--------------------------------|
| (A) Mounting plate (1) | (a) Plastic wire connector (2) |
| (B) Back plate (1) | (b) Green ground screw (1) |
| (C) Bulb (1) | (c) Mounting screw (2) |
| (D) Mounting plate (1) | (d) Plate screw (2) |
| (E) Bar (1) | (e) Allen key (1) |
| | (f) Wall anchor (1) |
| | (g) Anchor screw (1) |

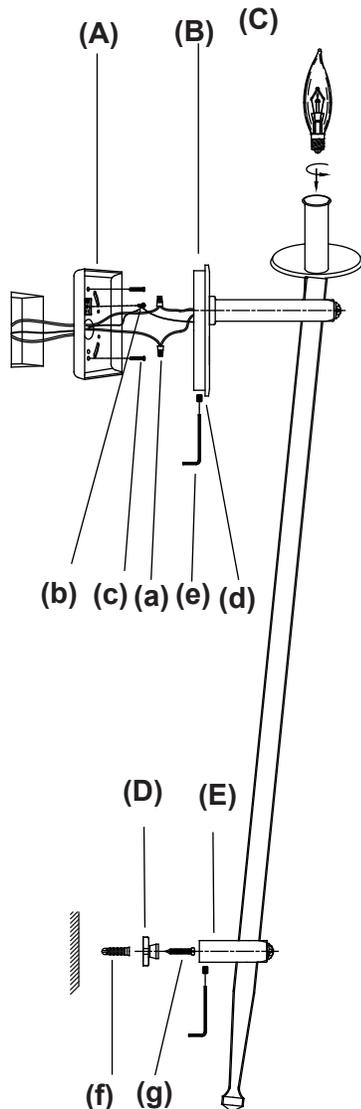

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.
This fixture has been rated for up to (1) 40-watt maximum TYPE CA bulbs .
To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.
Keep flammable materials away from lit bulb.

This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

- Carefully remove all parts from the box and remove all plastic covering.
- Turn OFF power to the junction box where the lamp will be installed.
- Pull the electrical cord of junction box through the exit hole of the Mounting plate (A).
- Attach the ground wire from the fixture to the ground junction box wire from the outlet box (Usually green or bare wire). Or wrap the fixture's ground wire around green ground screw (b), and then fix the green ground screw into the Mounting plate (A).
- Connect the hot wire to the hot junction box wire (usually black or smooth) with a plastic wire connector(a) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire connector(a) and wrap the connection with electrical tape.
- Mark the location of the bottom mounting plate hole on the wall according to distance between two central holes of the mounting plate, and then using the mark as a guide, drill holes for the wall anchor. Insert the wall anchor(f) into the holes, using a hammer to fully insert until flush with the wall.
- Align the holes in the bottom mounting plate (D) with the wall anchors in the wall, using a screwdriver, secure the Mounting plate (D) to the wall with the enclosed Anchor screw (g).
- Attach the Mounting plate (A) to the outlet box using the Mounting screws (c). Tighten with a screwdriver.
- Attach the Back plate (B) to the Mounting plate (A) using the Plate screw (e). Tighten with the Allen key (d). Attach the Bar (E) to the Mounting plate (D) using the Plate screw (e). Tighten with the Allen key (d).
- Insert the bulb (included) into threaded sockets.
- Restore power to the junction box and test lamp fixture.
- Installation is complete.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp.
JUST WIPE CLEAN WITH SOFT CLOTH.