


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) MOUNTING PLATE
- (B) BACK PLATE
- (C) SCREW (X3)
- (D) MOUNTING SCREW (X2)
- (E) SHADE
- (F) SOCKET
- (G) WIRE NUT (X3)

WILSHIRE SINGLE SCONCE

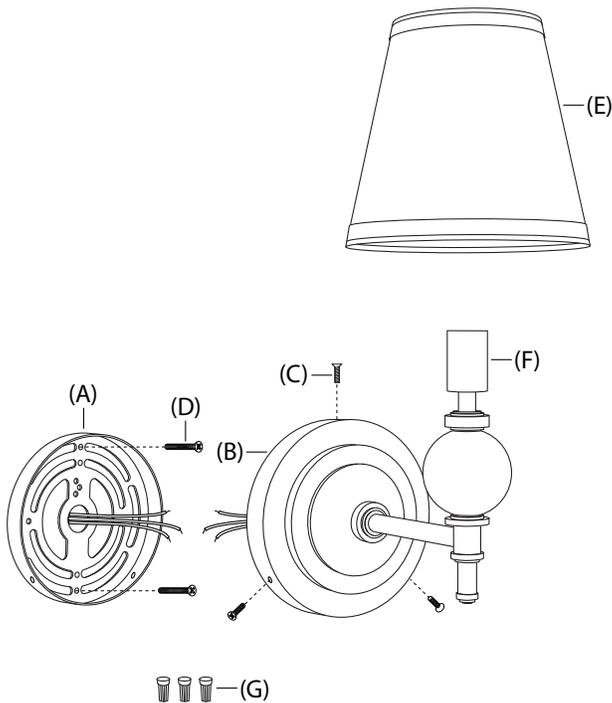

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
*DIRECT WIRE FIXTURES: We strongly recommend installation by a licensed electrician.

This fixture has been rated for up to (1) 60W MAX. B10 Candelabra bulb. To avoid risk of fire, do not exceed the recommended wattage.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down.

DO NOT subject the lamp to any shock while lit as shattering of bulb may result.

TO ASSEMBLE:

1. SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.
2. Remove mounting plate (A) from backplate (B) by removing screws (C). Set screws (C) aside.
3. Carefully pull the wiring from wall outlet box. Thread the wires through the center hole in mounting plate (A).
4. Affix mounting plate (A) to wall outlet box with mounting screws (D) provided.
5. Make proper electrical connections described in steps 6 - 8. A LICENSED ELECTRICIAN IS RECOMMENDED.
6. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (J) and tightly wrap the connection with electrical tape.
7. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (J) and tightly wrap the connection with electrical tape.
8. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (J) and tightly wrap connection with electrical tape.
9. Slide backplate (B) over mounting plate (A). Thread screws (C) into vacant holes at the top and bottom of backplate (B) to secure the fixture to the mounting surface.
10. Insert one (1) 60W MAX. B10 Candelabra base bulb into socket (F).
11. Carefully open clip inside shade (E). Place clip over bulb to secure shade to fixture.
12. Reconnect main electrical supply at the fuse box/circuit breaker and test the fixture.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.