


# RESTORATION HARDWARE

## 1920'S PORTHOLE SCONCE

### PARTS ENCLOSED

- (A) Mounting Plate
- (B) Mounting Screws (2)
- (C) Fixture Base
- (D) Cap Nuts (2)
- (E) Shade Cover
- (F) Thumbscrews (3)
- (G) Diffuser
- (H) Set Screw
- (J) Light Bulb

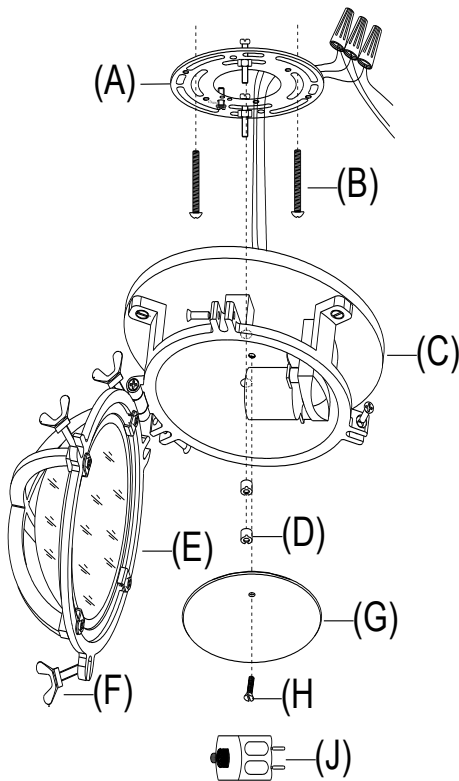

### IMPORTANT SAFETY INSTRUCTIONS

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to one (1) 35-Watt maximum Type T4 bulb (J) (included) To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.
8. With silicone (EX.GE-108) caulking compound, caulk completely around where back of canopy meets the surface to prevent water from seeping into outlet box.

### TO ASSEMBLE

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Carefully remove all parts from the box and remove all plastic covering.
3. Open Shade Cover (E) from Fixture Base (C) by unscrewing Thumbscrews (F).
4. Remove Diffuser (G) from Fixture Base (C) by removing Set Screw (H).
5. Remove Mounting Plate (A) from Fixture Base (C) by unscrewing Cap Nuts (D) in counter-clockwise direction.
6. Place Mounting Plate (A) to ceiling outlet box by aligning the holes and secure with Mounting Screws (B).
7. Attach the fixture ground wire (green) to the ground wire from the outlet box (usually green or bare wire) with a plastic wire connector and wrap the connection with electrical tape.
8. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
9. Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
10. Place the Fixture Base (C) to Mounting Plate (A), letting both rods on Mounting Plate (A) pass through the holes on Fixture Base (C) and secure with Cap Nuts (D).
11. Replace Diffuser (G) to fixture base (C) and secure with set screw (H).
12. Insert the recommended bulb (J) (included) into the socket.
13. Close Shade Cover (E) to Fixture Base (C) and secure with Thumbscrews (F).
14. Assembly is complete.

### CARE INSTRUCTIONS

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.