


INSTALLATION INSTRUCTIONS

K1-2200


CROSS HANDLE 5-HOLE BATH SET WITH PULL-OUT HAND SHOWER & DECK DIVERTER - TRIM ONLY, TO SUIT R1-4006 ROUGH

K1-2201

LEVER 5-HOLE BATH SET WITH PULL-OUT HAND SHOWER & DECK DIVERTER - TRIM ONLY, TO SUIT R1-4007 ROUGH

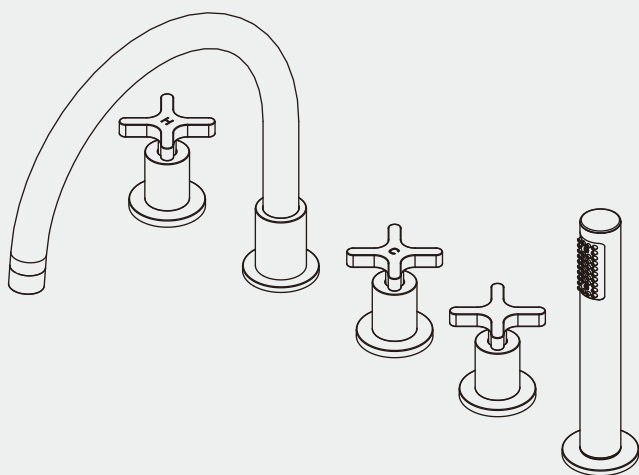

K1-2200

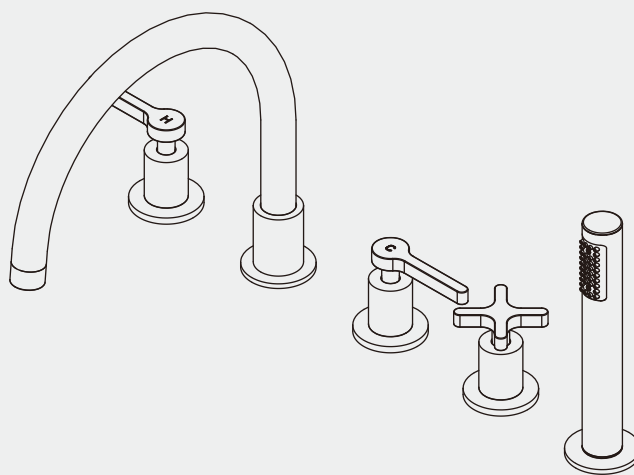


K1-2201


LEFROY BROOKS

Dimensions in Inches (& Millimetres)

K1-2200

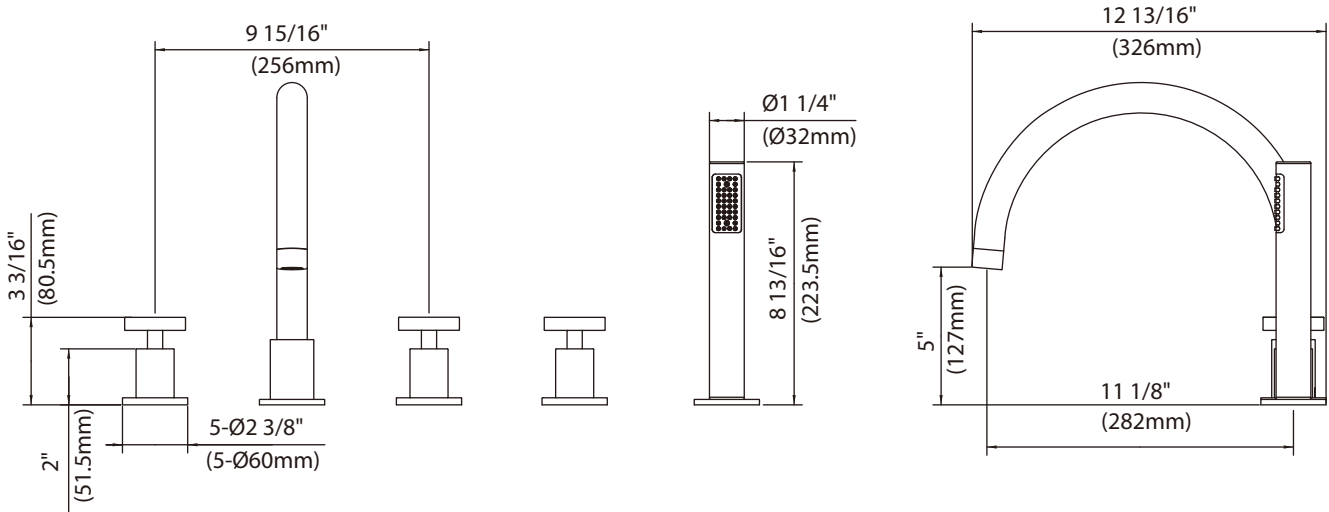

K1-2201

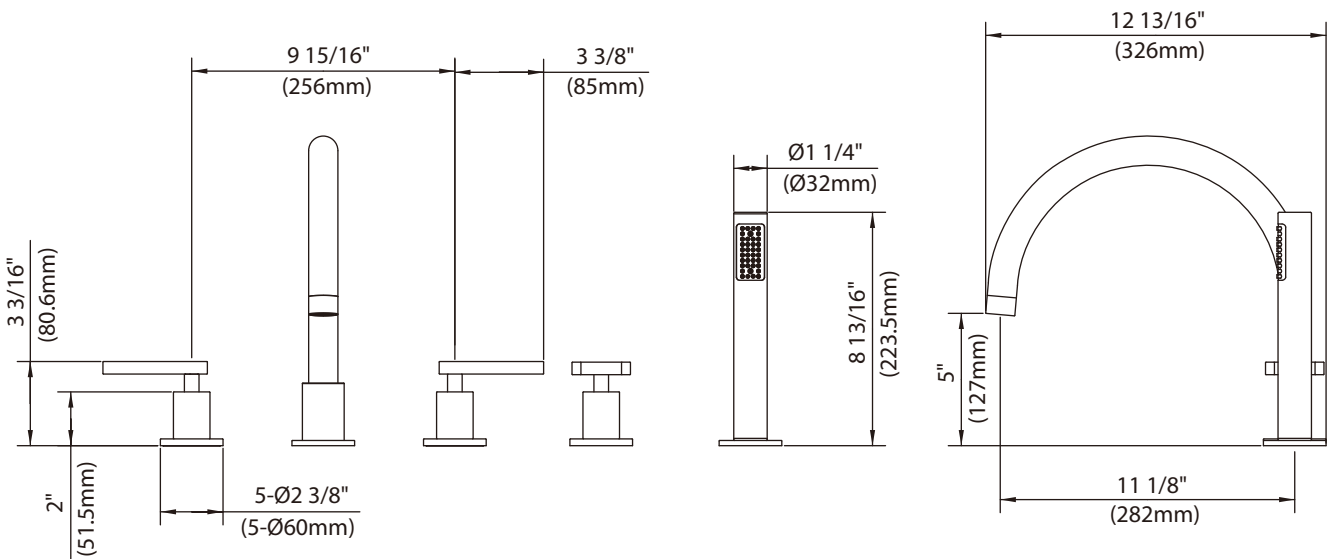


Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

What you need to know

Tools:

Adjustable Wrench
Groove Joint Pliers
Hacksaw
Phillips Screwdriver
Pipe Tape
Spatula
Spirit Level

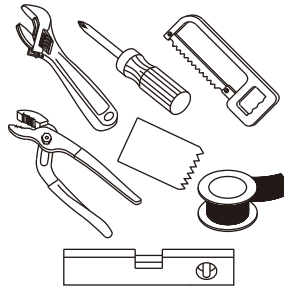

Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation, turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licensed plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should be equalized by a plumber in accordance with best practice and legislation.

Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.


Standards

IAPMO/cUPC Listed
Meets A112.18.1


Steps 1-2

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

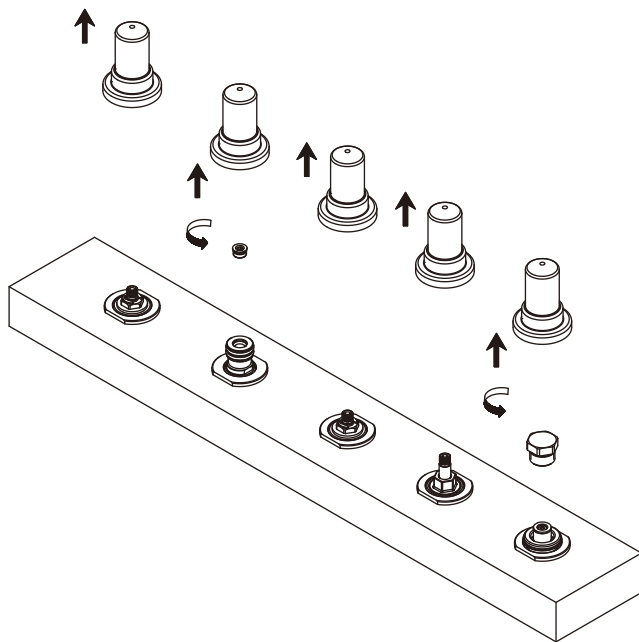

1

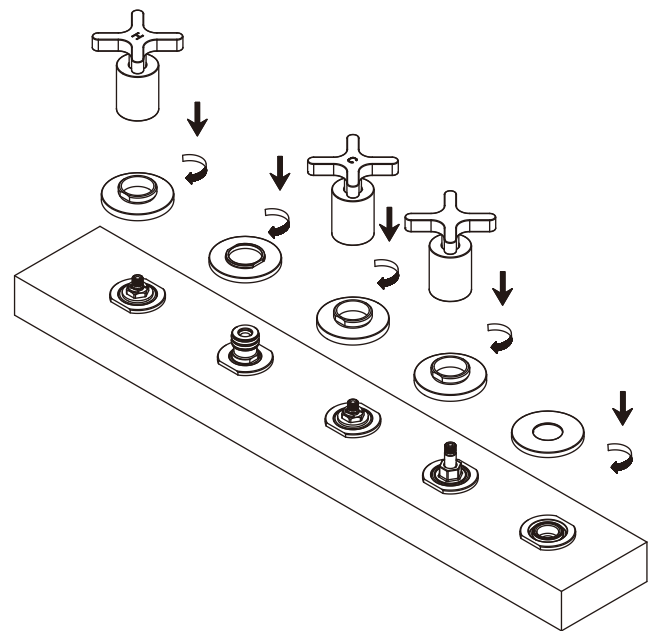

2


1 Make sure that main water supply is shut off before further installation. Take off all rubber protective caps, plugs from valves, as well as the underneath protective bubble bags.

2 Install escutcheons and handles.


Steps 3-5

Installation Procedure


Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

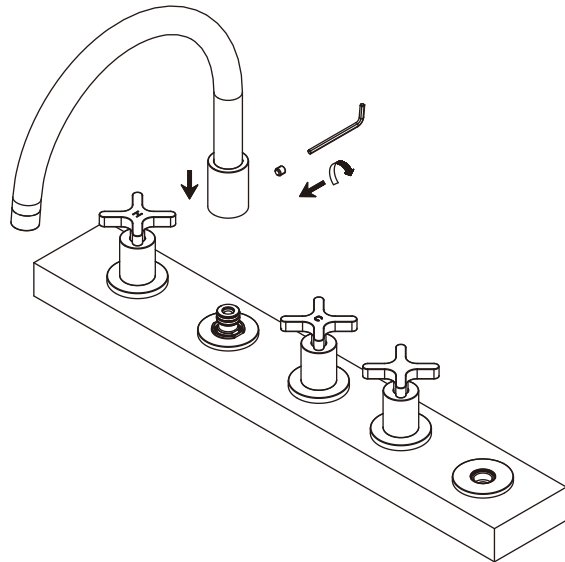

3

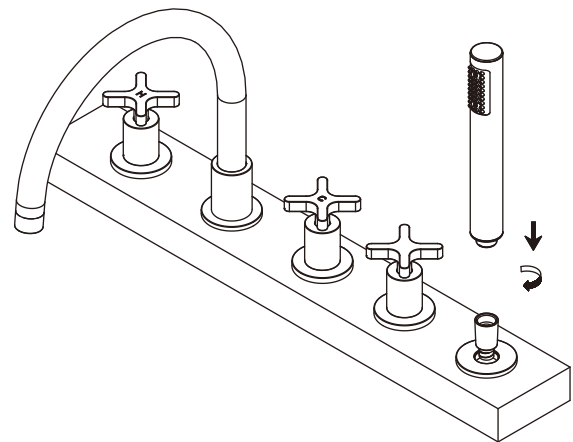

4

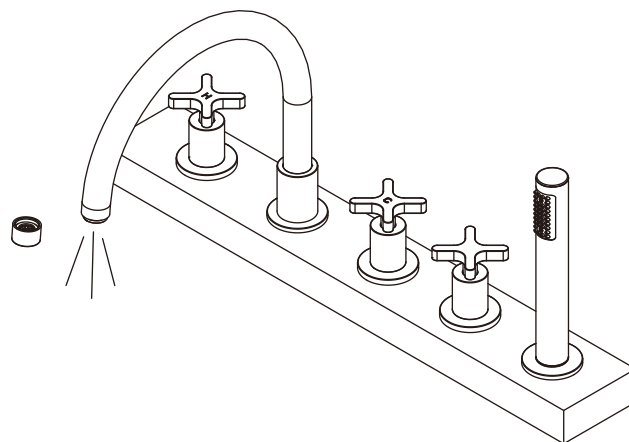

5

3 Install spout and finish installation by inserting set screw into access hole in back of spout and screw tightly.

4 Attach hand shower with final trim installation.

5 After installing faucet, remove aerator and open the hot and cold supplies. Check for leaks. Turn on faucet handle for one minute to flush debris from faucet. Turn off the water supply, install the canopy and handle, then reassemble the aerator.

Parts List


This exploded view diagram illustrates the assembly of a water filter. The components are numbered 1 through 24. The assembly process involves fitting the filter head (1) with the cross-shaped handle (2) and the filter housing (3). The filter housing is then secured with the cap (4) and the O-ring (5). The filter housing is then inserted into the base (6) and secured with the cap (7) and the O-ring (8). The filter housing is then inserted into the base (9) and secured with the cap (10) and the O-ring (11). The filter housing is then inserted into the base (12) and secured with the cap (13) and the O-ring (14). The filter housing is then inserted into the base (15) and secured with the cap (16) and the O-ring (17). The filter housing is then inserted into the base (18) and secured with the cap (19) and the O-ring (20). The filter housing is then inserted into the base (21) and secured with the cap (22) and the O-ring (23). The filter housing is then inserted into the base (24) and secured with the cap (25) and the O-ring (26).

6

Exploded View

Parts List

K1-2201

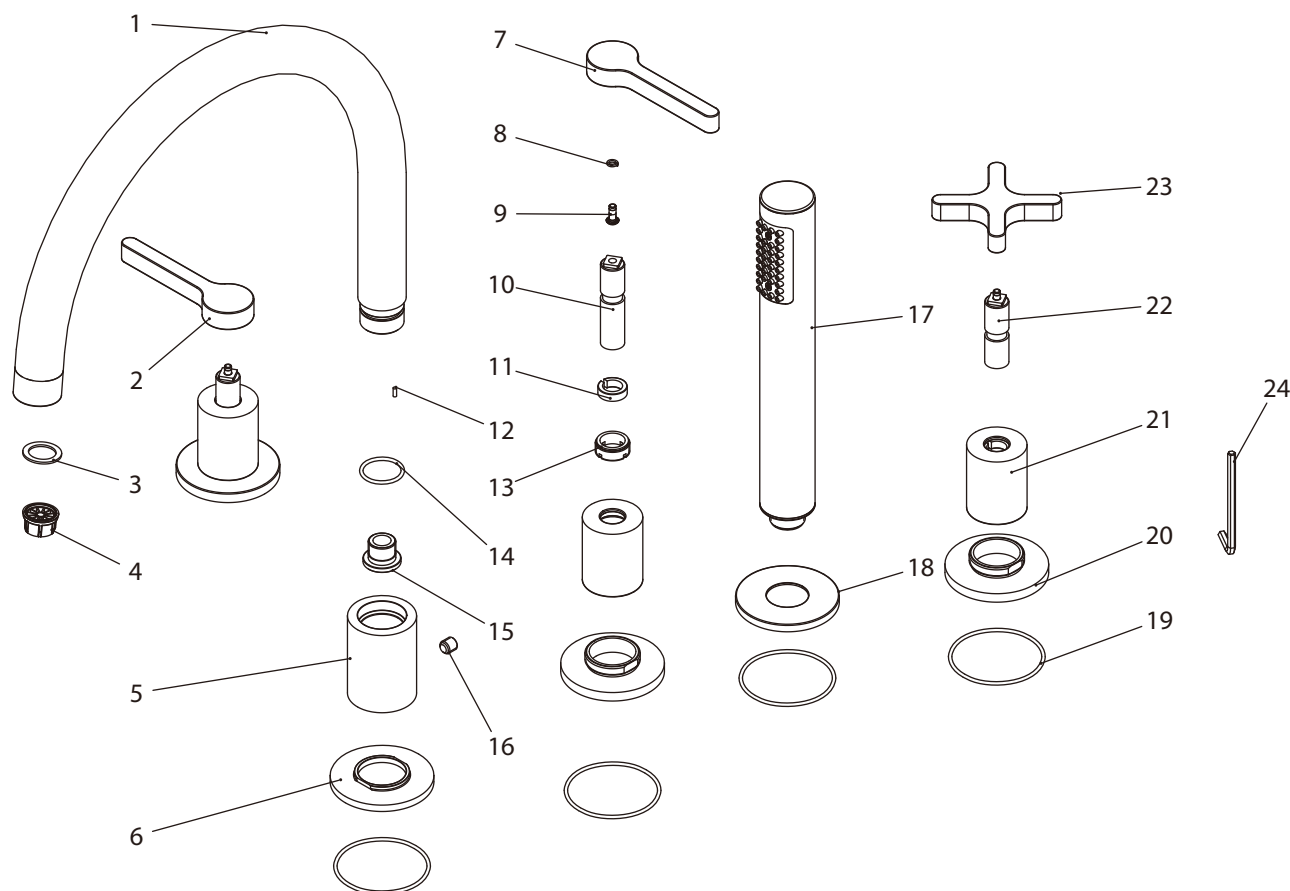

1	Spout assembly (139842)	9	Screw (008154)	17	Hand shower (S2111104)
2	Handle (H) (069699H)	10	Stem extension (110005)	18	Escutcheon (071390)
3	Oil-seal (010899)	11	Clip (012242)	19	O-ring (004640N)
4	Aerator insert (114237R)	12	Pin (003150)	20	Escutcheon (071033)
5	Canopy (000889)	13	Adaptor (057507)	21	Canopy (018438)
6	Escutcheon (303454)	14	O-ring (004007)	22	Stem extension (110006)
7	Handle (C) (069699C)	15	Adaptor (067591)	23	Diverter handle (069688)
8	Washer (013570)	16	Set screw (292565)	24	Allen key (031011)

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



LEFROY BROOKS

www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385
TELEPHONE: 718-302-5292. FAX: 718-302-4177

The use of trademarks, product design and artwork is subject to licence or agreement with LBIP Ltd. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited. The right to modify designs and dimensions is reserved. Christo Lefroy Brooks is a member of ACID (Anti Copying in Design).