

## INSTALLATION INSTRUCTIONS

### **C1-2150 (LB1250)**

CROSS HANDLE 4-HOLE BATH SET WITH PULL-UP DIVERTER TRIM ONLY, TO SUIT R1-4024 ROUGH

### **CW-2151 (WL1250)**

WHITE LEVER 4-HOLE BATH SET WITH PULL-UP DIVERTER TRIM ONLY, TO SUIT R1-4025 ROUGH

### **CW-2153**





WHITE LEVER 4-HOLE BATH SET WITH DIVERTER AND METAL-FINISHED HAND SHOWER TO SUIT R1-4025 ROUGH

### **CB-2151 (BL1250)**

BLACK LEVER 4-HOLE BATH SET WITH PULL-UP DIVERTER TRIM ONLY, TO SUIT R1-4025 ROUGH

### **CB-2153**


BLACK LEVER 4-HOLE BATH SET WITH DIVERTER AND METAL-FINISHED HAND SHOWER TO SUIT R1-4025 ROUGH

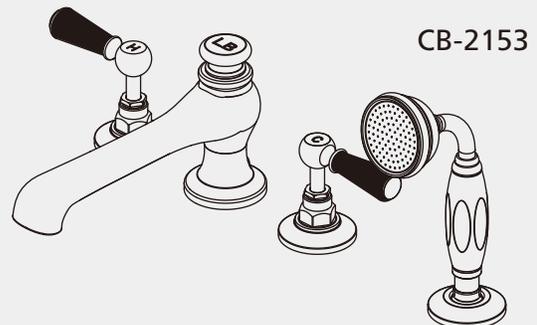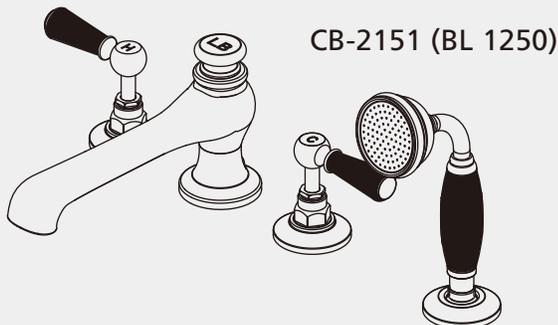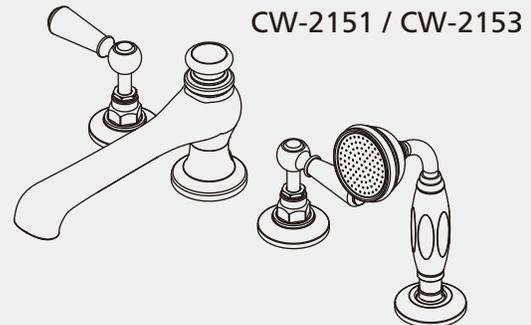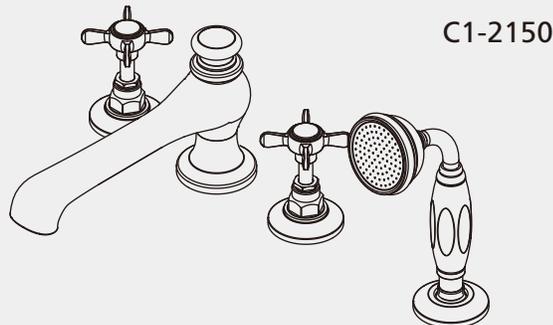

# Dimensions in Inches (& Millimetres)

---

C1-2150 (LB1250)

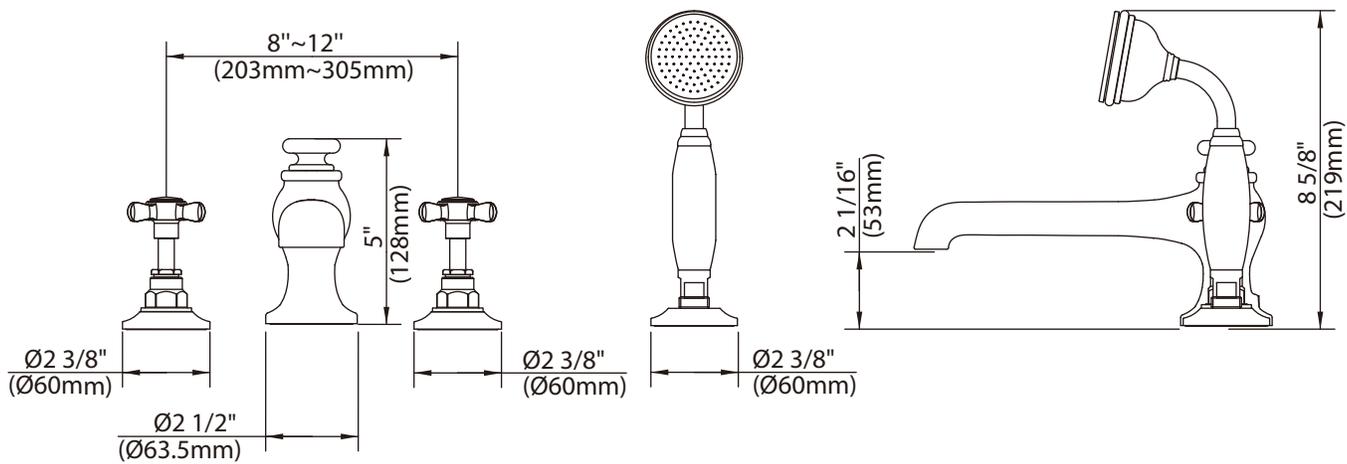


Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

# Dimensions in Inches (& Millimetres)

---


CW-2151 (WL1250)  
CW-2153

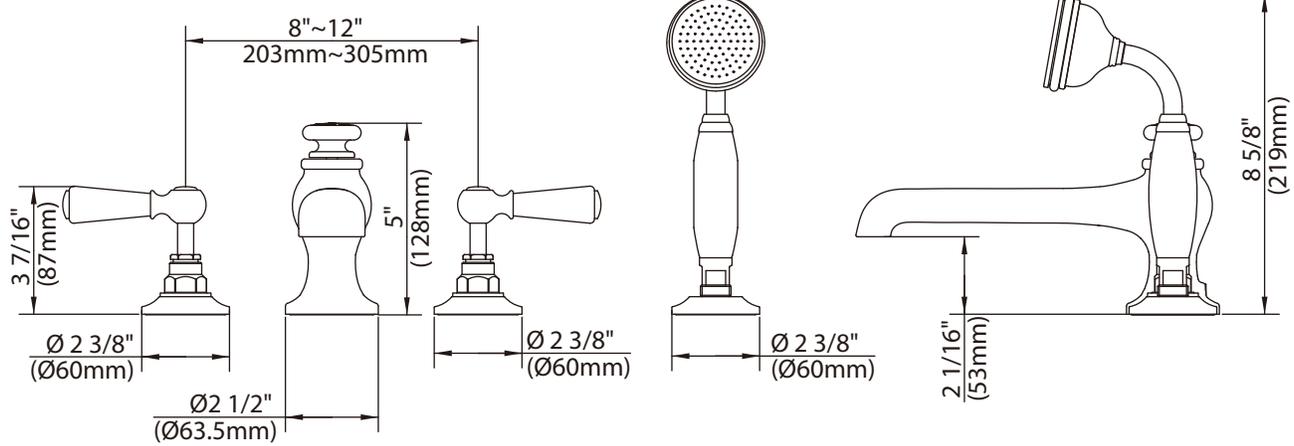

Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

# Dimensions in Inches (& Millimetres)

CB-2151 (BL1250)  
 CB-2153

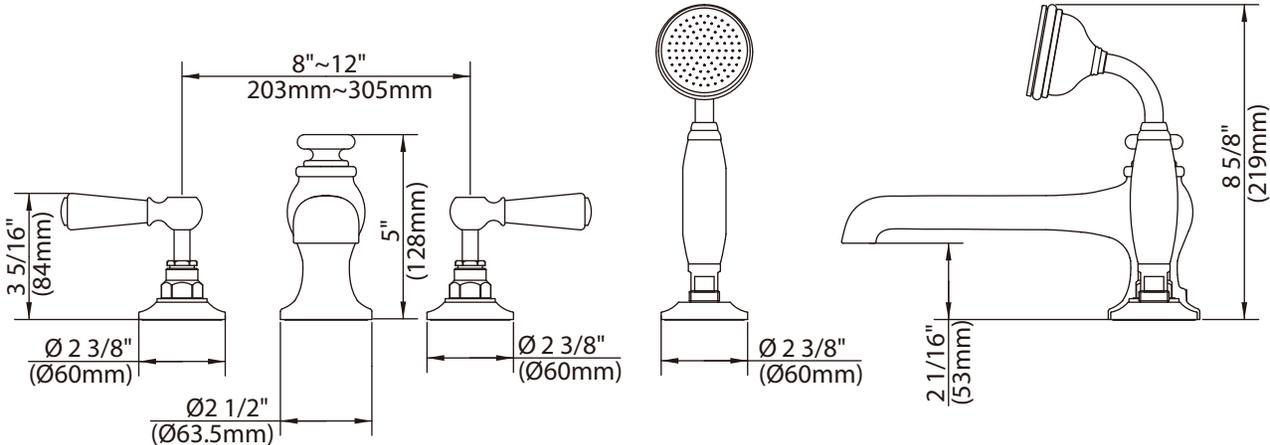


Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

# What you need to know

## Tools:

---

Adjustable Wrench  
Groove Joint Pliers  
Hacksaw  
Phillips Screwdriver  
Pipe Tape  
Spatula  
Spirit Level

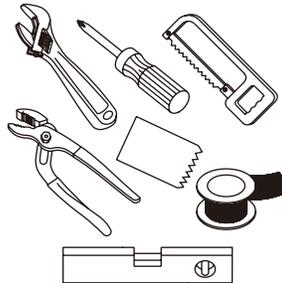

## Safety Tips

---

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

## Maintenance

---

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

## Important Points

---

Prior to beginning installation, turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licensed plumber.

### Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should be equalized by a plumber in accordance with best practice and legislation.

## Things You May Need

---

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

## Standards

---

IAPMO/cUPC Listed  
Meets A112.18.1


### Please note :

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

# Steps 1-2

## Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

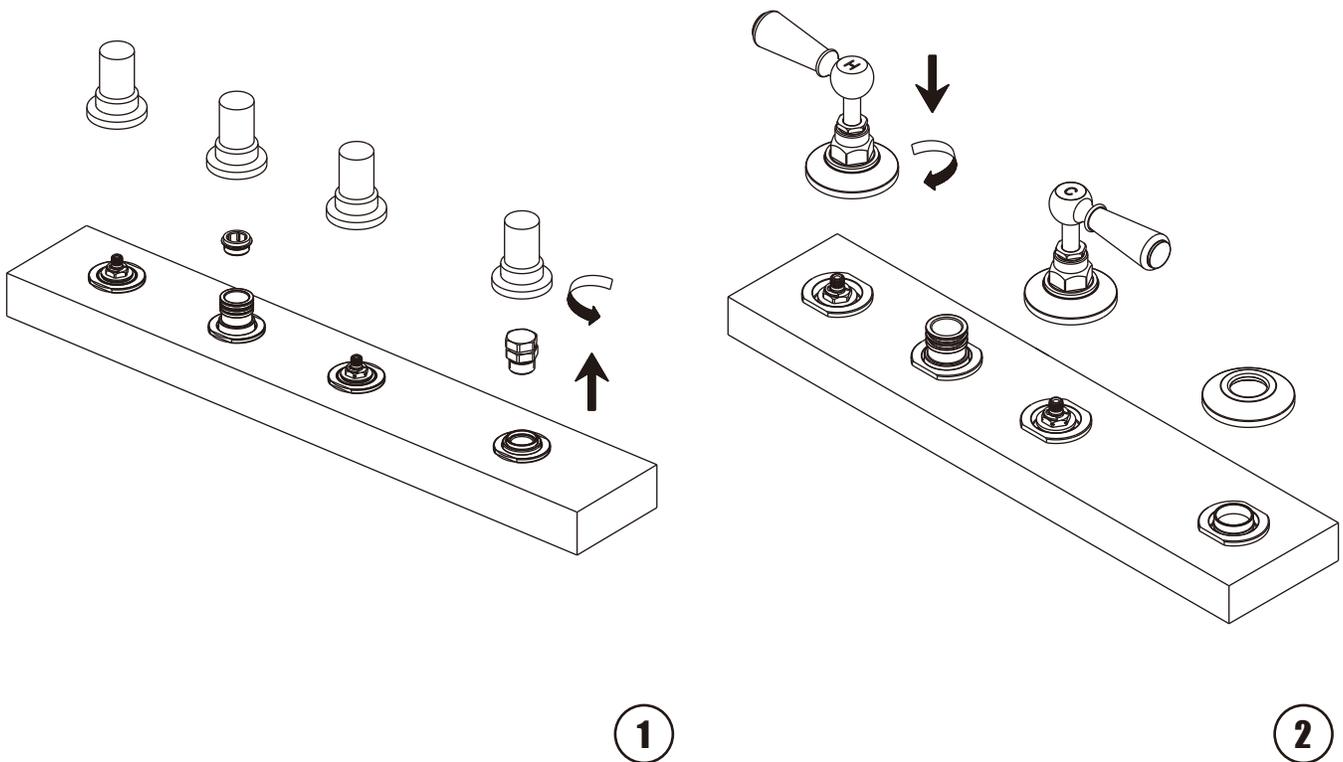


**1** Make sure that main water supply is shut off before further installation. Take off all rubber protective caps, plugs from valves, as well as the underneath protective bubble bags.

**2** Install handles.


# Steps 3-4

## Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

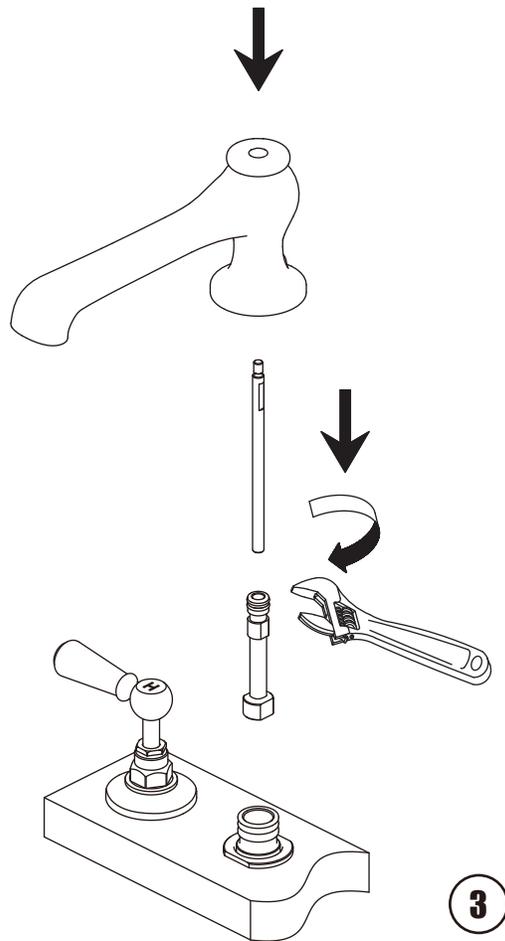

**3** Install the adaptor and diverter rod to the body and screw tightly. Place spout over spout hub.

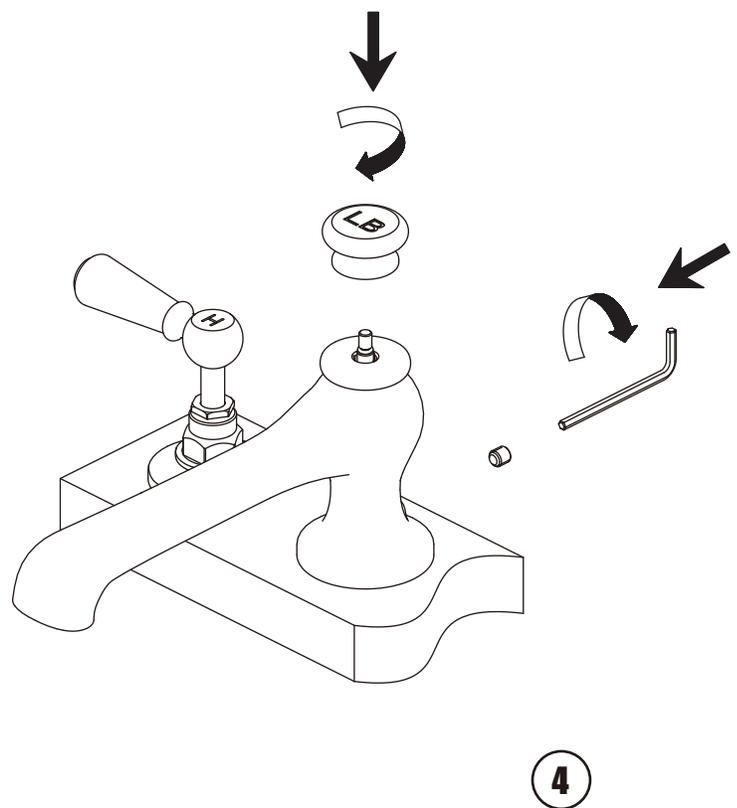


**4** Install the diverter knob. Finish installation by inserting set screw into access hole in back of spout and screw tightly.

# Steps 5-6

## Installation Procedure


---

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

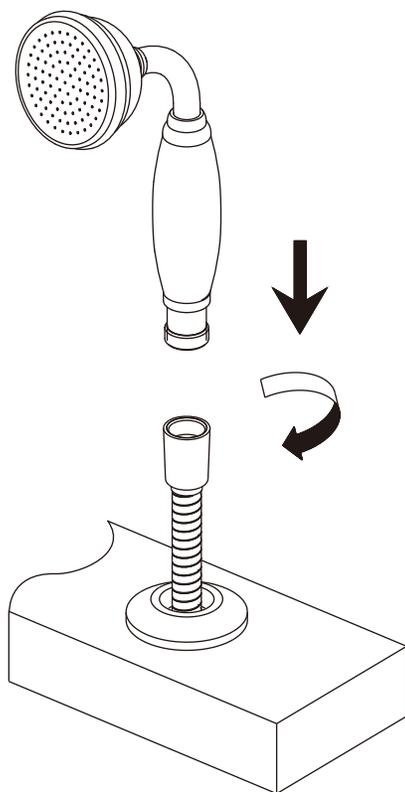

5

**5** Attach hand shower with final trim installation.

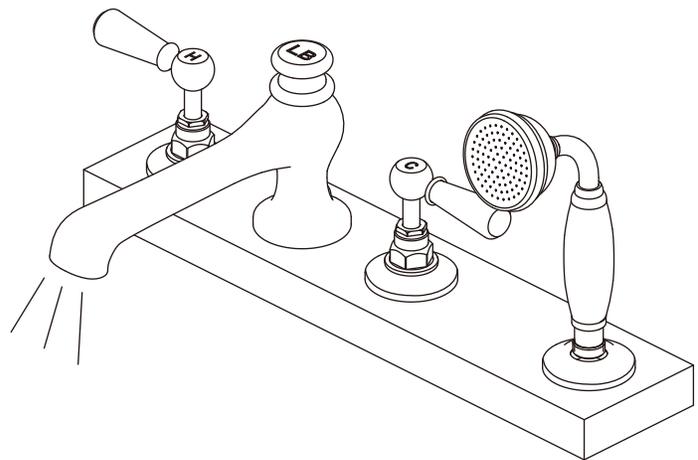


6

**6** After installing faucet, open the hot and cold supplies to check for leaks. Turn on faucet handles for one minute to flush debris from faucet.

# Exploded View

## Parts List

C1-2150 (LB1250)

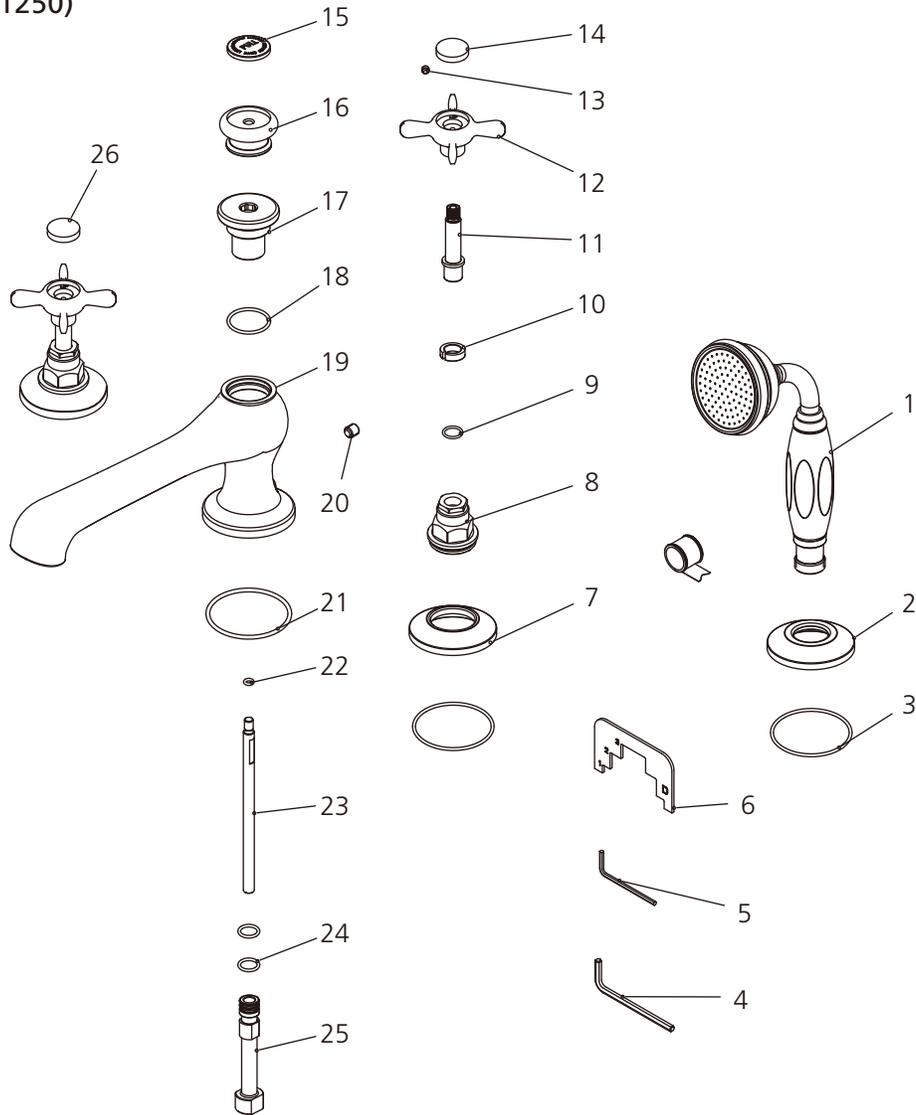


1	Hand shower (S2110311)	10	Clip (012242)	19	Spout (118009)
2	Escutcheon (071433)	11	Stem extension (110338)	20	Set screw (292565)
3	O-ring (004640N)	12	Handle (069031)	21	O-ring (072022)
4	Allen key (031011)	13	Set screw (075210)	22	O-ring (072098)
5	Allen key (031000)	14	Ceramic cap ( C ) (129312C)	23	Diverter rod (125301)
6	Gauge D (027108)	15	Ceramic cap (023662-50)	24	O-ring (004079N)
7	Escutcheon (215478)	16	Diverter knob (124025)	25	Adaptor (057929)
8	Canopy (018255)	17	Nut (009087)	26	Ceramic cap ( H ) (129312H)
9	O-ring (048085)	18	O-ring (004081)		

# Exploded View

## Parts List

CW-2151 (WL1250)  
CW-2153

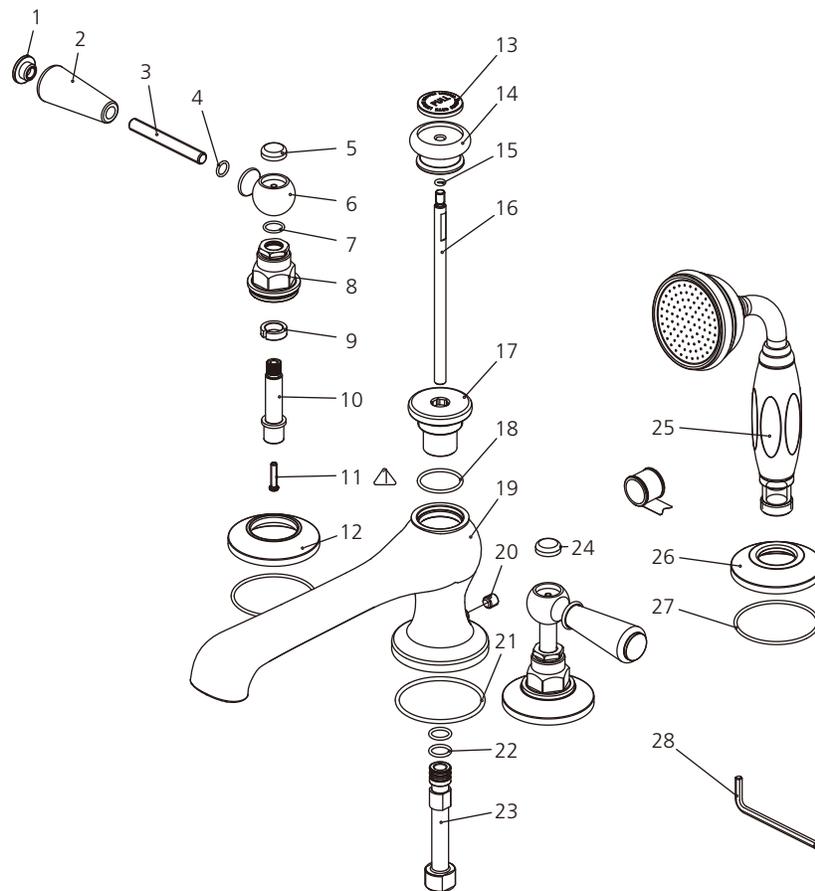


1	Lever cap (109376)	11	Screw (008486)	21	O-ring (072022)
2	Lever (108924)	12	Escutcheon (215478)	22	O-ring (004079N)
3	Screw (017094)	13	Ceramic cap (023662-50)	23	Adaptor (057929)
4	O-ring (072060)	14	Diverter knob (124025)	24	Ceramic cap (C) (129313C)
5	Ceramic cap (H) (129313H)	15	O-ring (072098)	25	Hand shower (S2110311)
6	Lever adaptor (205144)	16	Diverter rod (125301)	26	Escutcheon (071433)
7	O-ring (048085)	17	Nut (009087)	27	O-ring (004640N)
8	Canopy (018255)	18	O-ring (004081)	28	Allen key (031011)
9	Clip (012242)	19	Spout (118009)		
10	Stem extension (110319)	20	Set screw (292565)		

# Exploded View

## Parts List

CB-2151 (BL1250)  
CB-2153

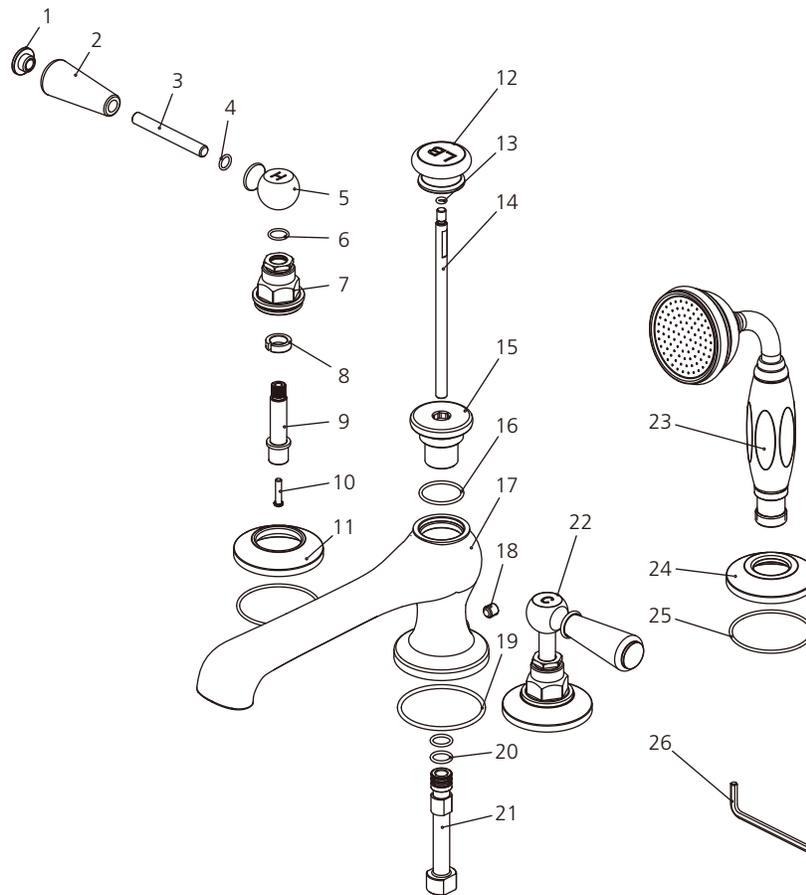

1	Lever cap (109376)	10	Screw (008486)	19	O-ring (072022)
2	Lever (108924)	11	Escutcheon (215478)	20	O-ring (004079N)
3	Screw (017094)	12	Diverter knob (124411-50)	21	Adaptor (057929)
4	O-ring (072060)	13	O-ring (072098)	22	Lever adaptor ( C ) (205143C)
5	Lever adaptor ( H ) (205143H)	14	Diverter rod (125301)	23	Hand shower (S2110311)
6	O-ring (048085)	15	Nut (009087)	24	Escutcheon (071433)
7	Canopy (018255)	16	O-ring (004081)	25	O-ring (004640N)
8	Clip (012242)	17	Spout (118009)	26	Allen key (031011)
9	Stem extension (110319)	18	Set screw (292565)		

For additional assistance or service call

**718-302-5292**

**9am to 5pm EST Monday to Friday**



LEFROY BROOKS

[www.lefroybrooks.com](http://www.lefroybrooks.com)

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385  
TELEPHONE: 718-302-5292. FAX: 718-302-4177

The use of trademarks, product design and artwork is subject to licence or agreement with LBIP Ltd. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited. The right to modify designs and dimensions is reserved. Christo Lefroy Brooks is a member of ACID (Anti Copying in Design).