




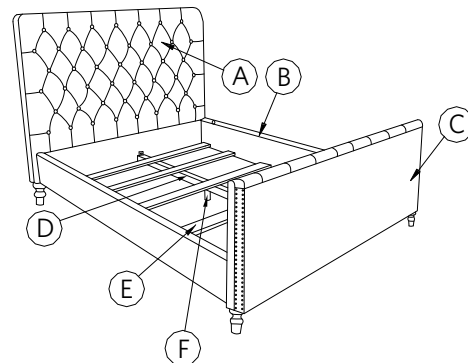


RH

RESTORATION HARDWARE CHESTERFIELD PANEL BED

PARTS INCLUDED

- A [1] Headboard
- B [2] Side rail
- C [1] Footboard
- D [5] Cross support Slat
- E [1] Center Support Slat
- F [2] Center Support Slat Foot (With adjustable glide)



NO.	HARDWARE & PARTS ENCLOSED		Qty
1		Allen Wrench	1 pcs
2		Big Allen Head Bolt(0.8cm Dia)	2 pcs
3		Small Allen Head Bolt(0.6cm Dia)	2pcs
4		L Shaped Bracket	2 pcs
5		Big Screw (5cm)	10 pcs
***The hardwares are packed with the Headboard			

TOOLS NEEDED:

Phillips Screwdriver (not included)



ASSEMBLY INSTRUCTIONS


Bed must be assembled by at least two people.

Please read instructions carefully before assembling bed.

Use the above parts and hardware list to identify each component.

Keep all packing materials until assembly is complete to avoid loss of smaller parts.

1. Place the headboard (A) on a flat protected surface.
2. Stand the headboard (A) upright and align the Side Rails (B) at the base of the headboard as shown in Diagram I.
3. Repeat the step 2 with the Footboard (C).
4. Attach the Cross Support Foot (F) onto the Center Support Slat (E) as shown in the Diagram II.
5. Attach the L-Shaped Brackets (4) to the ends of Center Support Slat (E) and tighten with Allen Head Bolt (3) & Allen Key (1). Attach the L-Shaped Brackets (4) to the Headboard (A) and Footboard (C) and tighten with Allen Head Bolt (2) & Allen Wrench (1), as shown in Diagram IV.
6. Place the Cross Support Slat (D) into the cleats on the inside of Side Rail (B), Screw the ends of the Cross Support Slat (D) to the cleats using Screw (5) in Diagram IV.

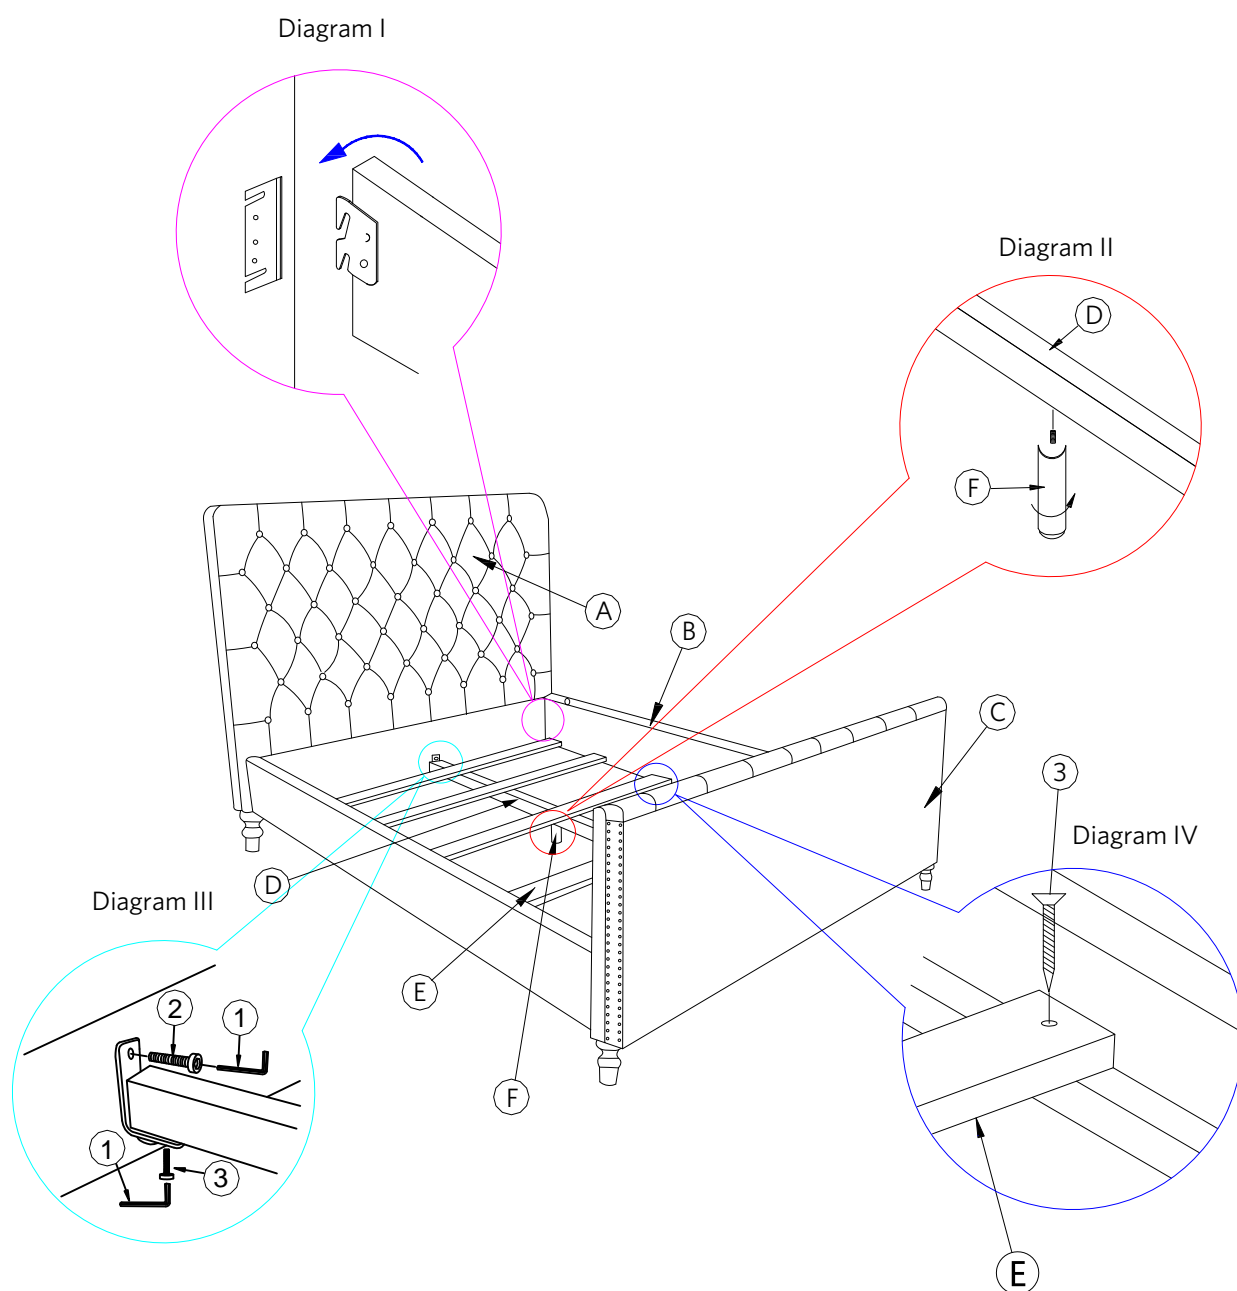

Thank you for your purchase
www.restorationhardware.com