


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind, and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED

- (A) Base plate (1)
- (B) Wood bolts (2)
- (C) Location Ball (1)
- (D) Counterweight (1)
- (E) Shade holder (1)
- (F) Thumbscrews (4)
- (G) Glass shade (1)

INDUSTRIAL PULLEY SCONCE

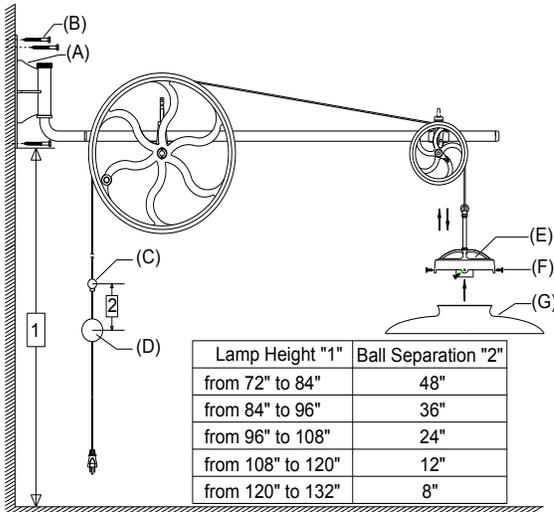

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to one (1) 60-watt maximum Type A-15 bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb.
6. Please ensure that this item is mounted to a wood or metal wall stud. It CANNOT be mounted into a hollow wall.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering. DO NOT discard the outer carton.
2. Locate wall stud at the location where you wish to mount the fixture. **This lamp may NOT be mounted lower than 72".**
3. Cut off the carton flap where the wall plate template is printed.
4. Using the template as a guide, drill three pilot holes using a 1/8" drill bit, making sure they are perfectly vertical to each other.
5. Place base plate (A) with whole fixture on the wall over the previously drilled holes, and insert wood bolts (B) to secure base plate (A) on the wall.
6. Loosen thumbscrews (F) attached on shade holder (E).
7. Insert neck section of glass shade (G) into shade holder (E), and secure tightening thumbscrews (F). **DO NOT OVER-TIGHTEN!**
8. Insert light bulb into socket.
9. Restore power to outlet box and check operation of fixture.
10. Assembly is complete.

ADJUSTMENT INSTRUCTIONS:

1. Loosen the set screw on location ball (C).
2. Move location ball (C) closer or farther from counterweight (D), until it is at the correct separation distance.
3. Double check that the shade cannot contact the floor when fully lowered.
4. Tighten the set screw.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.