## CHESTERFIELD FRAMED PANEL BED

## PARTS INCLUDED

A [1] Headboard


B [2] Side Rail

C [1] Footboard

D [5] Cross Support Slat

E [1] Center Support Slat

F [2] Center Support Slat Foot (With adjustable glide)

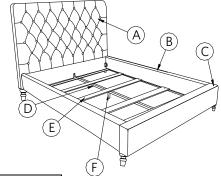

NO.	ITEM	DESCRIPTION	QTY
1		Allen Wrench	1 pc
2	(1)	Allen Head Bolt(0.8cm Dia)	2 pcs
3	(1)	Allen Head Bolt (0.6cm)	2 pcs
4		L Shaped Bracket	2 pcs
5		Big Screw(5cm)	10 pcs
The bardware is packed with the Headboard			

**★★★** The hardware is packed with the Headboard.

## **TOOLS NEEDED**

Phillips Head Screwdriver (no included)



## **ASSEMBLY INSTRUCTIONS**

Bed must be assembled by at least two people.

Please read instructions carefully before assembling bed.

Use the above parts and hardware list to identify each component.

Keep all packing materials until assembly is complete to avoid loss of smaller parts.

- 1. Place the Headboard (A) on a flat protected surface.
- 2. Stand the Headboard (A) upright and align the Side Rail (B) at the base of the Headboard as shown in Diagram I.
- 3. Repeat the step 2 with the Footoard (C).
- 4. Attach the Cross Support Foot (F) onto the Center Support Slat (E) as shown in Diagram II.
- 5. Attach the L-Shaped Brackets (4) to the ends of Center Support Slat (E) and tighten with Allen Head Bolt (3) & Allen Wrench, as shown in Diagram III.
- 6. Place the Cross Support Slat (D) into the cleats on the inside of Side Rail (B), screw the ends of the Cross Support Slat (D) to the cleats using Screw (5) in Diagram IV.

1. Spot clean only with a soft, damp cloth.

