

ROLLER + SOLAR SHADES INSTALLATION INSTRUCTIONS

GETTING STARTED:

Carefully unpack your shades and check to make sure you have the following parts. We recommend reading through these instructions before starting the installation.


PARTS INCLUDED:

- Screws
- 2 mounting brackets
- Tension device


Please Note: Brackets must be securely attached to the mounting surface. If your screws cannot attach to wood studs, please use a different fastener, which can be found at any hardware store.

TOOLS YOU WILL NEED:


- Drill with a $\frac{1}{8}$ " bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure

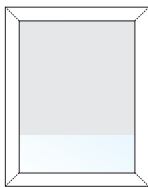


INSIDE MOUNT

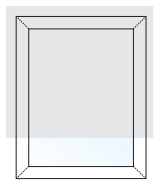


OUTSIDE MOUNT

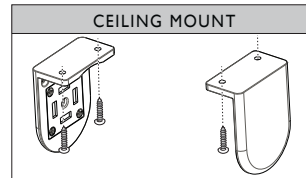

CEILING MOUNT

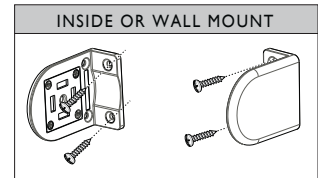

INSIDE OR WALL MOUNT

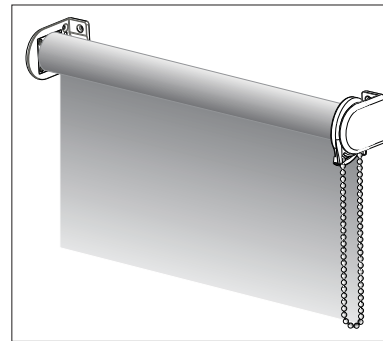


SHOWN AS REGULAR ROLL TYPE


1A. INSTALLING YOUR BRACKETS: INSIDE MOUNT

Attach the brackets to the window frame, window molding, wall or ceiling, as shown. Brackets are universal, so control side may be mounted on either side. There are 5 easy ways to install brackets. Choose the one best suited to your needs.


INSTALL BRACKETS UPWARD

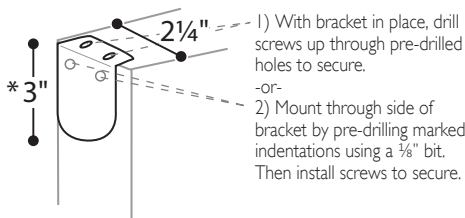

INSTALL BRACKETS STRAIGHT ON

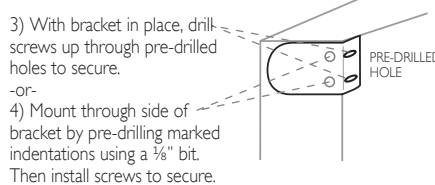

SHALLOW DEPTH BRACKET INSTALLATION

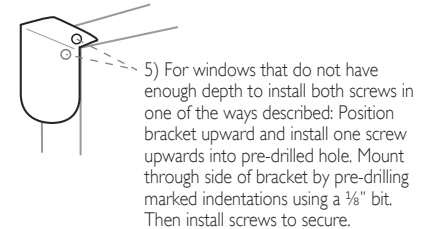


*** Please Note:** For thicker fabrics or longer lengths, we may provide an extension bracket to accommodate a larger roll diameter. In this case, the measurement from the "foot" to the curved area of the bracket will be $3\frac{3}{4}$ ".


1B. INSTALLING YOUR BRACKETS: OUTSIDE MOUNT

Fit the shade into the brackets and center the shade over the window (this may take two people). With a pencil, mark the wall on the side of one bracket. Remove shade and then attach the one bracket with two screws. Next, insert the shade into the second bracket. Hold shade up and insert other end into the already mounted bracket, making sure that the shade is level. Mark the wall on the side of the second bracket. Remove shade and install second bracket with two screws.


*** Please Note:** For thicker fabrics or longer lengths, we may provide an extension bracket to accommodate a larger roll diameter. In this case, the measurement from the "foot" to the curved area of the bracket will be $3\frac{3}{4}$ ".

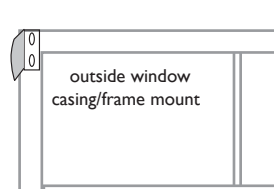

outside window casing/frame mount

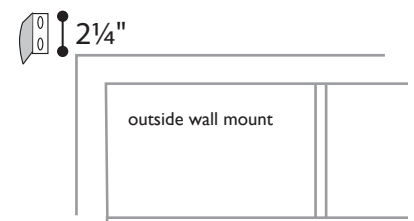

outside wall mount

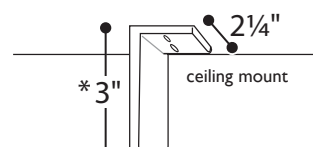

ceiling mount

ROLLER + SOLAR SHADES INSTALLATION INSTRUCTIONS *(continued)*



2. INSERTING THE SHADE:

With the brackets in place, you may install your shade.


Step A: Put the spring-loaded pin end into the round hole of the bracket. Pushing the pin end toward its bracket, insert the hooks on the control side straight into the two slots in the bracket.

Step B: Once the two hooks are through the slots, gently pull down on the control side until the two hooks have locked securely to the bracket. The bottom of the control side should point straight down.

Please Note: Roller shades are not meant to be lowered past the ordered length. The shade will include additional material that automatically adds length to conceal the roller tube and to help secure the fabric on the roll. The metal ball stops on the chain prevent the shade from being raised or lowered past its limits.

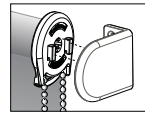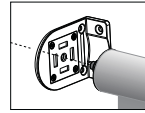

STEP B

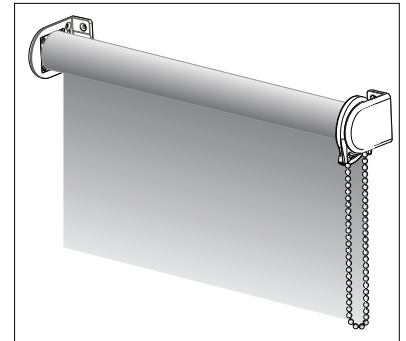

SHOWN AS REGULAR ROLL

3. INSTALLING TENSION DEVICE:

Mount Shade in Window: Shade should be mounted as instructed.


Consider Position of Tension Device: The tension device should be positioned on the window frame or the wall so that the device and control cord/chain do not interfere with raising or lowering the shade.

Install the tension device so that the bead chain is taut without stretching or pulling down on it. Stretching the bead chain will cause excessive wear. Do not twist or cross the control cord/bead chain.

On inside-mount shades, the tension device may be mounted to the windowsill or side window frame.


On outside-mount shades, the tension device may be mounted to the wall.

Install Tension Device: Press and hold the back spring on the tension device that is pre-installed at the top of the continuous loop near the shade mechanism (clutch). With the spring held, slide the device down to the bottom of the loop to position the device.

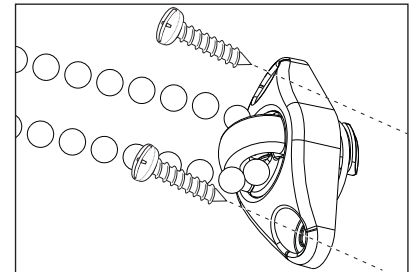

Insert and secure the two screws through the holes in the device. The loop should now pass freely through the tension device.



Please Note: The mounting screws must be secured to a solid surface. If your screws cannot attach to wood studs, please use a different fastener, which can be found at any hardware store.

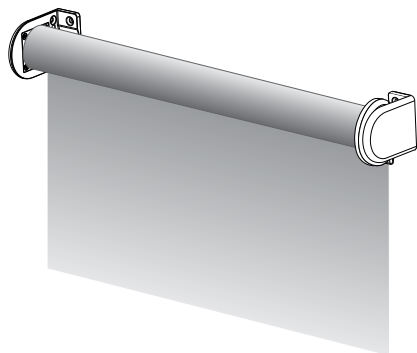**PARTS INCLUDED:**

- 4x Screws (per shade)
- 2x Mounting Brackets (per shade)
- 1x Plug-In Charger w/Extension Cable
- 1x Motor Cap Cover
- Remote Control(s)

TOOLS YOU WILL NEED:


- Drill with a 1/8" bit and a Phillips bit
- Phillips Screwdriver
- Metal Tape Measure

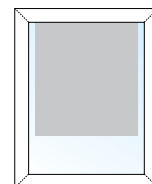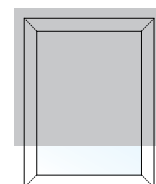MOUNT TYPE YOU'RE INSTALLING FOR:FOR INSIDE MOUNT
SEE SECTION 1AFOR OUTSIDE MOUNT
SEE SECTION 1B


Note: Your brackets must be securely attached to the mounting surface. If your screws are not secure, you'll have to use a different fastener, which can be found at any local hardware store.

1A. Mounting Your Brackets - Inside Mount


- Attach the brackets with two screws to the window frame, window molding, wall or ceiling, as shown.
- Brackets are universal so they may be mounted on either side.
- There are a few easy ways to install your brackets - choose which is best suited for your situation.

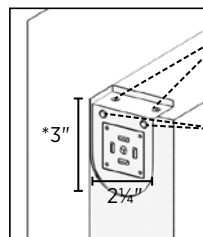INSTALL BRACKETS UPWARD

- A. With bracket in place, drill screws up through predrilled holes to secure.
- OR
- B. To mount through side of bracket, predrill marked indentations using 1/8" bit, then install screws to secure.

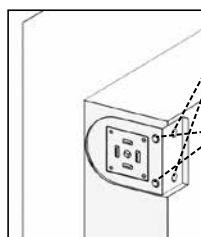INSTALL BRACKETS STRAIGHT ON

- A. With bracket in place, drill screws up through predrilled holes to secure.
- OR
- B. To mount through side of bracket, predrill marked indentations using 1/8" bit, then install screws to secure.

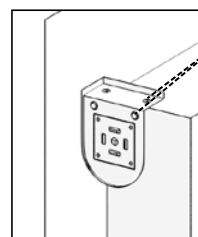
SHALLOW DEPTH BRACKET INSTALLATION

- Windows that do not have enough depth to install both screws in one of the 4 ways described: Position bracket upward and install one screw upward into predrilled hole and 1 screw into side of bracket through marked indentation (you will need to predrill this hole using 1/8" bit).


Note: For thicker fabrics, wider widths or longer lengths, you may be provided with an extension bracket to accommodate a larger shade diameter. In this case, the measurement from the base of the bracket to the pinnacle of the bracket's curve would be 3 3/4".

1B. Mounting Your Brackets - Outside Mount


- Fit the shade into both brackets and center the shade over the window (this may take two people).
- With a pencil, mark the wall on the side of one bracket, remove the shade and attach the bracket with two screws.
- Insert the shade into the next bracket, hold the shade up and insert the other end into the already mounted bracket (make sure shade is level).
- Mark the wall on the side of the second bracket, remove shade and attach the second bracket with two screws.

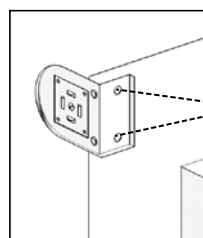OUTSIDE WINDOW CASING/FRAME MOUNT

- With bracket in place, drill screws through predrilled holes to secure.

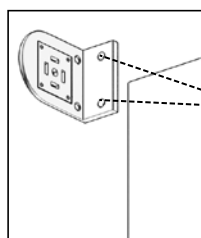OUTSIDE MOUNT

- With bracket in place, drill screws through predrilled holes to secure.

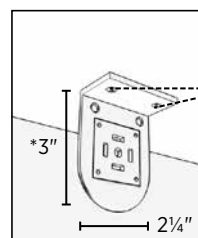CEILING MOUNT

- With bracket in place, drill screws through predrilled holes to secure.

Note: For thicker fabrics, wider widths or longer lengths, you may be provided with an extension bracket to accommodate a larger shade diameter. In this case, the measurement from the base of the bracket to the pinnacle of the bracket's curve would be 3 3/4".

RH

INSTALLING YOUR MOTORIZED ROLLER & SOLAR SHADES

2. Installing Your Shade

- With the brackets now installed, you may install your shade. Put the spring loaded pin end into the round hole of the bracket.
- Pushing the pin end towards its bracket, insert the hooks on the motor side straight into the two slots in the bracket [FIG 1].
- Once the two hooks are through the slots, gently pull down on the motor side until the two hooks have locked securely to the bracket (make sure hooks are facing down) [FIG 2].

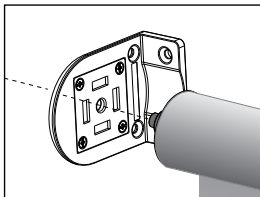


FIGURE 1 - Insert pin end


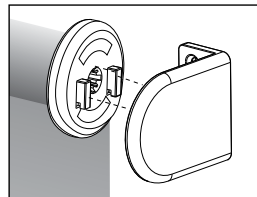


FIGURE 2 - Insert hooks and pull down

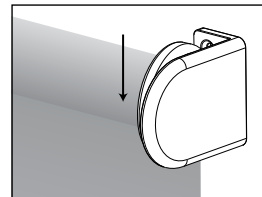


3. Powering on Your Shade


To Activate (Wake Up) Your Battery Motor

- The motor is fully charged and has been put into "Sleep Mode" to avoid operation during shipping.
- Press and hold the programming button on the motor head until the motor jogs up and down once.
- The shade is now no longer in "Sleep Mode" and is ready for use.

Warning: If you press and release the programming button quickly, the motor will lower to its lower limit. Be mindful of this during install process.

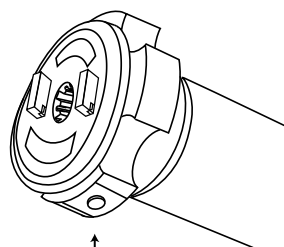

PROGRAMMING
BUTTON


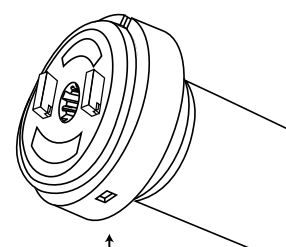


PROGRAMMING
BUTTON - RECESSED

4. Installing the Cap Cover

- Snap the cover over motor head and wires with the flat part of the cap towards the mounting bracket.
- Rotate clockwise or counterclockwise around the motor head to best hide antenna and power cord as needed.

Note: For extended remote range you can leave the antenna exposed.

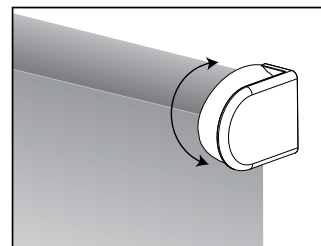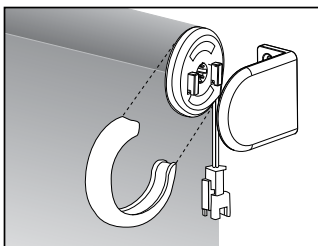

5. Operating Your Shade

- Your shades have been pre-programmed.
- A channel has been assigned to each motor based on your specifications.
- We've also set approximate upper and lower limits.
- For more information, please see the Quick Start Guide that came with your shade, or contact us via email at customwindows@restorationhardware.com or by calling 888.669.2809.

Care and Cleaning

Always clean with a low suction, handheld vacuum or dust with a soft, clean cloth or feather duster. If you're dealing with dirt and stains, we suggest using a Mr. Clean® magic eraser to spot treat dirt and stains. This is available online and at local home improvement stores.

Warranty

Motorized shades are covered by a 5-year warranty. This warranty covers any defects in materials or workmanship so long as the product is measured and installed according to instructions.