

Step 1

Insert carriage bolts through bottom of GVS base.


Please note: galvanized steel plate should have the recessed holes on the bottom.

Step 2

Clean GVS base surface from any dirt or grease then peel back plastic on adhesive tape and secure cover to GVS base.

Step 3

Mount stem plus gasket and adjust the level by using the leveling nuts, use the umbrella canopy as a reference point.

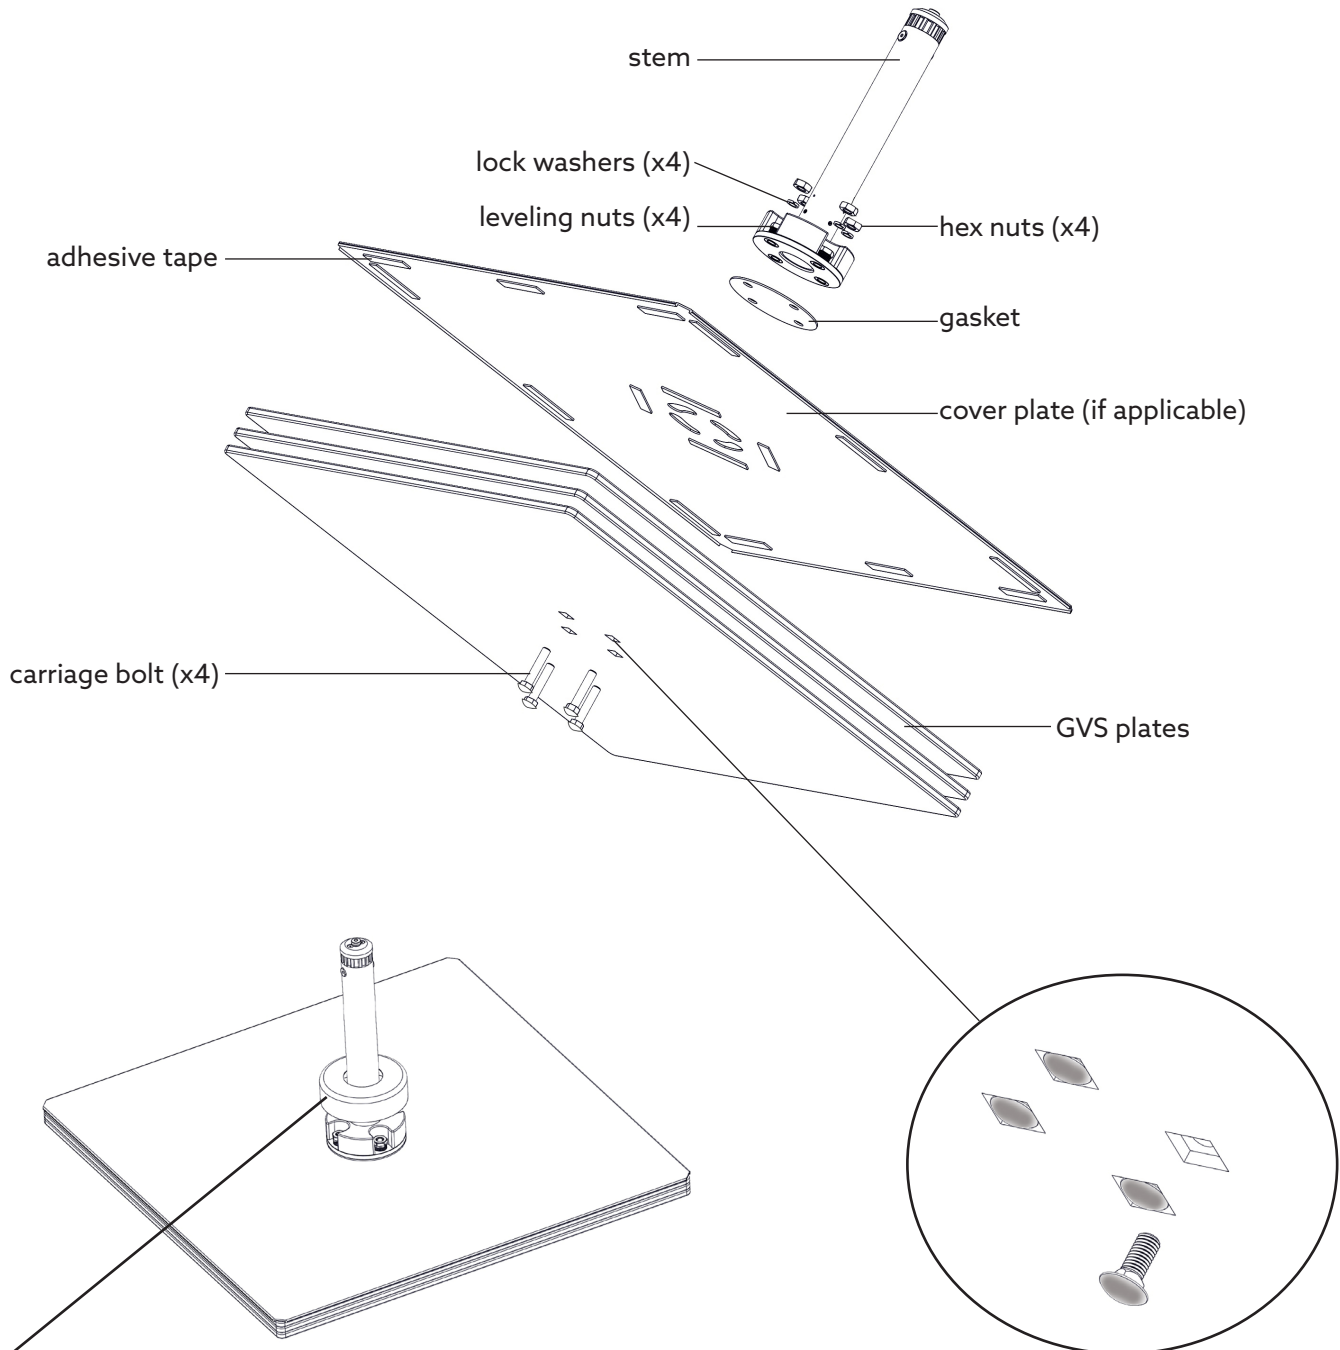

Note: Add beauty cover before mounting umbrella.

note: recessed holes on the bottom.