

# RESTORATION HARDWARE


## VENDOME LINEAR CHANDELIER 54"

### PARTS ENCLOSED

- |                         |                          |
|-------------------------|--------------------------|
| (A) Plastic Anchors (6) | (J) Metal Covers (2)     |
| (B) Mounting Plate (1)  | (K) Screws (2)           |
| (C) Screws (6)          | (L) Hanging Loops (2)    |
| (D) Canopy (1)          | (M) Connection Tubes (2) |
| (E) Mounting Screws (2) | (N) Threaded Joints (2)  |
| (F) Canopy Screws (2)   | (O) Glass Shades (8)     |
| (G) Mounting Loops (2)  | (P) Support Bars (8)     |
| (H) Canopy Rings (2)    | (Q) Cap Nuts (16)        |
| (I) Closable Links (2)  | (R) Light Bulbs (8)      |

### SAFETY CABLE ASSEMBLY

1. Join fixture safety cable with safety cable from ceiling.
2. Wrap both safety cables around the cable lock nut.
3. Secure by tightening both hex nuts until tight.

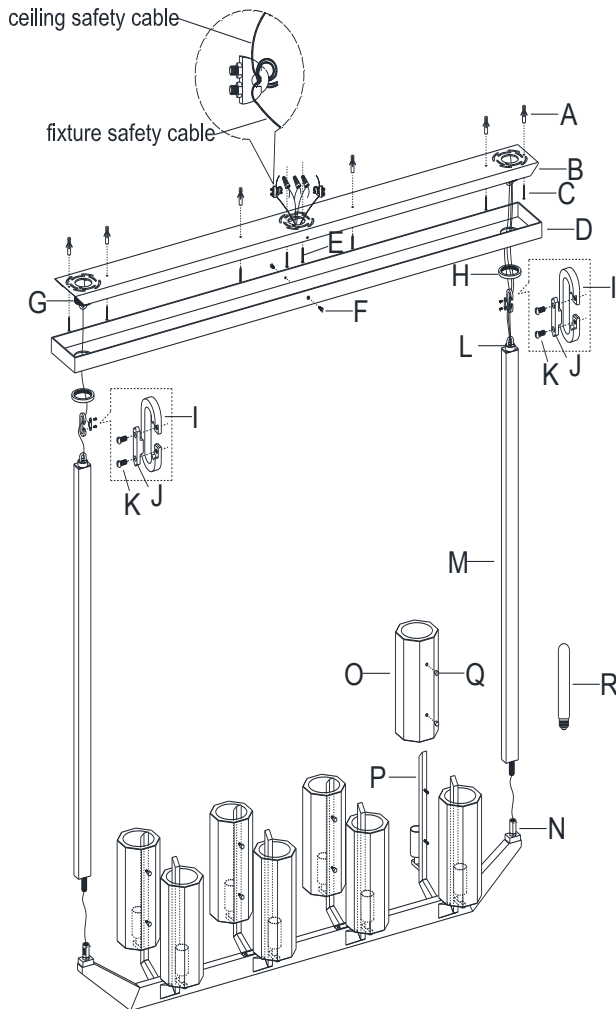

### IMPORTANT SAFETY INSTRUCTIONS

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to eight (8) 40-watt maximum Type T bulbs (30-watt light bulbs (R) included) or eight (8) 9-watt compact fluorescent light bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb.
6. This fixture must be supported independent of an outlet box. Professional installation is strongly recommended.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects, and other reproductive harm. Wash hands after installing, handling, cleaning, or otherwise, touching this light fixture.

### TO ASSEMBLE

1. Carefully remove all parts from the box and remove all plastic covering.
2. Thread the inner rod of connection tubes (M) onto the threaded joints (N) by turning rod in a clockwise direction.
3. Remove mounting plate (B) from canopy (D) by removing canopy screws (F).
4. Place mounting plate (B) at desired location on the ceiling outlet, and mark center points locations for six mounting holes with a pencil. Remove mounting plate (B).
5. Drill small holes on each point location on the ceiling; each hole should be big enough for accommodate plastic anchors (A). Push plastic anchors (A) into the holes on the ceiling.
6. Affix mounting plate (B) to wall outlet box by aligning the holes, inserting screws (C) into plastic anchors (A), and mounting screws (E) to the ceiling outlet box.
7. Slide canopy rings (H) and canopy (D) onto the connection tubes (M).
8. Remove the metal covers (J) from closable links (I) by removing screws (K).
9. Hang chandelier by joining mounting loops (G), closable link (J), and hanging loop (L) together. Secure by replacing metal cover (J) to closable link (I). Tighten with screws (K).
10. Gently pull the wiring from the wall outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting plate (B).
11. Connect the safety steel wire from the fixture and the safety cable from ceiling. (Refer to the illustration.)
12. Carefully inspect the chandelier's two fixture wires. One has very fine ridges molded into the plastic covering – this is the NEUTRAL WIRE. The second wire's covering is smooth – this is the HOT WIRE. The bare wire is the GROUND WIRE.
13. Connect the GROUND WIRE from the fixture with the ground wire (usually bare) from your ceiling box using a wire nut. If your house does not have ground wire, then attach the GROUND WIRE from the fixture to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
14. Connect the NEUTRAL WIRE from your fixture with the neutral wire (usually white) from your ceiling box using a wire nut.
15. Connect the HOT WIRE from your fixture with the hot wire (usually black) from your outlet box using a wire nut. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
16. Raise canopy (D) to the affixed mounting plate (B) and secure with canopy rings (H).
17. Remove cap nuts (Q) from the nipples of support bars (P), attach shades (O) to the support bars (P), letting the nipple pass through the holes on shades (O), and secure with cap nuts (Q).
18. Insert the recommended bulbs (R) into the sockets.
19. Restore power to outlet box and check operation of fixture. Assembly is complete.

### CARE INSTRUCTIONS

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.