MONTESQUIEU LINEAR CHANDELIER 72"


PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Mounting Loop (1)
- (C) Closable Link (1)
- (D) Metal Cover (1)
- (E) Screws (2)
- (F) Hanging Loop (1)
- (G) Canopy (1)
- (H) 18" Connection Rods (2)
- (I) Canopy Ring (1)
- (J) Connective Tubes (5)
- (K) Threaded Joint (1)
- (L) 12" Connection Rods (2)
- (M) 6" Connection Rods (2)
- (N) Hub (1)
- (O) Crystals (8)
- (P) Shades ()
- (Q) Bulbs (8)
- (R) Support Rod (1)
- (S) Set Screws (2)

SAFETY CABLE

ASSEMBLY

- Join fixture safety cable with safety cable from ceiling.
- Wrap both safety cables around the cable lock nut.
- Secure by tightening both hex nuts until tight.

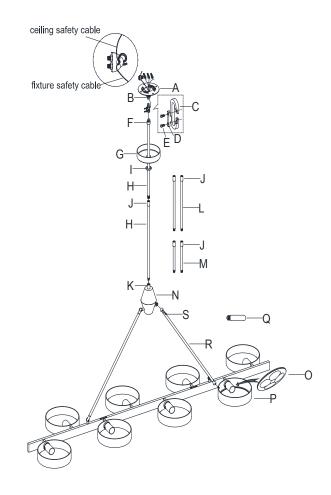



MONTESQUIEU LINEAR CHANDELIER 72"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for eight (8) 40-Watt maximum Type T incandescent light bulbs (not included), or eight (8) 2-Watt Type T LED light bulbs (included) (Q). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic covering.
- Remove Set Screws (S). Attach one end of Support Rod (R) to Hub (N). Attach end of Support Rod (R) to the light fixture. Secure by tightening Set Screws (S).
- Determine the hanging length of chandelier. Connect some or all Connection Rods (H), (L) (M) and Connective Tubes (J) to the Threaded Joint (K) according to the height needed.
- Slide Canopy Ring (I) and Canopy (G) onto the Connection Rod (H).

ASSEMBLY & INSTALLATION CONT.

- 5. THIS FIXTURE MUST BE SUPPORTED INDEPENDENT OF AN OUTLET BOX.
- Attach Mounting Plate (A) to ceiling and secure with mounting screws appropriate for your installation (not included). Check with your local hardware store.
- 7. Remove the Metal Cover (D) from Closable Link (C) by removing Screws (E).
- Hang chandelier by joining Mounting Loops (B), Closable Link (C), and Hanging Loop (F) together. Secure by replacing Metal Cover (D) to Closable Link (C). Tighten with screws (E).
- Gently pull the wire from ceiling outlet box and allow the wire to hang. Thread the wire through the center hole in Mounting Plate (A).
- Connect the safety steel wire from the fixture and the safety cable from ceiling. Refer to the illustration.
- 11. Carefully inspect the chandelier's two fixture wires. One has very fine ridges molded into the plastic covering this is the neutral wire. The second wire's covering is smooth this is the hot wire. The bare wire is the ground wire.
- 12. Connect the ground wire from the fixture with the ground wire (usually bare) from your ceiling box using a wire nut. If your house does not have ground wire, then attach the ground wire from the fixture to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- Connect the neutral wire from your fixture with the neutral wire (usually white) from your ceiling box using a wire nut.
- Connect the hot wire from your fixture with the hot wire (usually black) from your outlet box using a wire nut. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
- 15. Raise Canopy (G) to the affixed Mounting Plate (A) and secure with Canopy Ring (I).
- 16. Place Crystals (O) into the Shades (P).
- 17. Insert Bulbs (Q) into the sockets.
- 18. Restore power to outlet box and check operation of fixture.
- 19. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.