RESTORATION HARDWARE


Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) MOUNTING PLATE
- (B) MOUNTING PLATE SCREW (X2)
- (C) CANOPY
- (D) LOOP (X2)
- (E) CANOPY SCREW (X4) (O) WASHER (X3)
- (F) QUICK LINK (X2)
- (G) LOOP (X2)
- (H) EXTENSION (X8)
- (I) SHADE WASHER (X2)

- (J) SHADE WASHER (X2)
- (K) SPLIT WASHER (X2)
- (L) TUBE (x2)
- (M) SHADE
- (N) TUBE (X3)
- (P) DIFFUSER
- (Q) FINIAL (X3)
- (R) WIRE NUT (X2)
- (S) SUPPORT HOLE (X4)

RECTANGLE SHADE CHANDELIER

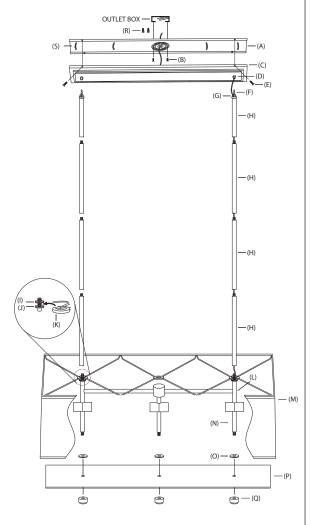

IMPORTANT SAFETY INSTRUCTIONS:

- *These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- *DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (6) 60W MAX. Type A bulbs.

To avoid risk of fire, do not exceed the recommended wattage.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) have sufficient time to cool down.

Do not subject the lamp to any shock while lit as shattering of bulbs may result.

TO ASSEMBLE:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/ CIRCUIT BREAKER.
- 2. Remove all parts from carton. Do not throw away any parts.
- 3. Remove mounting plate (A) from canopy (C) by removing canopy screws (E).
- 4. Guide wiring from outlet box through center hole in mounting plate (A). Affix mounting plate (A) to outlet box using mounting plate screws (B) provided. If desired, extra screws (not included) can be inserted through support holes (S) in mounting plate (A) for additional support.
- 5. Sit bottom section of fixture in a vertical position on a level surface. Place shade (M) over bottom section of fixture. Slide split washers (K) between shade washers (I) and shade washers (J). Secure position of shade (M) by turning shade washers (I) clockwise until they rest firmly against split washers
- 6. Measure desired drop for fixture to hang and add/remove extension tubes (H). Guide wiring through extension tubes before threading tubes together.
 - **ADD/REMOVE EXTENSIONS: (Un)Thread the threaded nipple of one extension into the threaded opening of the next extension. Make sure wiring is pulled tight when threading extensions together to prevent damage to the wire.**
- 7. Thread bottom extension tubes (H) onto threaded nipples at top of tubes (L).
- 8. Connect loops (G) and loops (D) with guick links (F).
- 9. Lift fixture to ceiling outlet box. Make proper electrical connection. A LICENSED ELECTRICIAN IS RECOMMENDED.
- 11. Attach ground wire from fixture (green or copper in color) to ground wire from outlet box.
- 12. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (R) and tightly wrap connection with electrical tape.
- 13. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (R) and tightly wrap connection with electrical tape.
- 14. Slide canopy (D) over mounting plate (A). Align holes in canopy (D) with holes in mounting plate (A).
- 15. Thread canopy screws (C) into holes to secure fixture to mounting plate (A).
- 16. Install six (6) 60W MAX. Type A bulbs into sockets.
- 17. Thread washers (O) on to threaded nipples on tubes (N).
- 18. Slide diffuser (P) over threaded nipples on tube (N). Hold diffuser (P) against washers (O).
- 19. Thread finials (Q) onto exposed threads of nipples on tubes (N) to secure position of diffuser (P) inside shade (M).

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.