


PARTS ENCLOSED:

- (A) Ground Wire
- (B) Cord Grip
- (C) Ceiling Bolt with threaded tube & Grounding Screw
- (D) Ceiling Rose
- (E) 2 Core Wire
- (F) Retaining Nut
- (G) Extension Tube
- (H) Horse Shoe Holder
- (I) Horse Shoe Socket
- (J) Locking Screw
- (K) Pendant

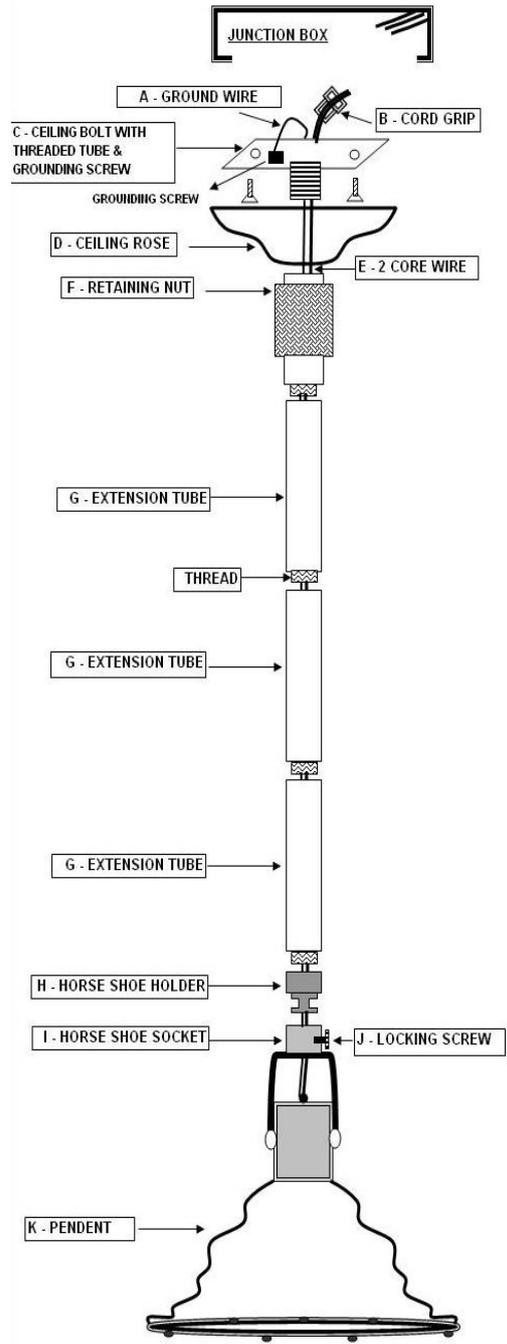

IMPORTANT PLEASE READ**IMPORTANT SAFETY INSTRUCTIONS:**

These instructions are provided for your safety. It is very important that they are properly read completely before beginning the installation of your fixture.

NOT SUITABLE FOR OUTDOOR, DAMP AND WET LOCATION.

DIRECT WIRE FIXTURE:

WE STRONGLY RECOMMEND INSTALLATION BY A LICENCED ELECTRICIAN.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb, making sure the bulb had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

TO ASSEMBLE:

1. Shut off the electrical supply from the main fuse box/circuit breaker.
2. Remove all parts from the carton. Do not throw away any parts.
3. Check if the grommets have been inserted in the components **Ceiling Bolt (C)**. If not, insert these yourself.
4. Affix the **Ceiling Bolt (C)** directly to the **Junction Box** using appropriate screws (not provided).
5. Assemble one Type A, MAX 100W bulb or MAX 20W SB LED into the socket of the **Pendant (K)** as explained in the separate sheet (see the attached sheet).
6. Open the wire coil (**2-Core wire (E)**) and the **Ground Wire (A)**) coming out from the **Pendant (K)** and lay them together.
7. Measure desired drop for fixture to hang and add/remove **Extensions Tubes (G)**. Weave both the wires (**2-Core Wire (E)** and **Ground Wire (A)**) through the **Horse Shoe socket** and then through the **Extension Tubes (H)** (two persons are required) before threading tubes together.
ADD/REMOVE EXTENSIONS: (Un)Thread the threaded nipple of one extension into the threaded opening of the next extension. To prevent damage pull wiring tight when threading extensions together .
8. Attach the **Extension Tubes (G)** together along **Horse Shoe Holder (H)** on one side and **Retaining Nut (F)** on the other side.
9. Carefully lift the **Pendant (K)** and place it in on the elevated position (e.g. on a step ladder) in such a way that the wire cords can freely reach the ceiling Junction Box .
10. Guide the wires coming out from the **Pendant (K)** and running through the Horse Shoe, followed through the holder, then **Extension Tubes (G)**, **Retaining Nut (F)** and the **Ceiling Rose (D)** in the order mentioned.
11. Guide the wires through the **Threaded Tube** of the **Ceiling Bolt (C)**.
12. Now you can see the wires coming out from the **Ceiling Bolt (C)**. Now, put the **Cord Grip (B)** on the wires and tighten the screw in the **Cord Grip (B)** to secure the wires.
13. **MAKE PROPER ELECTRICAL CONNECTIONS. THIS INSTALLATION SHOULD BE DONE BY A QUALIFIED LICENSED ELECTRICIAN.**
14. Connect the Grounding Wire (silver color un-laminated wire) from the **Pendant (K)** to the **Grounding Bolt** (painted green color) attached to the **Ceiling Bolt (C)**.
15. Fasten wires together with a plastic Wire Connector (not provided) as follows:
Connect the Neutral Wire of the **Pendant (K)** to the to the Neutral Wire in the outlet box through the **Wire Connector (B)**.
Connect the Live Wire of the **Pendant (K)** to the Live Wire in the outlet box through the Wire Connector.

TO ASSEMBLE CONT:

16. Slide the **Ceiling Rose (D)** and place it over the **Ceiling Bolt (C)**. Screw **Retaining Nut (F)** to the Threaded Pipe of **Ceiling Bolt (C)** upwards so that the **Ceiling Rose (D)** is in contact with the ceiling.
17. Attach Pipes to **Retaining Nut (F)**.
18. Now insert the **Horse Shoe Holder (H)** to the **Horse Shoe Socket (I)** and tighten the **Locking screw (J)**, Check whether the connection is sufficiently strong.
19. After **CAREFULLY** checking leave the **Pendant (K)**.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.

After hanging the complete Pendant, please do not turn the Pendant to avoid unscrewing of the **Extension Tubes (G) / Retaining Nut (F)**.