
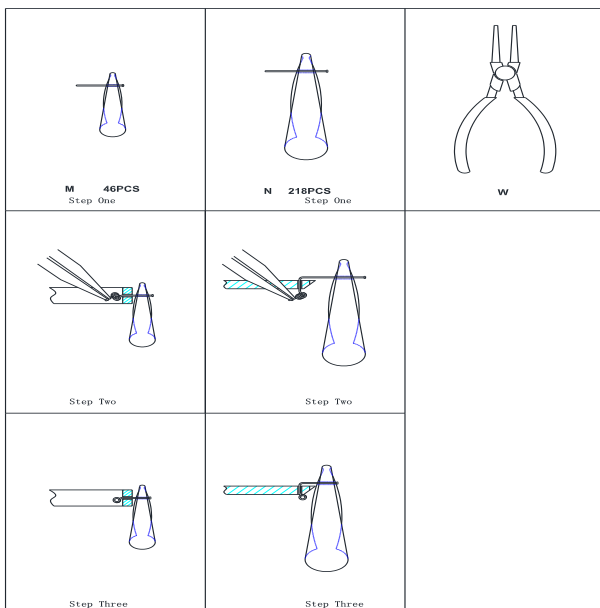


# RESTORATION HARDWARE

## LISCIA CHANDELIER

### PARTS ENCLOSED

- (A) Wire Nuts
- (B) Threaded Nipple Pipe
- (C) Ceiling Loop
- (D) Canopy
- (E) Lock Collar
- (F) Chain
- (G) Chain End Link
- (H) Top Ring
- (M) Crystal Drops
- (N) Crystal Drops
- (M1) Hook
- (N1) Hook

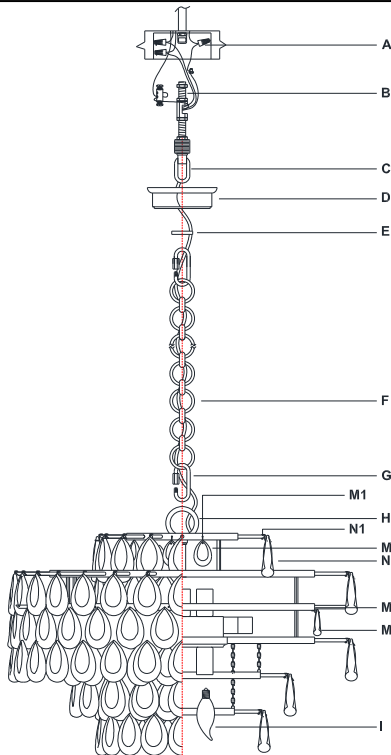

### IMPORTANT SAFETY INSTRUCTIONS

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN. This fixture has been rated for up to (12) 40-WATT MAX. E12 TYPE CA BULBS or self-ballasted CFL bulb 9W (not included). To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS

1. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.
3. Do not touch bulb when fixture is turned on or look directly at lit bulb.
4. Keep flammable materials away from lit bulb.
5. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.
6. Carefully unpack each piece in top layer of packing prior to removing retain all packing material until inspection and installation are final.
7. For a safe and secure installation, please ensure that the electrical box to which this fixture will be mounted is properly attached to a structural member of the building.

### TO ASSEMBLE

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!

1. Carefully remove all parts from the box.
2. A 1/4" threaded nipple (B) must be installed in your outlet box . Then install the threaded nipple (B) into the outlet box .
3. Attach the crystal drops (M) to hook (M1).
4. Attach the crystal drops (N) to hook (N1).
5. Insert bulbs (not included) into the sockets.
6. Unscrew the threaded collar on the chain end link (G) and attach it to the top ring (H). Close the threaded collar to secure the fixture body.
7. Let canopy (D) and lock collar (E) go through the chain (F).
8. With the fixture dimension as a guide, shorten the chain (F) as needed using a pair of chain pliers.
9. Unscrew the threaded collar on the other chain end link, raise the fixture then attach chain end link to the ceiling loop (C). Close the threaded collar to secure.
10. Unwrap the wiring from the top of the fixture body. Weave the power supply cord and the ground wire through the chain (F).
11. When you reach the canopy and ceiling loop, measure the wires then cut. Be certain to leave enough to connect inside of the outlet box .
12. Strip the insulation back on the two power supply wires about 5/8".
13. Twist the power supply and ground wire together and push through the center hole of the ceiling loop (C).
14. Connect the fixture ground (bare) wire with the ground wire from the outlet box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box .
15. Connect the fixture Neutral wire (ribbed, no markings) with the neutral wire from the outlet box using wire nut (A).
16. Connect the fixture Hot (smooth edge) wire with the hot wire from the outlet box using wire nut (A).
17. Tuck these wire connections neatly into the outlet box to secure.
18. Put canopy (D) to ceiling loop (C), and secure with lock collar (E).
19. Installation is complete, turn on power at fuse or circuit breaker.

### CARE INSTRUCTIONS

Wipe all surfaces with a soft dry cloth. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.