














RESTORATION HARDWARE

TEARDROP GLASS CHANDELIER 43"

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Mounting Screws (not included)	8
(B)		Ceiling Hook	1
(B1)		Canopy	1
(B2)		M6 Decorative Nut	4
(C)		Wire Nut	3
(D) (D1)		Chain Quick Link	4
(D2)		Quick Link	
(E)		GU10 LED Spot light	12
(F)		E12 LED Bulb	14
(G)		350mm Glass Drop	84
(H)		400mm Glass Drop	87
(I)		Suction Cup	2
(J)		Body	1

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for 12 pcs GU10 LED bulb 5-watt maximum and 14pcs E12 LED bulb 5-watt maximum.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 1161kg (2560 lbs) is required.
5. The manufacturer and distributor accepts no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

Warnings:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Crystal & Iron
 Height: 134 cm (52.76in)
 Diameter: 110 cm (43.31 in)
 Weight: 232.25 kg (512.1lbs)
 Grounded / Hardwired

TO ASSEMBLE :


1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Unlock the quick link (D2) at the opposite end of the chain (D) to attach the body (J).
4. Loosen the M6 decorative nut (B2) and remove the ceiling hook (B) from the canopy (B1). Attach ceiling hook (B) to the ceiling with mounting screw (A).
5. Fasten the GU10 LED spot light (E) to the lamp holder of body (J) by Suction cup (I).
6. Unlock the quick link (D1) at the opposite end of the chain (D) to attach the Ceiling Hook (B).
7. The grounding wire from the outlet box shall also wrap round the green headed grounding terminal on the ceiling hook (B) and wrap the connection with electrical tape. Connect the hot wire to the hot junction box wire (usually black or smooth) with a wire nut (C) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with wire nut (C) and wrap the connection with Electrical tape.
8. move canopy (B1) up to the ceiling hook (B), then fasten the M6 decorative nut (B2).
9. Fasten E12 LED lightbulb (F) to the lampholder of body (J).
10. Hang the glass drops (G and H) according to the drawing shows in page 2.
11. Restore power to the junction box and testing ceiling light fixture.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.

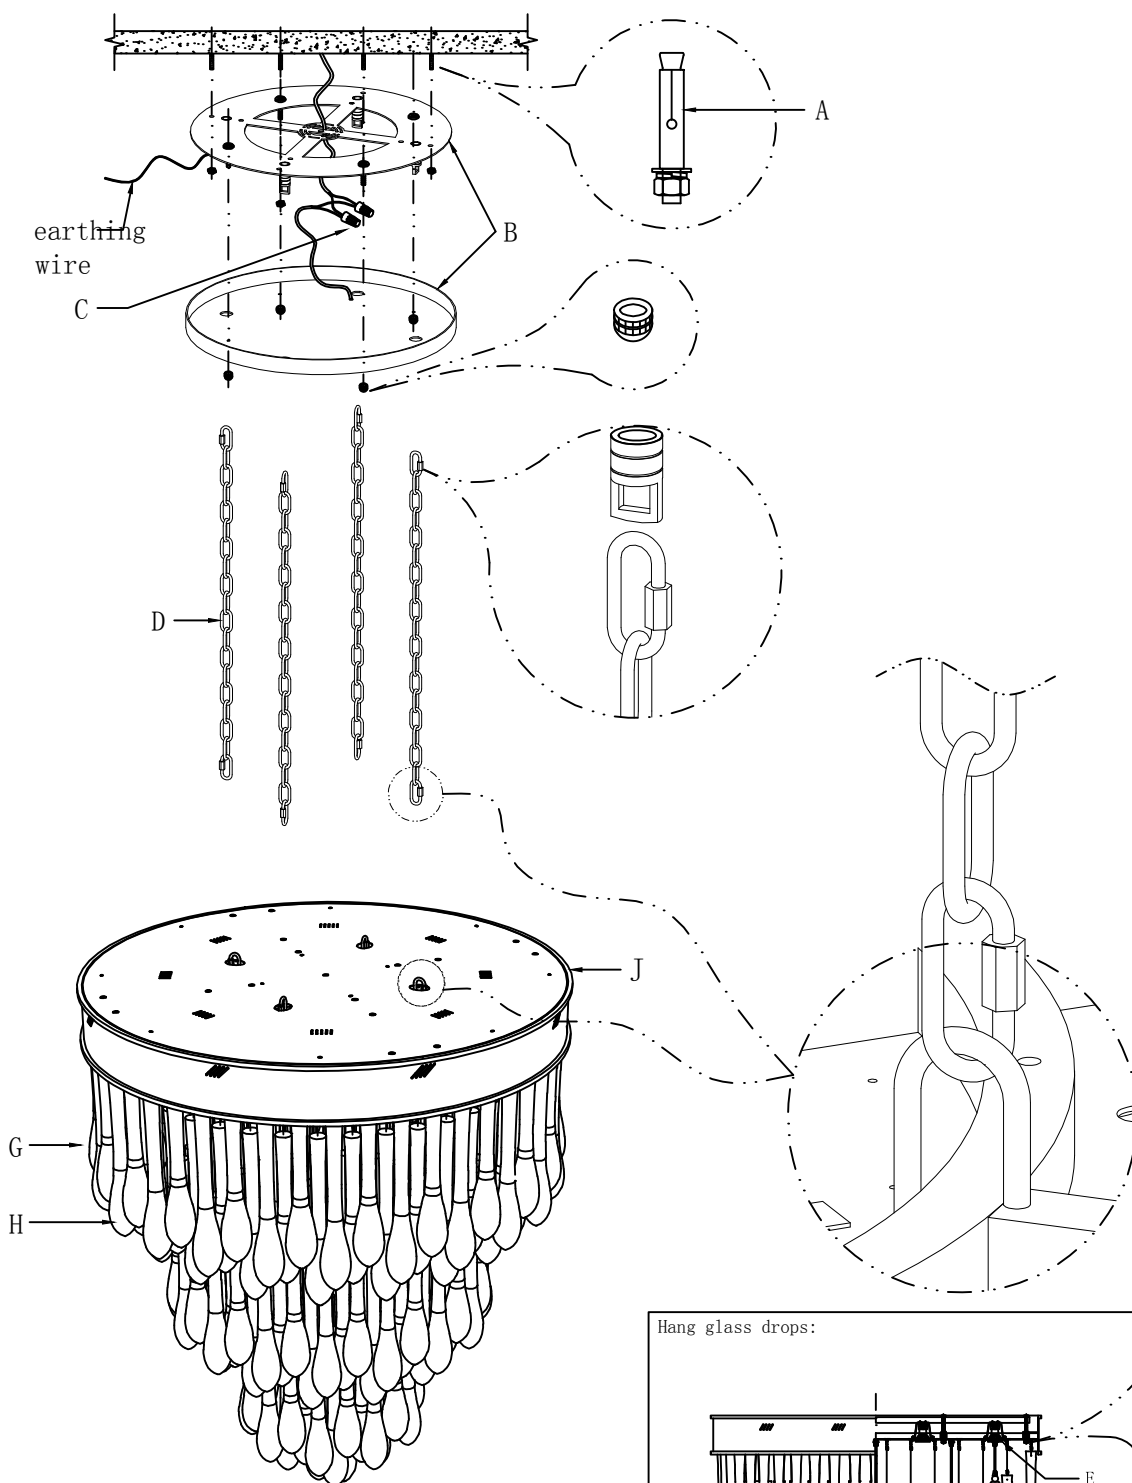

Hang glass drops:

