



## MARTINEAU ROUND CHANDELIER 60"

ASSEMBLY & INSTALLATION INSTRUCTIONS


**UNITED STATES ENGLISH**

**MARTINEAU ROUND CHANDELIER 60"****PARTS INCLUDED**

- (A) Mounting Plate (1)
- (B) Canopy (1)
- (C) Hex Nut (1)
- (D) Ring Terminals with Bare Ground Wire (1)
- (E) Tooth Lock Washer (1)
- (F) 5/16"L Hex Socket Set Screws (3)
- (G) 3/4"L Threaded Nipple (1)
- (H) Hanging Mechanism (1)
- (I) 19" Extension Threaded Pipes (2)
- (J) 18" Extension Rods (2)
- (K) 13" Extension Threaded Pipes (2)
- (L) 12" Extension Rods (2)
- (M) 7" Extension Threaded Pipes (2)
- (N) 6" Extension Rods (2)
- (O) Couplings (5)
- (P) 10/64"L Hex Socket Set Screw (1)
- (Q) Threaded Head (1)
- (R) Shades (8)
- (S) Curved Panels (8)
- (T) Thumb Screws (16)
- (U) Lightbulbs (8)
- (V) Allen Wrench (1)
- (W) Wire Nuts (3)

**TOOLS NEEDED**

Phillips Screwdriver (not included)

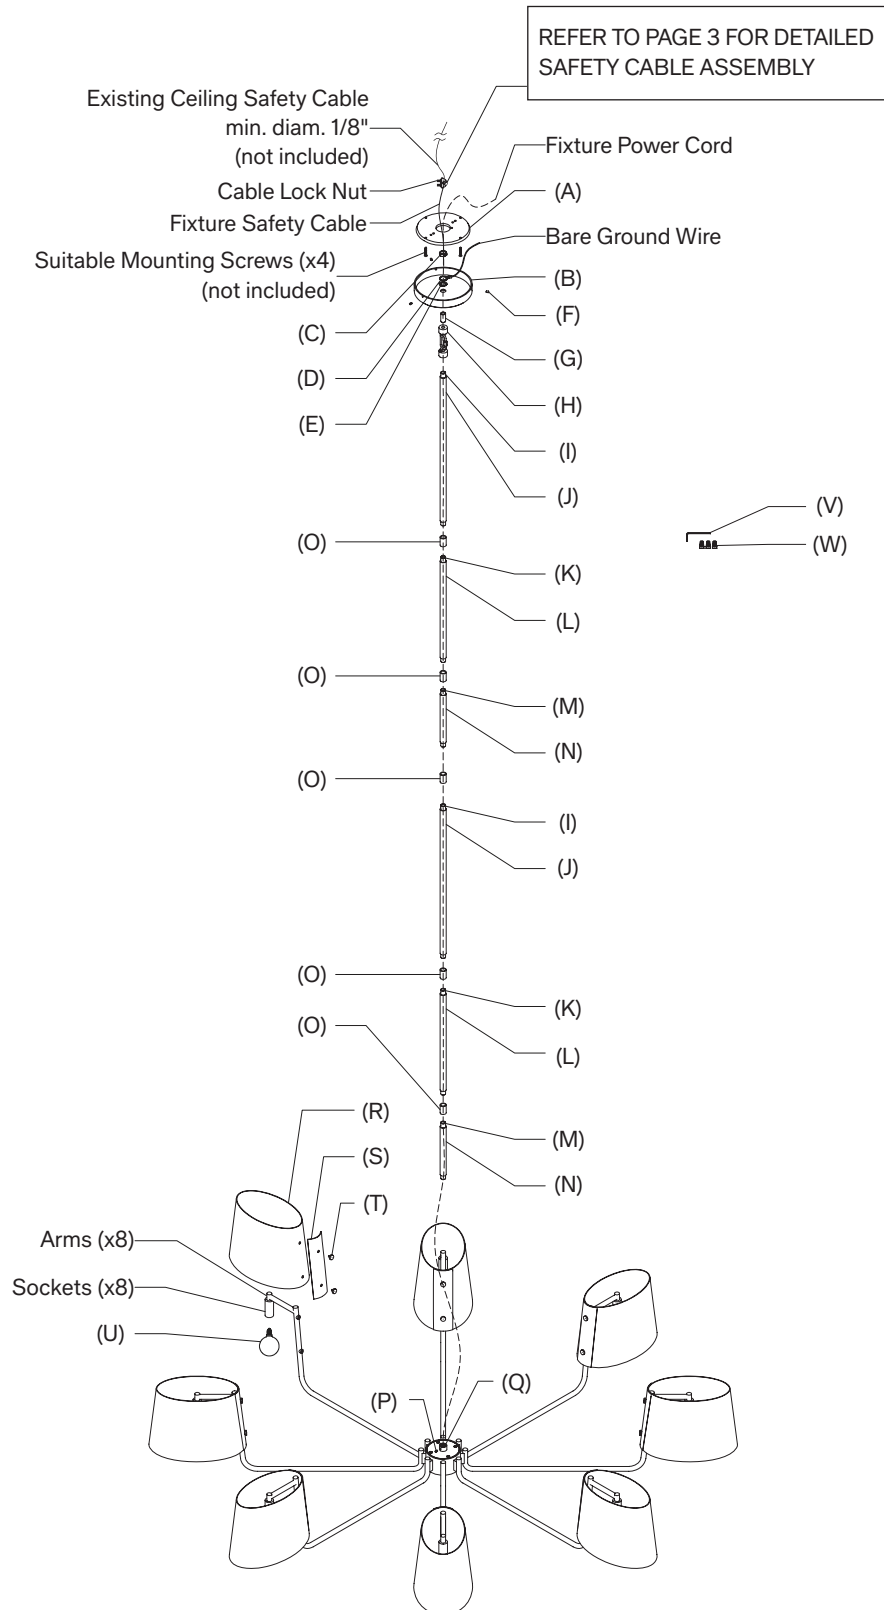

**IMPORTANT: PLEASE READ**

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A WOODEN STRUCTURAL BEAM. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

**IMPORTANT SAFETY FEATURES****BULBS**

This fixture has been rated for up to eight (8) 5.5-watt maximum Type G16.5 E12 base LED lightbulbs (included). To avoid the risk of fire, do not exceed the recommended wattage.

**VAULTED-CEILING COMPATIBILITY**

This fixture is not vaulted-ceiling compatible.

**DIMMER-SWITCH COMPATIBILITY**

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer.

**CEILING REINFORCEMENT**

Fixtures weighing 50 lb. or more will require additional reinforcement above the ceiling where they are to be installed.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.


**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.


**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**

**INSTALL SAFETY CABLE:**



1. Remove Hex Nuts from Cable Lock Nut and pull Cable Lock Nut from Cable Clip.

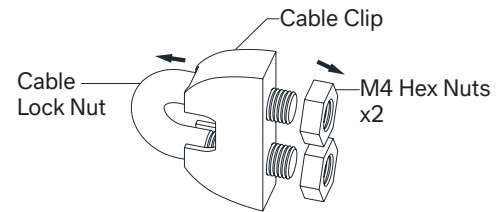

2. Join Fixture Safety Cable with Safety Cable from ceiling and wrap both Safety Cables around the Cable Lock Nut.

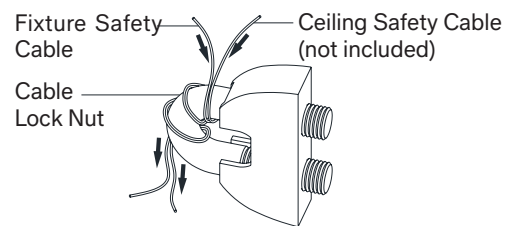

3. Secure by tightening both Hex Nuts.

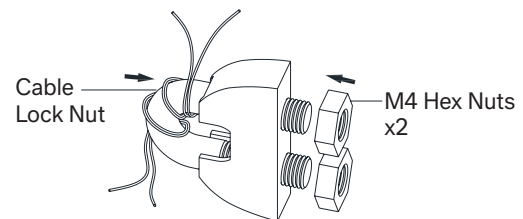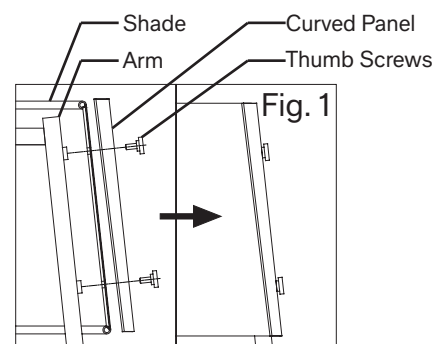**INSTALLING THE SHADE**

**ASSEMBLY AND INSTALLATION****SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of pendant. Connect the Threaded Head (Q) to some or all Extension Rods (J), (L), (N), Extension Threaded Pipes (I), (K), (M), and Couplings (O) according to the height needed. Secure the first Threaded Pipe with Hex Socket Set Screw (P). Feed wires and safety cable through the Extension Threaded Pipe at the same time.
3. Connect the Hanging Mechanism (H) to Extension Threaded Pipe (I), (K), and (M).
4. Place the Canopy (B), Tooth Lock Washer (E) and Ring Terminals with Bare Ground Wire (D) to the Hanging Mechanism (H) and secure by tightening the Hex Nut (C) to the 3/4"L Threaded Pipe (G). Feed wires and safety cables through the 3/4"L Threaded Pipes (G) at the same time. The wires and safety cable will come out the backside of the Canopy (B).
5. Attach the Mounting Plate (A) to the ceiling's outlet box with the suitable mounting screws (not included) and proper fasteners from your local hardware store.
6. Carefully inspect the pendant's fixture wires. Clear wire with White Stripe is the NEUTRAL WIRE. Clear unmarked wire is the HOT WIRE. The clear wire with Green Stripe is the GROUND WIRE.
7. Carefully lift the fixture's Canopy (D) close to the outlet box for wiring and to connect the safety cables.
8. Secure the safety cable from the fixture and the existing ceiling's safety cable (not included) using the cable lock nut (see Page 3).
9. Connect the GREEN GROUND WIRE and BARE GROUND WIRE from the fixture with the ground wire (usually bare) from your outlet box using a Wire Nut (W). If your house does not have a ground wire, attach the GROUND WIRES from the fixture to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. Connect the NEUTRAL WIRE from your fixture with the neutral wire (usually white) from your outlet box using a Wire Nut (W).
11. Connect the HOT WIRE from your fixture with the hot wire (usually black) from your outlet box using a Wire Nut (W). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. Tuck the wire connections neatly into the ceiling's outlet box.
13. Secure the Canopy (B) to the affixed Mounting Plate (A) by tightening each 5/16"L Hex Socket Set Screws (F) with the Allen Wrench (V).
14. Secure the Shades (R) and Curved Panels (S) to each of the arms with the Thumb Screws (T) (see Fig. 1).
15. Insert the Lightbulbs (U) into each of the sockets.
16. Assembly is complete.

**CARE INSTRUCTIONS**

Wipe all surfaces with a soft, dry cloth. Clean glass with a mixture of mild soap and water. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.