
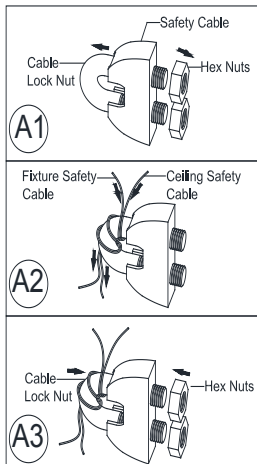


## PAUILLAC LINEAR CHANDELIER 49"


### PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) T-Wrench (1)
- (D) Nuts (2)
- (E) Washers (2)
- (F) Couplings (2)
- (G) 54" Connection Rods (2)
- (H) Canopy (1)
- (I) Canopy Rings (2)
- (J) 18" Connection Rods (4)
- (K) 12" Connection Rods (8)
- (L) 6" Connection Rods (4)
- (M) Connectors (16)
- (N) Connection Tubes (2)
- (O) Shades (10)
- (P) Bulbs (10)
- (Q) Sockets (10)
- (R) Allen Wrench (1)

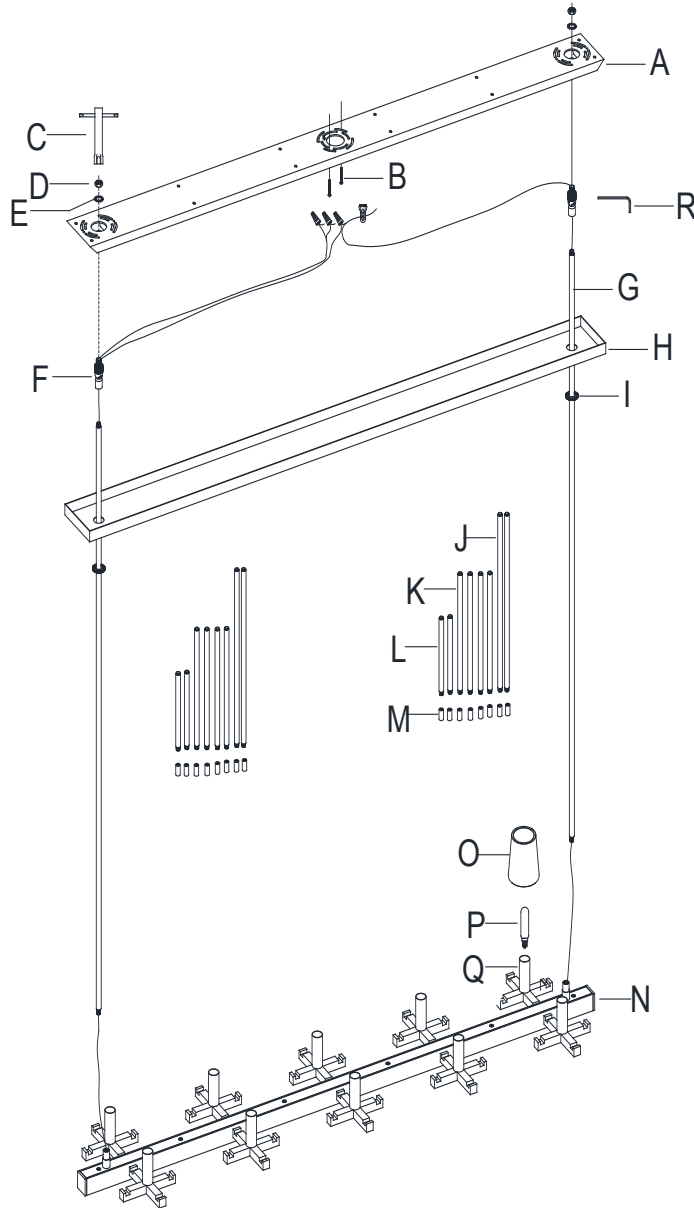

### SAFETY CABLE ASSEMBLY

1. Remove Hex Nut from Cable Lock Nut and pull Cable Lock Nut from Safety Cable.
2. Join fixture safety cable with safety cable from ceiling and wrap both safety cables around the cable lock nut.
3. Secure by tightening both hex nuts until tight.



## PAUILLAC LINEAR CHANDELIER 49"

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to ten (10) 25-Watt max Type T lightbulbs (included) or ten (10) 9-Watt compact fluorescent lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Canopy (H) from Mounting Plate (A) by removing Canopy Rings (I) on Couplings (F).
3. Remove Couplings (F) from Mounting Plate (A) by Removing Nuts (D) and Washers (E) using T-Wrench (C).
4. Determine the hanging length of chandelier. Connect Connection Tubes (N) to some or all Connection Rods (G) (J) (K) (L) and Connectors (M) according to the height needed.
5. Slide Canopy Rings (I) and Canopy (H) onto Connection Rods (G) (J) (K) (L).

## ASSEMBLY &amp; INSTALLATION CONT.

6. Feed the wires through Connection Rods and Couplings (F).
7. Screw Couplings (F) onto the top connection rods. Tighten with Allen Wrench (R) if needed.
8. Affix Couplings (F) to Mounting Plate (A). Let the top nipple pass through the side holes of Mounting Plate (A) and secure by replacing Washers (E) and Nuts (D). Tighten with T-Wrench (C). (See Fig. 1 on previous page).
9. Feed the fixture wires through the side holes on Mounting Plate (A) and out from one of the three holes of Mounting Plate (A).
10. Carefully hold the light fixture and affix Mounting Plate (A) to the ceiling outlet box. Secure with Mounting Screws (B) and other proper fasteners from your local hardware store.
11. Gently pull the wire from ceiling outlet box and allow the wire to hang. Thread the wire through the center hole of Mounting Plate (A).
12. Connect the safety steel wire from the fixture and the safety cable from ceiling. (See illustration on previous page).
13. Carefully inspect the chandelier's two fixture wires. One has very fine ridges molded into the plastic covering – this is the neutral wire. The second wire's covering is smooth – this is the hot wire. The bare wire is the ground wire.
14. Connect the fixture ground wire to the ground wire (usually bare copper) from the ceiling outlet box using a wire nut. If your house does not have ground wire, then attach the ground wire from the fixture to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
15. Connect the neutral wire from the fixture with the neutral wire (usually white) from the ceiling outlet box using a wire nut.
16. Connect the hot wire from the fixture with the hot wire (usually black) from the ceiling outlet box using a wire nut. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
17. Raise Canopy (H) to the affixed Mounting Plate (A) secure with Canopy Rings (I).
18. Insert Bulbs (P) into Sockets (Q).
19. Place Shades (O) over Bulbs (P) and onto Sockets (Q).
20. Restore power to outlet box and check operation of fixture. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.