


CANNELE ROUND CHANDELIER 36"



PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Canopy (1)
- (C) Canopy Screws (3)
- (D) Mounting Screws (2)
- (E) Box Cap (1)
- (F) Flathead Screws (3)
- (G) 1/2" Hex Nut (1)
- (H) 3/8" Hex Nuts (4)
- (I) Wiring Box (1)
- (J) Rod Connectors (24)
- (K) 6" Connection Rods (8)
- (L) 12" Connection Rods (8)
- (M) 18" Connection Rods (8)
- (N) Light Fixture (1)
- (O) Bulbs (8)
- (P) Glass Shades (8)
- (Q) T-Wrench (1)

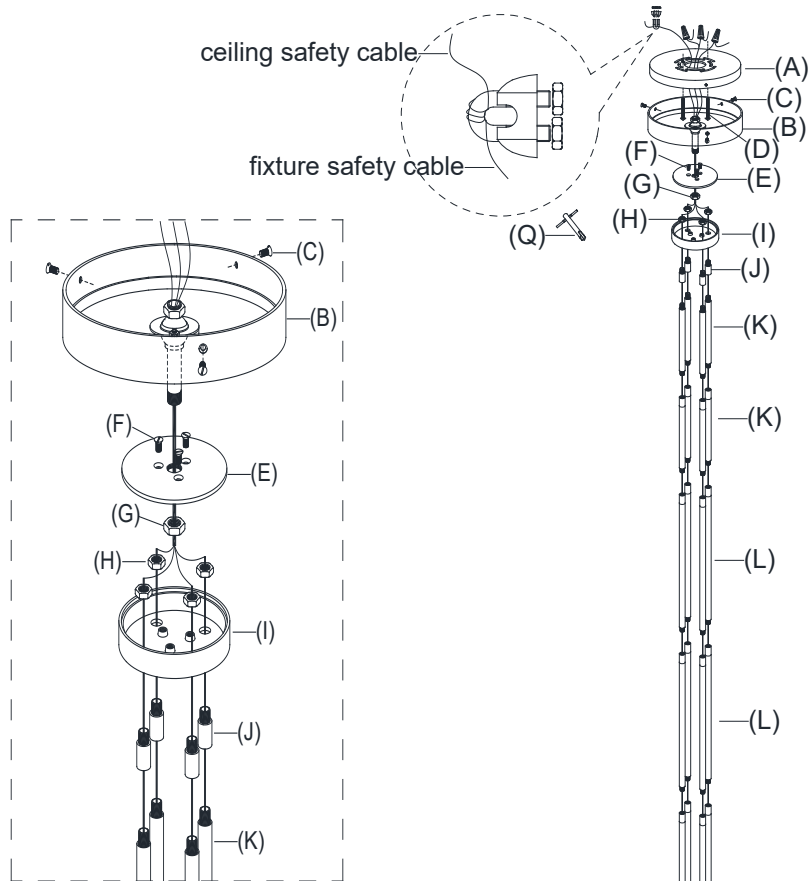

SAFETY CABLE ASSEMBLY

1. Remove Hex Nut from Cable Lock Nut and pull Cable Lock Nut from safety cable.
2. Join fixture safety cable with safety cable from ceiling and wrap both safety cables around the cable lock nut.
3. Secure by tightening both hex nuts until tight.

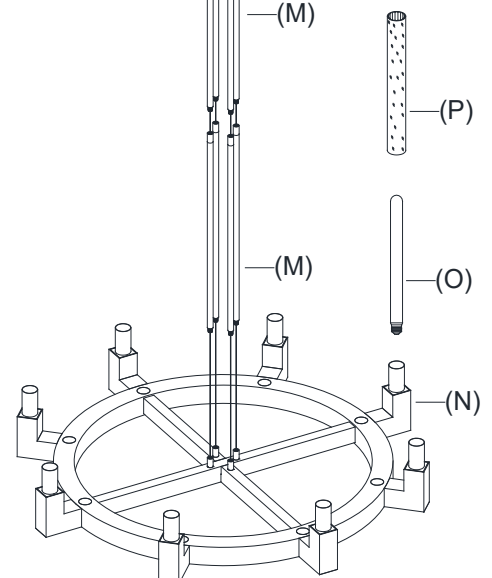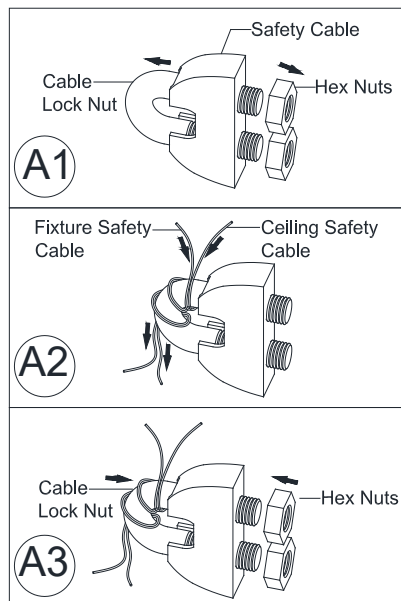

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to eight (8) 40-Watt maximum Type T lightbulbs (included) or eight (8) 13-Watt compact fluorescent lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of chandelier. Connect Light Fixture (N) to some or all Connection Rods (K) (L) (M) and Connective Tubes (J) accordingly. Note: Pre-wire the connection rods before putting them together.
3. Feed wires through the four sets of Connection Rods (K) (L) (M).
4. Remove Box Cap (E) from Wiring Box (I) by removing Flathead Screws (F).
5. Remove Rod Connectors (J) from bottom of Wiring Box (I) by removing Hex Nuts (H) using T-Wrench (Q) provided.
6. Thread Connective Tubes (J) onto the inner parts of Connection Rods (K) (L) (M) by turning in a clockwise direction.

ASSEMBLY & INSTALLATION CONT.

7. Replace Connective Tubes (J) to Wiring Box (I) and secure with Hex Nuts (H). Tighten with T-Wrench (Q).
8. Feed the wires and safety steel wire through the top rod of Box Cap (E).
9. Affix Box Cap (E) to Wiring Box (I) by aligning the three holes and secure with Flathead Screws (F).
10. Remove Mounting Plate (A) from Canopy (B) by unscrewing Canopy Screws (C).
11. Attach Mounting Plate (A) to the ceiling and secure with Mounting Screws (D) and other proper fasteners from your local hardware store.
12. Unscrew Hex Nut (G) from the top rod on Box Cap (E) and feed the wires and safety steel wire through the center hole of Canopy (B). Screw the center ball underneath Canopy (B) onto the top rod on Box Cap (E) by turning Canopy (B) in a clockwise direction until the rod passes through the center hole. Then secure by replacing Hex Nut (G) onto to the threaded rod.
13. Connect the safety steel wire from Light Fixture (N) and the safety cable from ceiling. (See illustration on previous page).
14. Carefully inspect the chandelier's two fixture wires. One has very fine ridges molded into the plastic covering – this is the neutral wire. The second wire's covering is smooth – this is the hot wire. The bare wire is the ground wire.
15. Connect the ground wire from the fixture with the ground wire (usually bare) from your ceiling box using a wire nut. If your house does not have ground wire, then attach the ground wire from the fixture to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
16. Connect the neutral wire from your fixture with the neutral wire (usually white) from your ceiling box using a wire nut.
17. Connect the hot wire from your fixture with the hot wire (usually black) from your outlet box using a wire nut. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
18. Attach Canopy (B) with Light Fixture (N) to the affixed Mounting Plate (A) and secure with Canopy Screws (C).
19. Insert Bulbs (O) into the sockets.
20. Carefully slide Glass Shades (P) onto the sockets.
21. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.