


## WRIGHT LINEAR CHANDELIER 72"

### PARTS ENCLOSED

- (A) Metal Anchors (8)
- (B) Mounting Plate (1)
- (C) Mounting Loops (2)
- (D) Wood Screws (8)
- (E) Mounting Screws (2)
- (F) Chains (2)
- (G) Closable Links (4)
- (H) Metal Covers (4)
- (I) Screws (8)
- (J) Hanging Loops (2)
- (K) Socket Rings (10)
- (L) Shades (10)
- (M) Bulbs (10)
- (N) Sockets (10)
- (O) Canopy Screws (6)
- (P) Canopy (1)

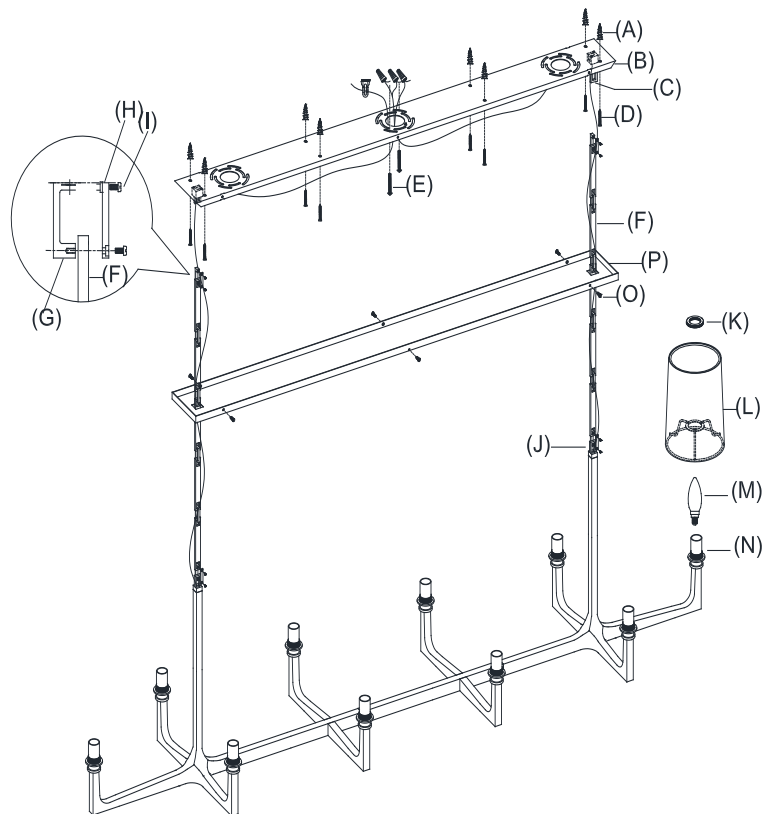

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to ten (10) 40-Watt maximum Type B light bulbs (not included) or ten (10) 9-Watt compact fluorescent light bulbs (not included) or ten (10) 5.5-Watt SBLed light bulbs (M) (included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove Canopy (P) from Mounting Plate (B) by removing Canopy Screws (O).
3. Place Mounting Plate (B) on the ceiling outlet; use this as a template. Mark center points for eight mounting holes of Mounting Plate (B) on the ceiling. Remove Mounting Plate (B).
4. Drill small holes on the marked location; the holes should be big enough to accommodate with Metal Anchors (A). Push Metal Anchors (A) into the holes.

## ASSEMBLY &amp; INSTALLATION CONT.

5. Affix Mounting Plate (B) to ceiling outlet box. Insert Mounting Screws (E) to ceiling outlet and Wood Screws (D) to Metal Anchors (A) to secure Mounting Plate (B) to the ceiling.
6. Slide Canopy (P) on Chain (F).
7. Remove the Metal Covers (H) from Closable Links (G) by Removing Screws (I).
8. Hang chandelier joining Mounting Loops (C), Closable Links (G), and Hanging Loops (J) together. Secure by replacing Metal Covers (H) to Closable Links (G). Tighten with Screws (I).
9. Gently pull the wire from ceiling outlet box and allow the wire to hang. Thread the wire through the center hole of Mounting Plate (B).
10. Connect the safety steel wire from the fixture and the safety cable from ceiling. Refer to the illustration.
11. Carefully inspect the chandelier's two fixture wires. One has very fine ridges molded into the plastic covering – this is the neutral wire. The second wire's covering is smooth – this is the hot wire. The bare wire is the ground wire.
12. Connect the ground wire from the fixture with the ground wire (usually bare) from your ceiling box using a wire nut. If you house does not have ground wire, then attach the ground wire from the fixture to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
13. Connect the neutral wire from your fixture with the neutral wire (usually white) from your ceiling box using a wire nut.
14. Connect the hot wire from your fixture with the hot wire (usually black) from your outlet box using a wire nut. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
15. Raise Canopy (P) to the affixed Mounting Plate (B) by aligning the side holes and secure with Canopy Screws (O).
16. Remove Socket Rings (K) from Sockets (N). Place Shades (L) onto the Sockets (N) and secure with Socket Rings (K)
17. Insert Bulbs (M) into the sockets.
18. Restore power to outlet box and check operation of fixture.
19. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.