

INSTALLATION INSTRUCTIONS

C1-2650 (LB1100)


CROSS HANDLE BATH SHOWER MIXER

CW-2651 (WL1100)

WHITE LEVER BATH SHOWER MIXER


CB-2651 (BL1100)

BLACK LEVER BATH SHOWER MIXER

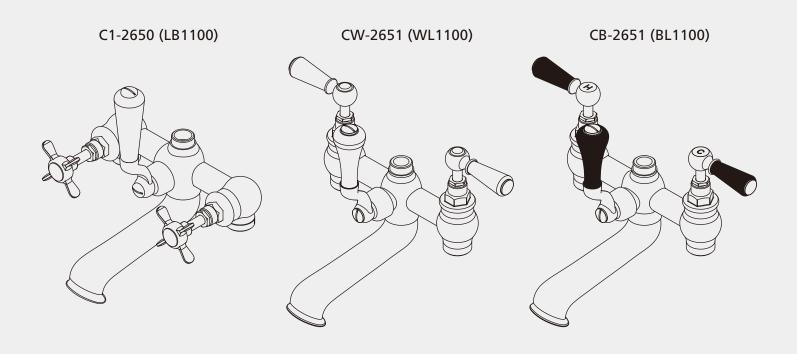


Dimensions in Inches (& Millimetres)


C1-2650 (LB1100)

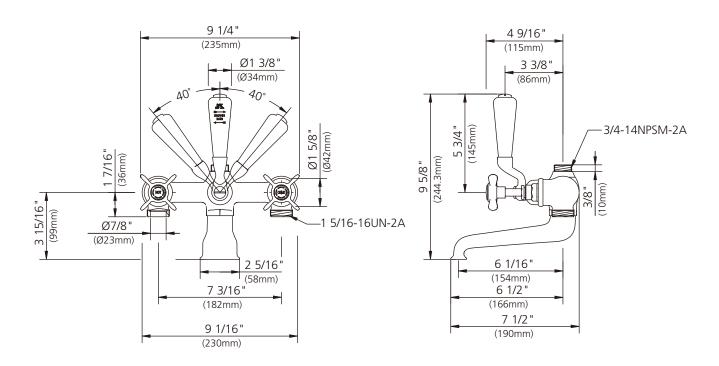

Dimensions in Inches (& Millimetres)


CW-2651 (WL1100)

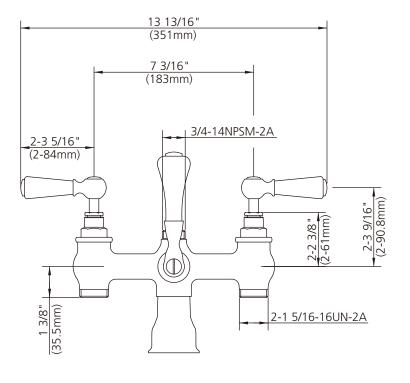


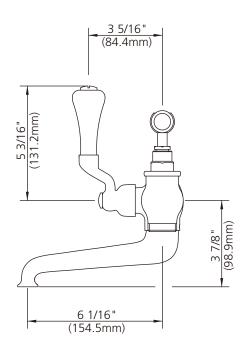

Dimensions in Inches (& Millimetres)

CB-2651 (BL1100)

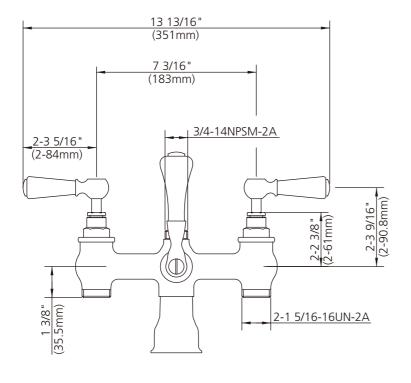


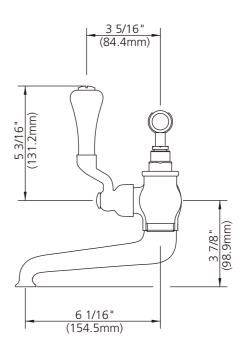

What you need to know

Tools:

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level

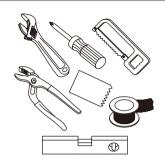

Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.


Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

Standards

IAPMO/cUPC Listed Meets A112.18.1

Flow Rate




Please note:

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

Steps 1-2

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

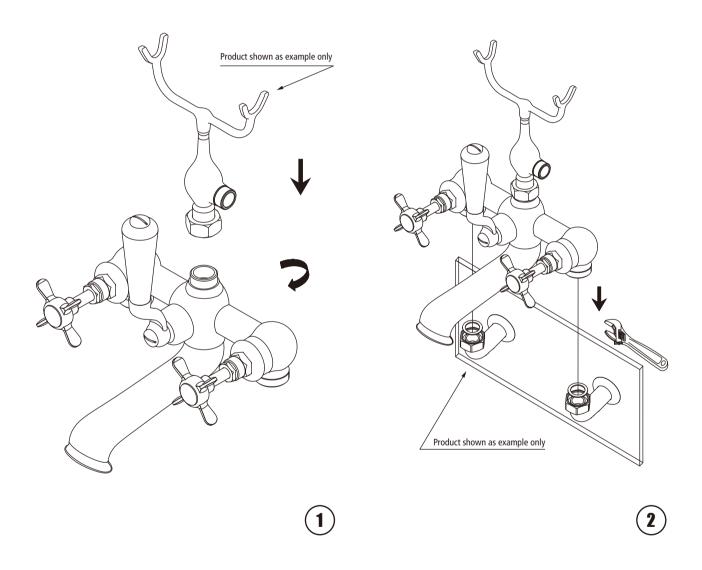


- Install the riser or cradle of choice (model shown is for example only) onto the faucet. Screw the nut tightly to seal securely.
- Install the faucet onto either the return bends or the cranked legs as chosen. Screw the nut tightly to seal securely.

Steps 3

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

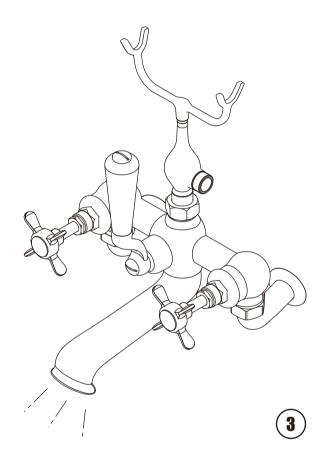


After installing faucet, open the hot and cold supplies to check for leaks. Turn on faucet handle for one minute to flush debris from faucet. Turn off the handle.

Warning! This faucet itself does not have a check valve installed inside. Risers or cradles to fit with this faucet should incorporate a check valve for backflow prevention.

Exploded View

Parts List

C1-2650 (LB1100)

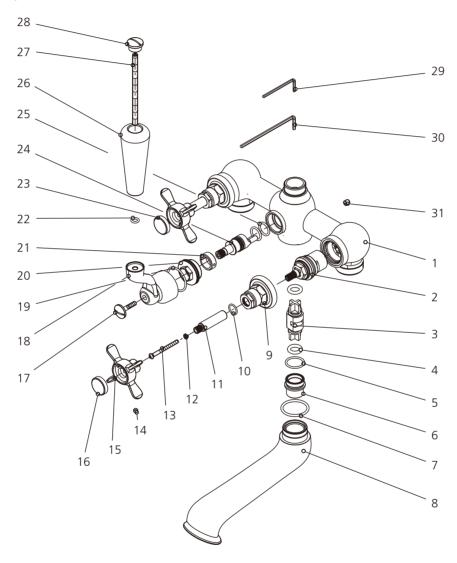


1	Body (066086)	12	Gasket (013570)	23	Ceramic indices (129312H)
2	Cartridge (507911)	13	Screw (065035)	24	Stem extension (110477)
3	Diverter cartridge (208020)	14	Grub screw (075210)	25	O-ring (004021N)
4	O-ring (004090)	15	Cross handle (069031)	26	Diverter lever (108937-50)
5	O-ring (063066N)	16	Ceramic indices (129312C)	27	Screw (017839)
6	Adaptor (077173)	17	Screw (008266)	28	Lever cap (109380)
7	O-ring (004596N)	18	Diverter seat (069036)	29	Alley key (031000)
8	Spout (118559)	19	O-ring (004081N)	30	Alley key (031017)
9	Nut (009354)	20	Nut (009353)	31	Grub screw (065154)
10	O-ring (048085N)	21	Clip (012060)		
11	Stem extension (110468)	22	O-ring (063036N)		

Exploded View

Parts List

CW-2651 (WL1100)

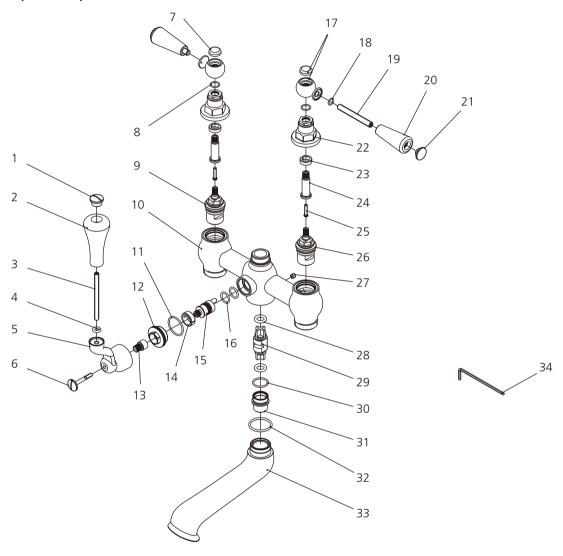


1	Lever cap (109380)	13	Adaptor (077257)	24	Stem extension (110461)
2	Diverter lever (108210)	14	Clip (012060)	25	Screw (008486)
3	Screw (017206)	15	Stem extension (110478)	26	Cartridge (C) (507456)
4	O-ring (072068N)	16	O-ring (004021N)	27	Grub screw (065154)
5	Diverter seat (069036)	17	Lever adaptor (205144)	28	O-ring (004090)
6	Screw (008267)		Ceramic cap (C) (129313C)	29	Diverter cartridge (208020)
7	Ceramic cap (H) (129313H)	18	O-ring (072060N)	30	O-ring (063066N)
8	O-ring (048085N)	19	Screw (017094)	31	Adaptor (077256)
9	Cartridge (H) (507455)	20	Lever (108924)	32	O-ring (004596N)
10	(002787)	21	Lever cap (109376)	33	Spout (118559)
11	O-ring (004081N)	22	Nut (009355)	34	Allen key (031017)
12	Nut (009353)	23	Clip (012242)		-

Exploded View

Parts List

CB-2651 (BL1100)

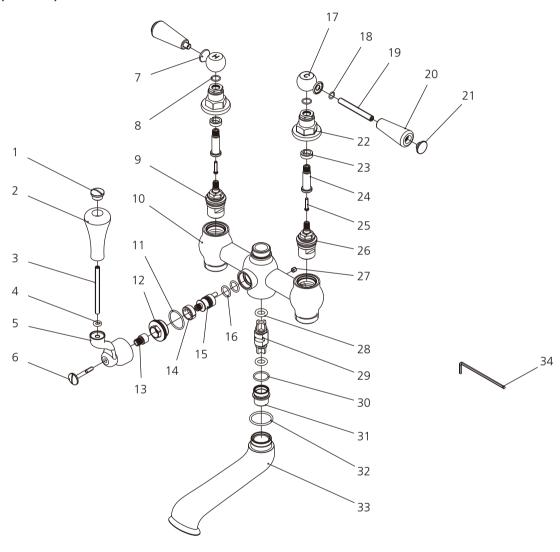

1	Lever cap (109380)	13	Adaptor (077257)	25	Screw (008486)
2	Diverter lever (108210)	14	Clip (012060)	26	Cartridge (C) (507456)
3	Screw (017206)	15	Stem extension (110478)	27	Grub screw (065154)
4	O-ring (072068N)	16	O-ring (004021N)	28	O-ring (004090)
5	Diverter seat (069036)	17	Lever adaptor (C) (205143C)	29	Diverter cartridge (208020)
6	Screw (008267)	18	O-ring (072060N)	30	O-ring (063066N)
7	Lever adaptor (H) (205143H)	19	Screw (017094)	31	Adaptor (077256)
8	O-ring (048085N)	20	Lever (108924)	32	O-ring (004596N)
9	Cartridge (H) (507455)	21	Lever cap (109376)	33	Spout (118559)
10	(002787)	22	Nut (009355)	34	Allen key (031017)
11	O-ring (004081N)	23	Clip (012242)		
12	Nut (009353)	24	Stem extension (110461)		

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177