Step 1
Insert 1/2″ carriage bolts through bottom of GVS base.
Please note: galvanized steel plate should have the recessed holes on the bottom.

Step 2
Mount deck mount and gasket.
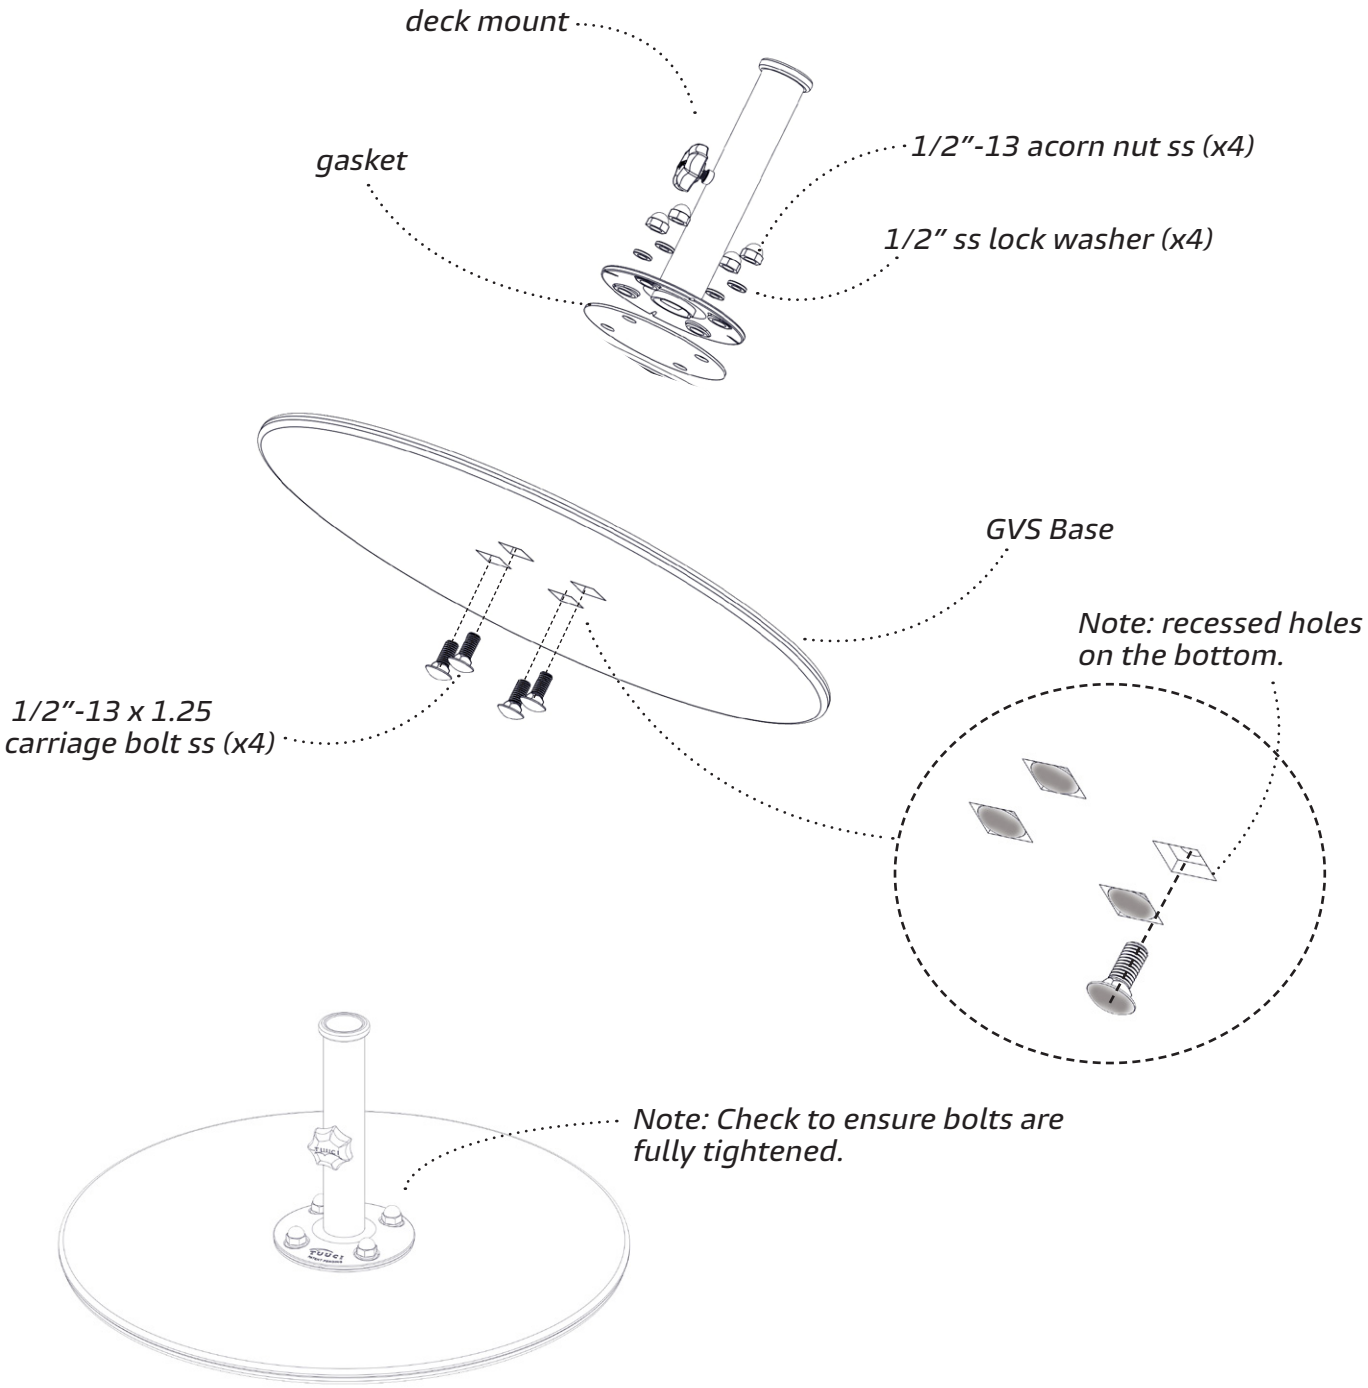
Step 3
Insert lock washers and tighten nuts.