

RESTORATION HARDWARE


Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED: HARDWARE INCLUDED:

- | | |
|-------------------------|--------------------------------|
| (A) mounting plate (1) | (a) green ground screw (1) |
| (B) back plate (1) | (b) plastic wire connector (2) |
| (C) glass shade (1) | (c) anchor (2) |
| (D) bulb (1) | (d) mounting screw (2) |
| (E) connecting part (1) | (e) plate screw (2) |
| (F) finial (1) | |

CHANDLER GRAND SCNCE

Direct Wire Installation

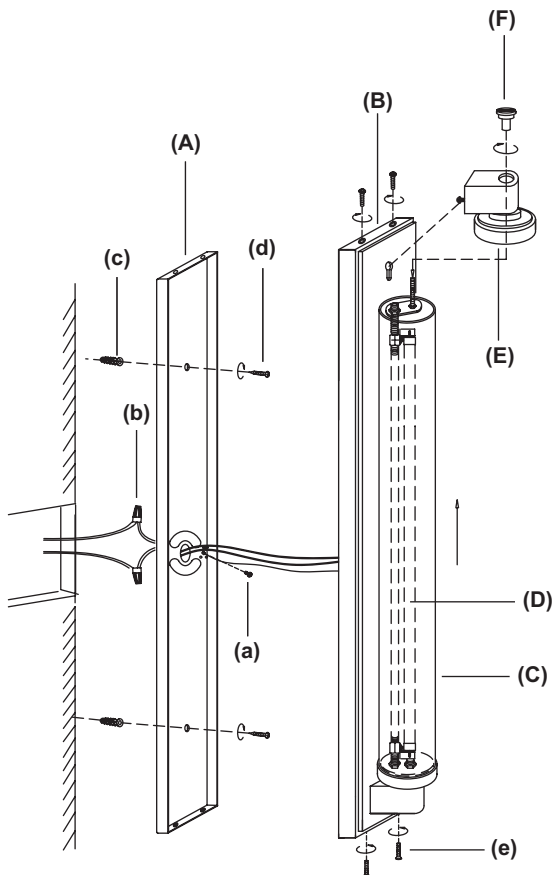

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.
This fixture has been rated for up to (1) 14-watt maximum TYPE T bulbs.
To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled.
To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.
Do not touch bulb when fixture is turned on or look directly at lit bulb.
Keep flammable materials away from lit bulb.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the lamp will be installed.
3. Attached the ground wire from the fixture to the ground junction box wire from the outlet box (usually green or bare wire).and wrap the connection with electrical tape. Screw the green ground screw (a) into the mounting plate (A), and wrap the bare ground wire around the ground screw.
4. Connect the hot wire to the hot junction box wire (usually black) with a plastic wire connector (b) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white) with a plastic wire connector (b) and wrap the connection with electrical tape .
5. Mark the location of the mounting holes on the wall using a pencil. Using the marks as a guide, drill holes for the wall anchor (c). Insert the wall anchors into the holes, using a hammer to fully insert until flush with the wall.
6. Attach the mounting plate (A) to the outlet box using the mounting screws (d). Tighten with a screwdriver .
7. Attach the back plate (B) to the mounting plate (A) using plate screw (e) and tighten with a screwdriver.
8. Insert a 14-watt Type T bulb (D) (included) into threaded sockets and then insert the cylinder glass shade (C) to cover the threaded sockets and bulbs.
9. Attach the connecting part (E) onto the top of glass shade. Use fixed screw on the connecting part and insert to the large area of the hole on the back plate first, and then slip down the connecting part to cover the edge of glass shade fully.
10. Attach the Finial (F) to the connecting part (E), turn clockwise to tighten it.
11. Restore power to the junction box and test lamp fixture.
12. Installation is complete.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp.
JUST WIPE CLEAN WITH SOFT CLOTH.