


CRATE STORAGE

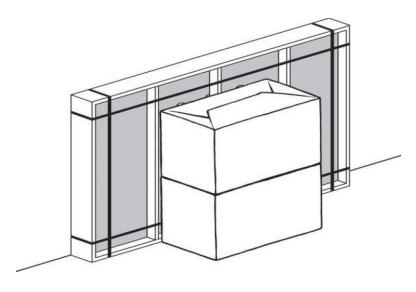

- Keep Stone Top in it's crate until installation
- Store crate vertically in a safe location


• Do not stack anything on top of crate

TOOL AND MATERIAL REQUIREMENTS

- Flat, non-abrasive work surface (blanket or smooth cardboard)
- Sealant
- Phillips-head screwdriver
- Carpenter's level
- Utility blade

PARTS LIST

A. Stone Top (Oval or Rectangular)




B. Backsplash (Sold Separately)



C. Basin (Oval or Rectangular)



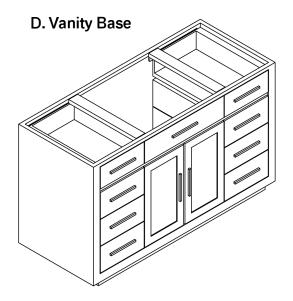


E. Mounting Bracket (x4)



F. Lock Washer (x4)



G. Threaded Rod (x4)



H. Wing Nut (x4)






KEMPTON SINGLE EXTRA-WIDE VANITY

STONE TOP UN-PACKING AND TRANSPORT


WHEN MOVING STONE TOP, ALWAYS USE A TWO-MAN CREW

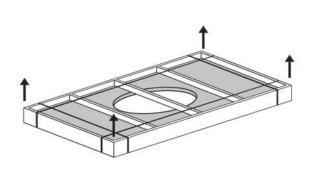

Remove metal bands, unscrew the slats or lid, and lift the Stone Top [A] out of the crate.



Always carry Stone Top [A] vertically

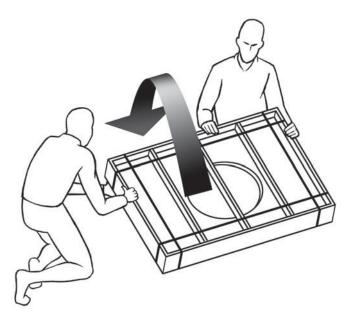


Carefully, without allowing any freefall, rotate the crate from vertical to flat.



Do not carry Stone Top [A] horizontally as it increases the risk of breakage or cracking.

STONE TOP INSPECTION



Inspect the Stone Top [A] for cracks or defects. If defects are detected, do not install and please call 877-777-7059. If no defects are detected; clean Stone Top [A] with a soft cloth.

CLEANING AND MAINTENANACE INSTRUCTIONS

- Avoid abrasive and harsh chemical cleaners.
- RH Stone Tops [A] have a honed finish, hand polished edges, and are sealed twice with inert silicone sealant
- Stone Tops [A] should be re-sealed annually



KEMPTON SINGLE EXTRA-WIDE VANITY

STONE TOP INSTALLATION



Caution! Installation between two walls requires special care.

• If installing Stone Top [A] between two walls, stop here and follow the next set of instructions.


Standard Stone Top Installation Guidlines

- Apply a continuous bead of sealant to the top face of Sink Basin [C] rim where the Stone Top [A] makes contact with the Sink Basin [C].
- 2. Using a two-man crew, lift Stone Top [A] and set it on top of Vanity Base [D].
- 3. Apply silicone sealant at seam where Backsplash [B] meets the wall. (see illustration below).

Stone Top Installation Between Two Walls

- Apply a continuous bead of sealant to the top face of Sink Basin [C] rim (where the Stone Top [A] makes contact with the Sink Basin [C]).
- 2. Using a two-man crew, lift Stone Top [A] and set it's rear edge on the back of the Vanity Base [D] (closest to rear wall) -- see illustration below.
- 3. Lower front of Stone top onto the Vanity Base [D] make sure both ends are lowered at the same rate.
- 4. Do not shimmy, twist or turn the Stone Top [A] while lowering as this increases the risk of breakage!
- 5. Apply silicone sealant at seam where Backsplash [B] meets the wall. (see illustration below).



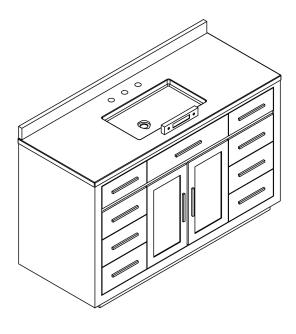





PRIMARY INSTALLATION REQUIREMENTS:


- Professional two-man crew.
- · Water supply and drain piping installed according to local plumbing and building codes (sold seperately).
- Wall and floor are square and plumb at installation site.
- Vanity Base [D] installed square and plumb with wall and floor. Vanity Base [D] also needs to be level.
- Ensure Stone Top [A] is the correct size to match the Vanity Base [D].


BASIN INSTALLATION STEPS:


- 1. Applya continuous bead of silicone sealant to the top surface of lavatory basin rim where it comes in contact with underside of Stone Top [A] (see illustration below).
- 2. Position basin [C] in it's final location and secure Mounting Bracket under the basin [C] lip. Make sure overflow of basin [Clis located on the same side as the pre-drilled faucet holes in Stone Top [A].
- 3. AlignThreaded Rod G], Lock Washer [F] and Wing Nut [H] with pre-installed Stone Topthreaded insertand secure on all (4) points with mounting bracket [E].

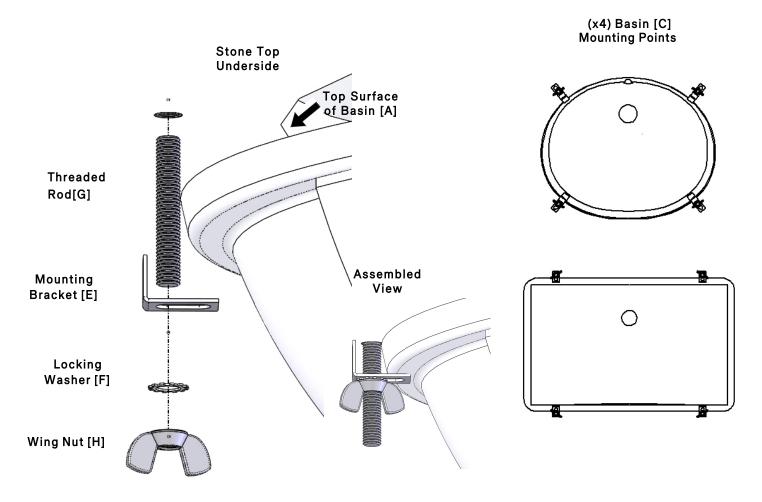


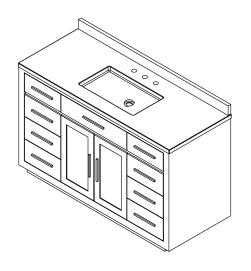


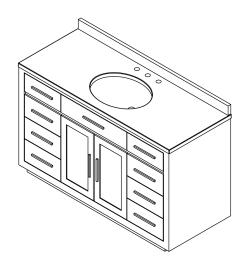


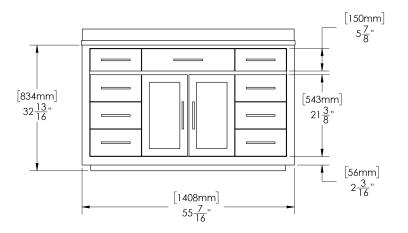

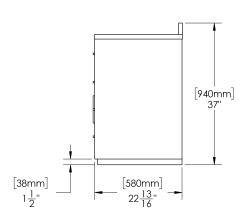

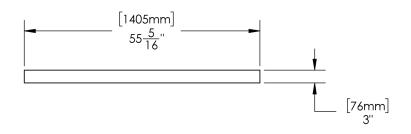


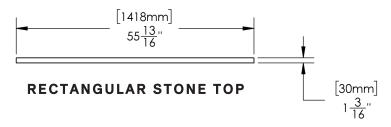

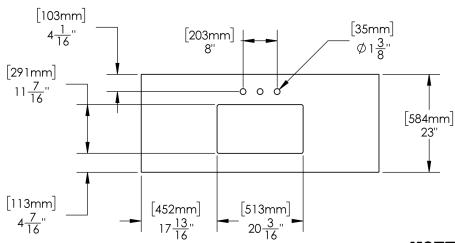


OVALSTONE TOP

NOTE: X=1/8"R EASED EDGE

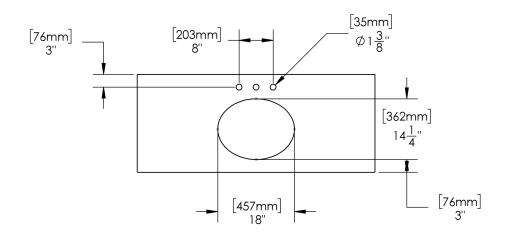



RECTANGULAR BASIN

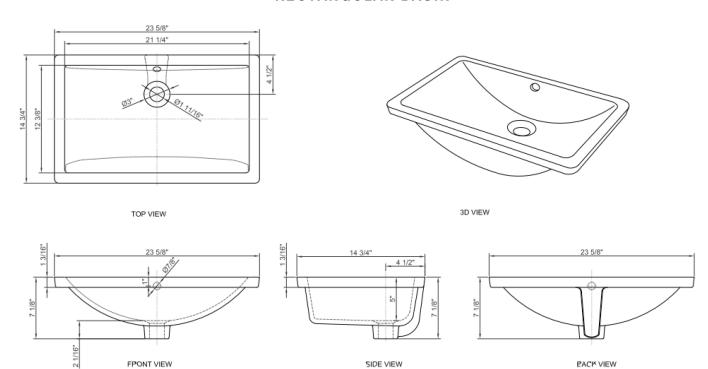

OVAL BASIN

