



RIVAGE RECTANGULAR CHANDELIER 54"

ASSEMBLY & INSTALLATION INSTRUCTIONS

**UNITED STATES ENGLISH**

**RIVAGE RECTANGULAR CHANDELIER 54"****PARTS INCLUDED:**

(A) Junction Box, 50lbs/22.7kg MIN. FIXTURE RATED (not included)

(B) Mounting Screws (8 sets; for concrete ceiling only)

(C) Wire Nuts (3)

(C1) Ceiling Plate (1)

(C2) Ceiling Box (1)

(C3) Bolts (4)

(D) Steel Cables (4)


(D1) Steel Cables Locks (4)

(E) Fixture Body (1)

(F1) Large Allen Key (1)

(F2) Small Allen Key (1)

(G) Safety Cable (1)

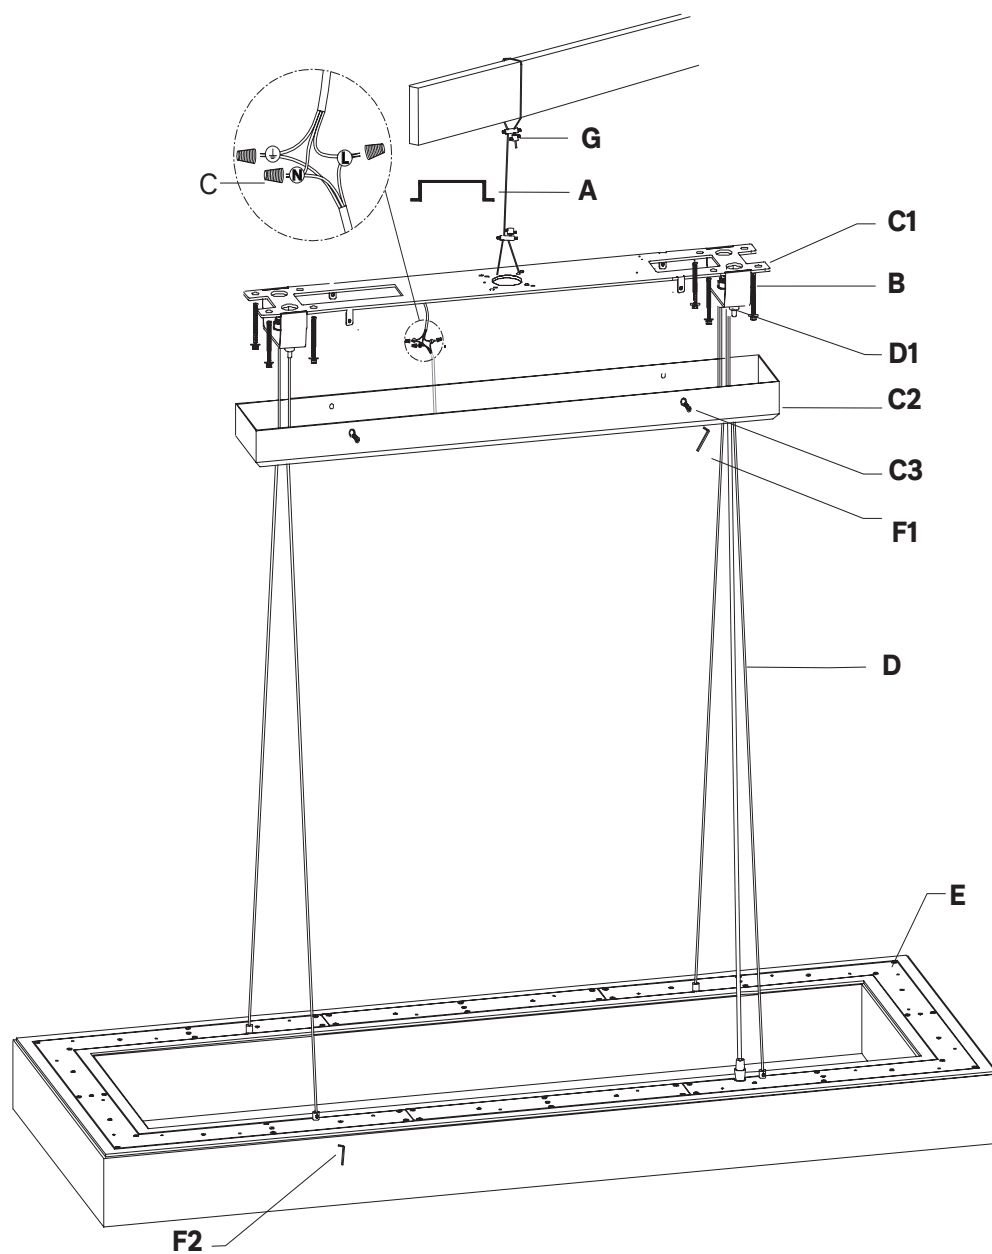

**IMPORTANT: PLEASE READ**

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO CONCRETE CEILING. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

**IMPORTANT SAFETY FEATURES****BULBS**

This fixture has been rated for 50-watt LED module. To avoid the risk of fire, do not exceed the recommended wattage.

**VAULTED CEILING COMPATIBILITY**

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 15 degrees.

**DIMMER SWITCH COMPATIBILITY**

This fixture is dimmer-switch compatible and may be used with a forward-phase dimmer switch.

**CEILING REINFORCEMENT**

Fixtures weighing 50lbs/22.7kg or more will require additional reinforcement above the ceiling where they are to be installed.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

**WARNING: STRANGULATION HAZARD**


Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds.

Keep out of reach of children under 3 years of age.


**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**

**INSTALL SAFETY CABLE:**

1. Remove the nut locker A & B by loosening the set screw from the ceiling safety cable before installation.
2. Insert the ceiling safety cable through the nut lockers as the drawing shows.
3. Fasten the nut locker A with set screw/bolt.
4. Fasten the nut locker B with set screw/bolt.

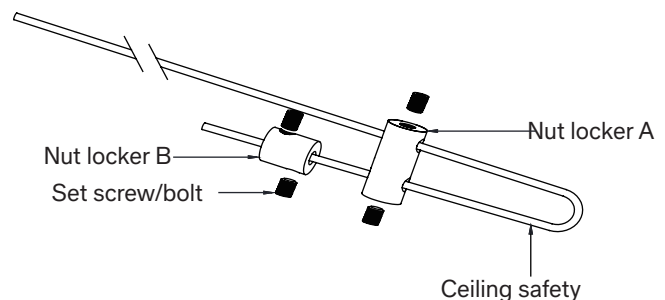

**ASSEMBLY AND INSTALLATION****SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn OFF power to junction box where the fixture will be installed.
3. Loosen bolts (C3) and move down the ceiling box (C2) from the ceiling plate (C1).
4. Have a professional contractor reinforce ceiling. Attach the safety cable (G) to ceiling beam through the junction box (A), then attach the safety cable to the fixed fixture on the ceiling with the nut locker.
5. Attach the ceiling plate (C1) to the ceiling and secure with mounting screws (B).
6. Feed wires along with steel cable (D) to come out from the ceiling box (C2).
7. Carefully inspect the fixture wires. One is the ground wire (marked with ). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).
8. Connect the fixture ground wire to the power supply ground wire with wire nut (C).

NOTE: IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

9. Connect the fixture neutral wire to the power supply neutral wire with wire nut (C).
10. Connect the fixture live/hot wire to the power supply live/hot wire with wire nut (C).

CAUTION: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, AS SAFETY WILL BE COMPROMISED.

11. Move the ceiling box (C2) up to the ceiling plate (C1), then fasten the bolt (C3).
12. The length of the steel cable (D) is adjustable. To determine the proper length of the fixture, hold the fixture body (E) up against the ceiling box (C2) to adjust the steel cable (D).
13. Depress locking pin on the ceiling plate (C1), hold pin in place and pull down or push up on the steel cable (D). Repeat step for each steel cable.
14. Restore power to the junction box and test fixture.
15. Assembly is complete.

**CARE INSTRUCTIONS**

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

**LIGHT SOURCE AND LED DRIVER REPLACEMENT INSTRUCTIONS**

1. Turn OFF power to junction box.
2. Uninstall the lighting fixture from the ceiling.
3. Loosen the bolts from ceiling box, then unlock the wire nuts and remove the old LED driver.
4. Install the new LED driver.
5. Loosen the bolts (H2) and steel cable locks (H3).
6. Replace the new light source, then connect to the wiring of the LED driver.

Note: Connect the wiring of the LED driver (marked with "+") to the wiring (marked with "+") of the light source. Connect the wiring of the LED driver (marked with "-") to the wiring (marked with "-") of the light source.

7. Fix the light source (H1) back to fixture body (E) and secure with bolts (H2) and steel cable locks (H3).

