

PARTS ENCLOSED

(A) Junction Box (Not included) 22.7kg/50lbs. MIN. FIXTURE RATED

(B) Mounting Screws (Not included. 1 Set)

(C) Wire Nut (3)

(D) Ceiling Plate (1)

(E1) Ceiling box (1)

(E2) Screw (4)

(E3) Quick Link (2)

(E4) Loop (2)

(E5) Tube A (4)

(E6) Tube B (4)

(E7) Tube C (4)

(F) Body (1)

(G) Screw Cap (30)

(H) Big Glass (30+1Extra)

(I) Small Glass (30+1Extra)

(J1) Large Allen key (1)

(J2) Small Allen key (1)

(K) Set Screw (14)

(L) Bulb (12+4 Extra)

(M) Wire Locker spare part (2 sets)

PRODUCT DESCRIPTION:


General material: Glass & Iron

Height: 28.5cm (11.22in)

Length: 139.0cm (54.72in)

Width: 57.5cm (22.64in)

Weight: 75.3kg (165.86lbs)

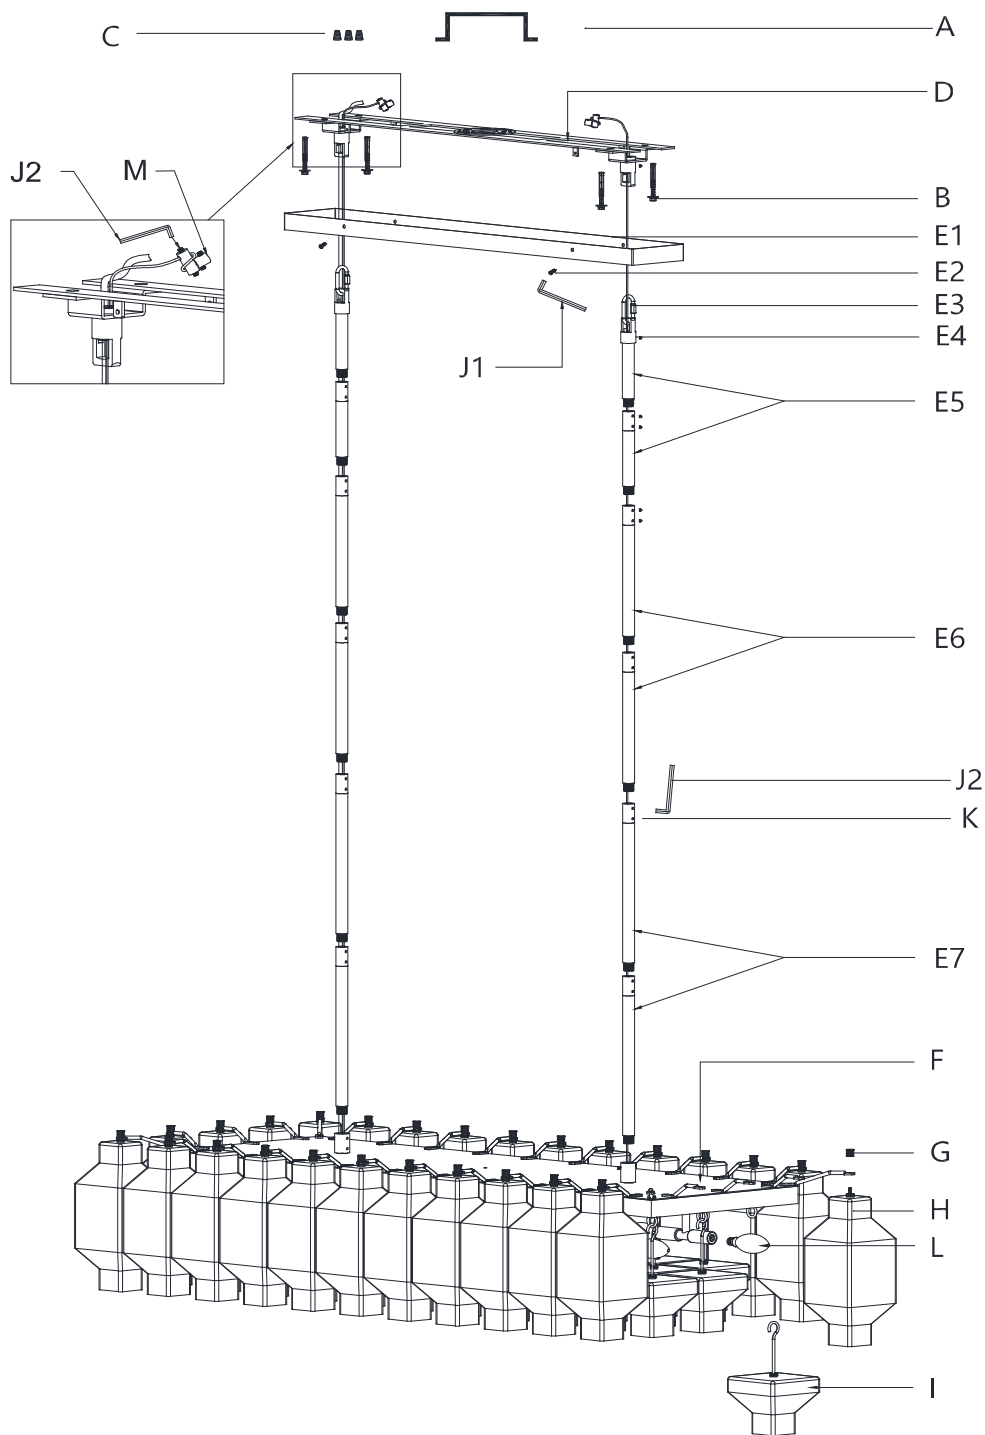

IMPORTANT PLEASE READ**WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.****SAFETY INSTRUCTIONS:**

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for (12)x25 Watt maximum E12 bulbs
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 376.5kg (829.30lbs) is required.
5. The manufacturer and distributor accept no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

WARNINGS:

1. Turn off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected, Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing lightbulb. Do not touch bulb when fixture is turned on or look directly at lightbulb. Keep flammable materials away from lightbulb.
4. Deviation from instructions may result in a risk of fire or electric shock.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the screw (E2) from ceiling box (E1) and remove ceiling plate (D).
4. Attach the ceiling plate (D) to the ceiling with mounting screws (B).
5. Assemble the tube A (E5) or B (E6) or C (E7) to Loop (E4) and tighten the set screws (K) by small Allen key (J2).
Note: The hanging height is adjustable by connecting tube A (E5) or B (E6) or C (E7) or all together.
6. Insert the cable and steel wire into the tubes (E5 & E6 & E7) till ceiling plate (D). Connect the tubes to body (F), fasten the Wire Locker (M) as the drawing shows. Connect the hook of the mounting plate (D) and the Loop (E4) with the quick link (E3).
7. Connect the ground wire from the fixture to the ground junction box wire (usually the green or bare wire) and wrap the connection with electrical tape. Connect the hot wire to the junction box wire (usually black or smooth) with a plastic wire nut (C) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire nut (C) and wrap the connection with electrical tape.
8. Fix the ceiling box (E1) to the ceiling plate (D) by fastening the screw (E2).
9. Fasten lightbulbs (L) to lampholders.
10. Hang the small glass (I) on the middle of the body (F).
11. Hang the big glass (H) on the side of the body (F), Fix the big glass (H) by Screw cap (G).
12. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable / cord of this ceiling light cannot be replaced; if the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.

CEILING SAFETY CABLE ASSEMBLY

1. Remove the Nut locker A & B by loosening the Set Screw from the Ceiling safety cable before installation.
2. Insert the Ceiling safety cable through the Nut lockers as the drawing shows.
3. Fasten the Nut locker A with Set Screw by Small Allen Key.
4. Fasten the Nut locker B with Set screw by Small Allen Key.

