

RESTORATION HARDWARE


RIVET LARGE / SMALL INSET MEDICINE CABINET ASSEMBLY INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED :

1. Screwdriver
2. Carpenter's level

PARTS LIST

A. Cabinet

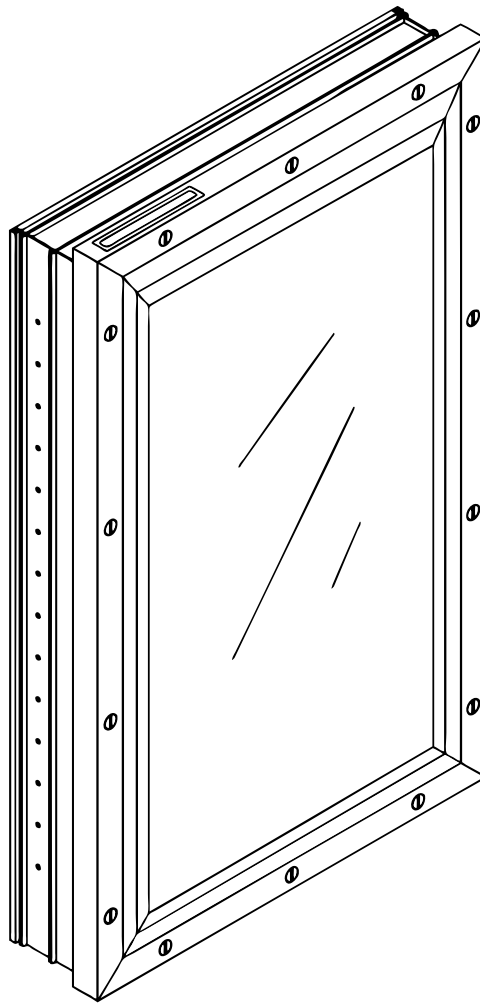

B. Wood Screw x4



RESTORATION HARDWARE

RIVET LARGE / SMALL INSET MEDICINE CABINET ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS :

1. Measure a space for the cabinet body (A). Blocking is recommended to ensure adequate support. Inset (recessed) box measurements will vary according cabinet model (See Below).


Large size dimensions

19-1/4" wide
33" high
4" deep

Small size dimensions

14-1/4" wide
24-1/4" high
4" deep


2. Install the cabinet with recessed box set back within the wall cavity.

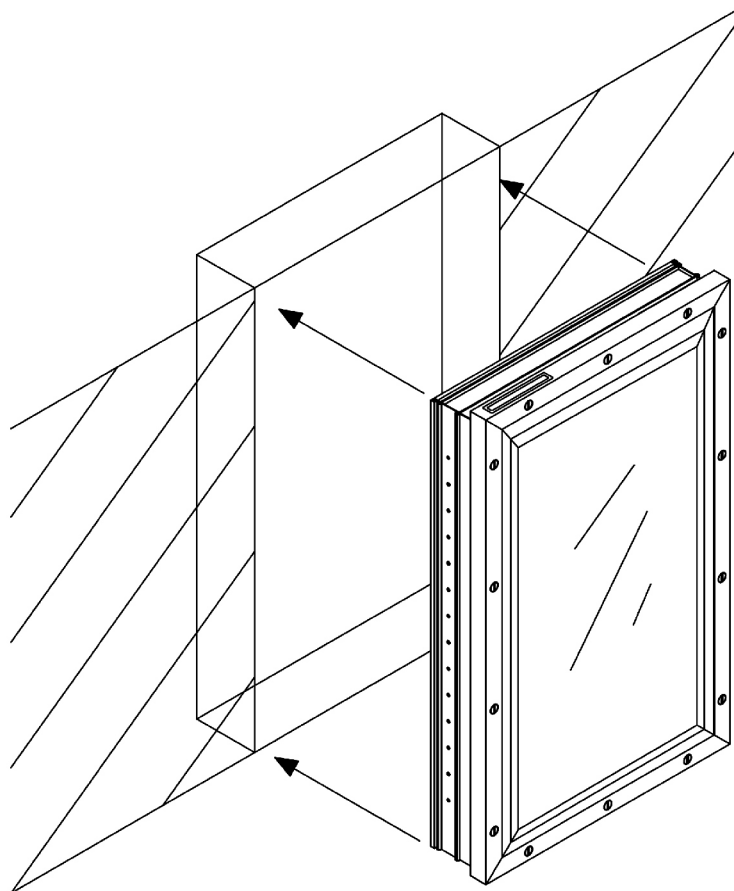

RESTORATION HARDWARE

RIVET LARGE / SMALL INSET MEDICINE CABINET ASSEMBLY INSTRUCTIONS


3. Mount cabinet by fastening the enclosed wood screws (B) from inner side panels. The screws can be used for installation into wood frames. For a different material used in the wall, additional screws and/or another type of screws that are not included will need to be purchased to complete installation of the medicine cabinet recessed box.

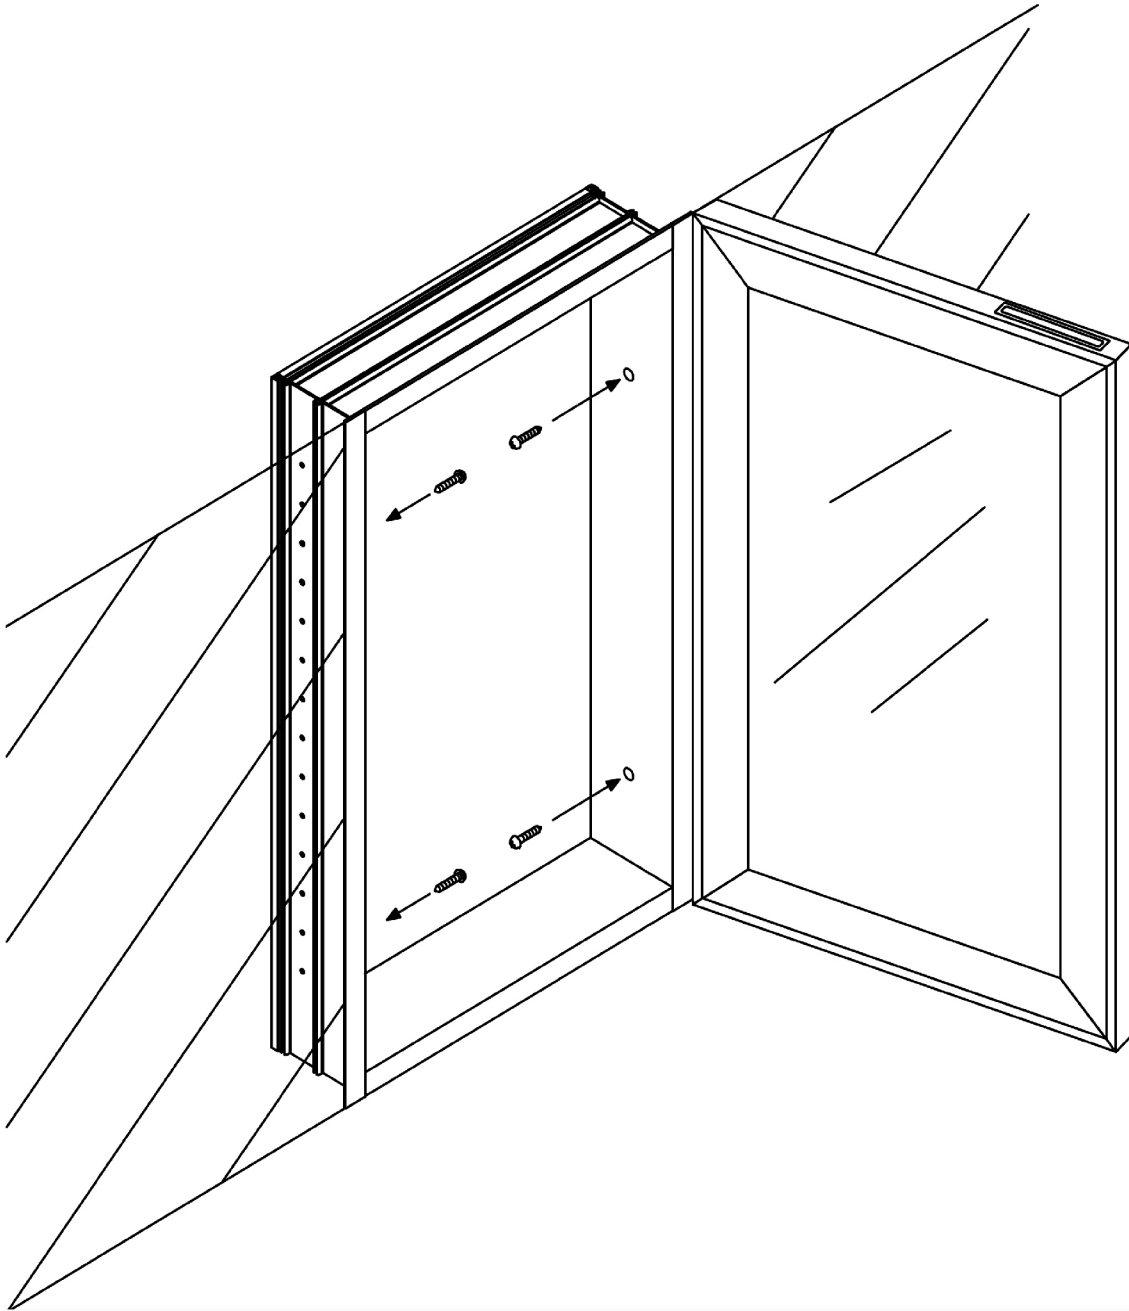

RESTORATION HARDWARE

RIVET LARGE / SMALL INSET MEDICINE CABINET ASSEMBLY INSTRUCTIONS

4. After the medicine cabinet is installed, and seems unlevel at the bottom, open the door. Adjust the lower part of the interior hinge. This can be done with the oyster screw of the hinge. Loosen the screw by slightly pulling on the door and then tighten the screw. (See Illustration below)
5. After the medicine cabinet is installed and seems unlevel at the top, open the door. Adjust the top part of the interior hinge. This can be done with the oyster screw of the hinge. Loosen the screw by slightly pulling on the door and then tighten the screw. (See Illustration below)
6. After the medicine cabinet is installed and the door appears to be loose this can be adjusted with a tightening the inner screw on the interior door hinge (See Illustration Below)

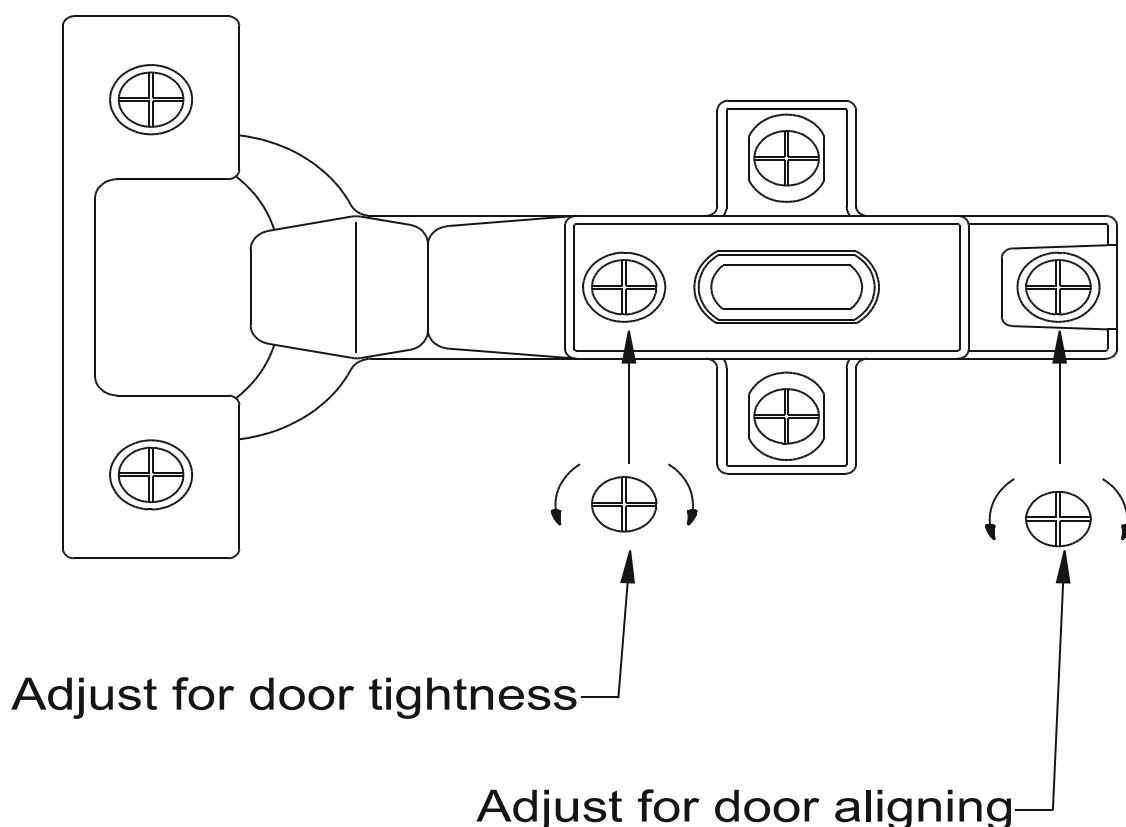

CLEANING INSTRUCTIONS

To maintain and protect the luster of all products, clean with a soft, damp cloth only.