

RESTORATION HARDWARE

FT-118 Moderne Fountain

Revised October 9, 2013

(4 pieces)

COMPONENTS AND PARTS LIST



Fountain Top
FT-118A
21"l x 6.25"w x 14.25"h
121 lbs



Spiller Stop
FT-118E
12"l x 1.25"w x 2"h
2 lbs



Fountain Basin
FT-118B
22.75"l x 22"w x 21"h
632 lbs



Ftn Disc for Basin
FT-118D
16.25"l x 12.25"w x 1.25"h
18 lbs



NOTE: Component photos are not to scale

Pump Kit Parts List

- PK500 pump (1)
- Egglight (1)
- #10 compression stopper (1)
- Approx. 12" length of 1/2" non-kink black tubing (1)
- Approx. 4" length of 5/8" i.d. clear tubing (1)
- Hose clamps (3) Note – Hose clamps can be used as flow restrictor
- Wedges (2)
- 4mm Allen wrench (1)
- 2.8 oz tube of silicone (1)
- Copper Spiller (1)

Warning – Risk of Fire
DO NOT OPERATE EGGLIGHT
UNLESS LIGHT IS COMPLETELY
SUBMERSED IN WATER!
Use Egglight only in accordance
with manufacturer's instructions
attached to the Egglight!

Tools you will need



Level

4mm Allen wrench (included)



This fountain uses cover
FTNCOV-MED

Fountain holds approximately
10 gallons of water


RESTORATION HARDWARE

FT-118 Moderne Fountain (4 pieces)


ASSEMBLY INSTRUCTIONS

Revised October 9, 2013

1. Make sure you are assembling your fountain on a level surface capable of holding a minimum of 832 pounds with approximately a 3 square foot footprint.
2. Pump and hose assembly must be done before placing fountain against the wall.
3. Feed the pump and light cords through the hole in the basin leaving enough cord length inside basin to work with pump and light. Light will rest on top of disk inside basin.
4. **See enclosed stopper assembly instructions and complete before continuing.**
5. Place a hose clamp over each end of the length of $\frac{5}{8}$ " non-kink black tubing
6. Connect one end to the pump water outlet and one end to the copper pipe extended into the inside of the basin
7. Clean outside surface of the copper plate provided with a clean, dry towel.
8. Apply silicone generously on the outside of the plate as shown below.

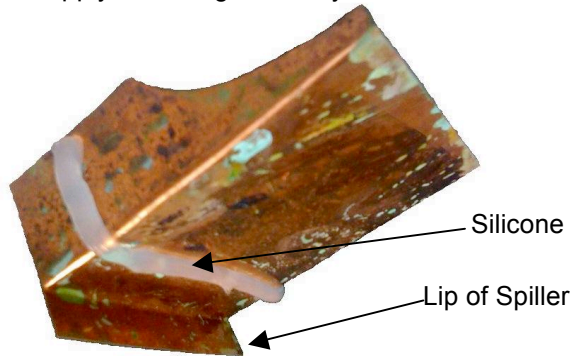

9. Place plate over spiller so that it is positioned exactly on top and position it with a downward movement as shown on picture.

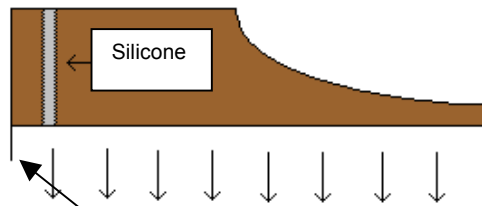

a. The small lip on the bottom of the spiller will rest behind the back of the spiller.

10. Let it dry a minimum of 4 hours, 24 hours is preferable.
11. The copper spiller will protrude over the top of the sides of the concrete spiller.



12. Place the spiller stop (FT-118E) into the spiller area.
13. Turn on water fountain to test for leaks before placing top piece.
14. If there are leaks between the concrete and the copper go back to step 11.
15. Using the tube of silicone provided, run a bead of silicone along the top of the basin where the top piece will be placed. Take care not to use too much silicone to minimize oozing of silicone from between the pieces.

RESTORATION HARDWARE

FT-118 Moderne Fountain

Revised October 9, 2013

(4 pieces)

ASSEMBLY INSTRUCTIONS

16. Clean off any excess silicone with your finger or a dry rag as quickly as possible.
17. Carefully place the FT-118A onto the FT-118B.
 - a. Note – silicone should be allowed to dry according to manufacturer's recommendations prior to fountain operation
18. Place the disc (FT-118D) into the basin (FT-118B)
19. Place the egglight onto the disc facing the light at the waterfall
20. Once silicone is dry, fill basin with approximately 10 gallons of water.

Note – do not allow pump to run dry as it will cause damage to the pump.

Warning – Risk of Fire - DO NOT OPERATE EGGLIGHT UNLESS LIGHT IS COMPLETELY SUBMERSED IN WATER! CHECK WATER LEVEL OF FOUNTAIN BEFORE EACH USE! Use Egglight only in accordance with manufacturer's instructions attached to the Egglight!

WINTER CARE AND GENERAL FOUNTAIN INSTRUCTIONS

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

(1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin. Compression stoppers may be left on the pump cord for easier assembly next season.

(2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.

(3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;

(4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

All of our cast stone is proudly



Made in USA