



AQUITAINE LINEAR CHANDELIER 60"


ASSEMBLY & INSTALLATION INSTRUCTIONS

ENGLISH

AQUITAINE LINEAR CHANDELIER 60"

PARTS INCLUDED

- (A) Mounting Plate (1)
- (B) Canopy (1)
- (C) Canopy Screws (8)
- (D) Allen Wrench (1)

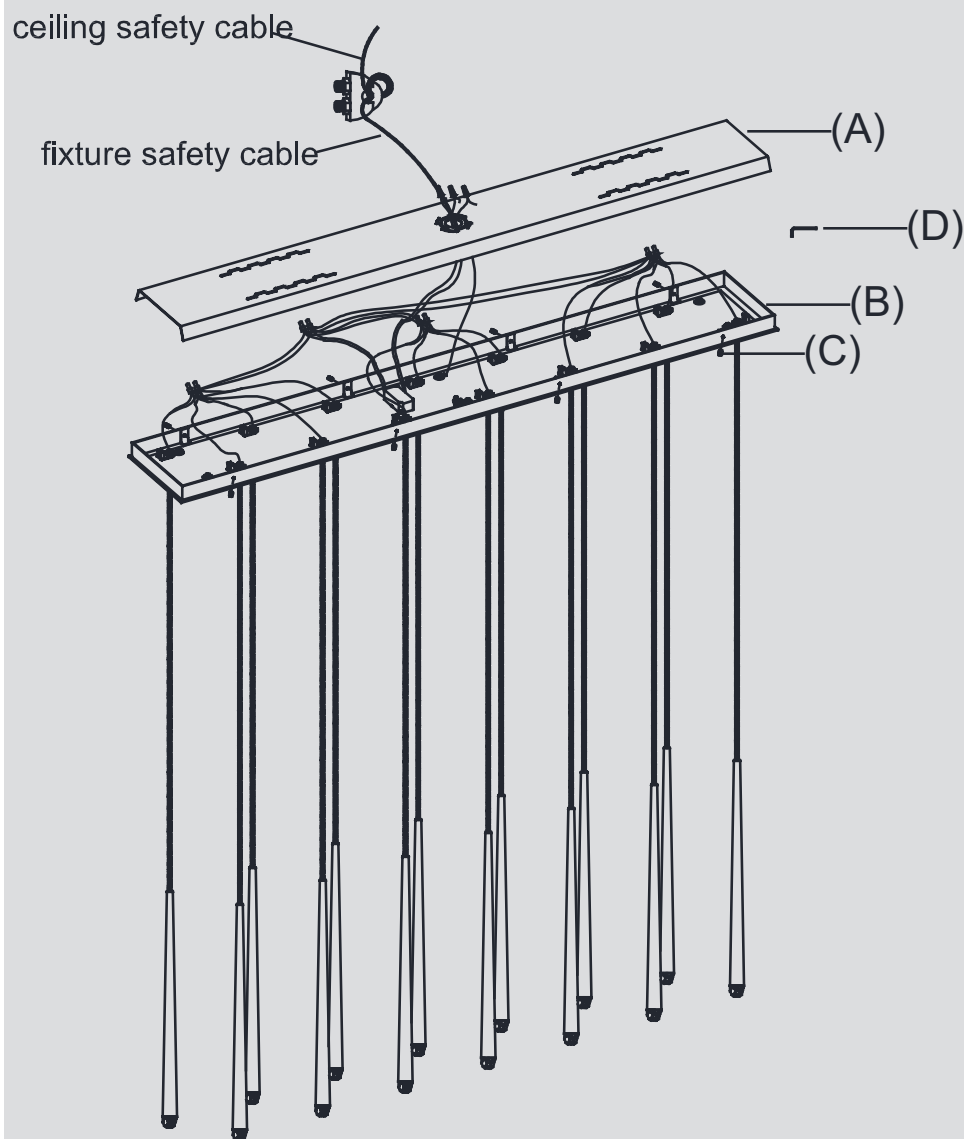

IMPORTANT: PLEASE READ**IMPORTANT SAFETY FEATURES**

This fixture is compatible with an Electric Low Voltage (ELV) Dimmer. LED module is replaceable.

DIMMER-SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the LED module. Do not touch or look directly at the LED module when fixture is illuminated. Keep flammable materials away from lit LED module.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.


WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALL SAFETY CABLE:

1. Run safety cable through junction box and around structural member of building.
2. Wrap the safety cable around the Saddle (a), and secure with U-Bolt (b) and Hex Nuts (c).

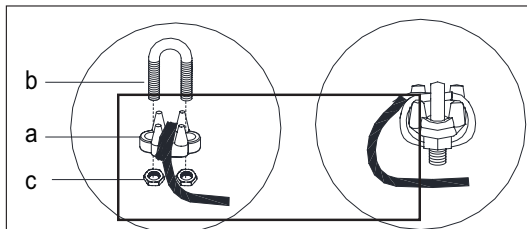**CAUTION:**

The light source contained in this fixture shall only be replaced by the manufacturer, their service agent, or a similar qualified person.

If the external flexible cable or cord of this fixture is damaged, it shall be exclusively replaced by the manufacturer, their service agent, or a similar qualified person.

WARNING: FOR INDOOR USE ONLY

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Mounting Plate (A) from Canopy (B) by removing Canopy Screws (C) using Allen Wrench (D).
3. Attach Mounting Plate (A) to the ceiling and secure with mounting screws (not included) or proper fasteners from your local hardware store.
4. Connect the safety steel wire from the fixture to the safety cable from the ceiling. Refer to the illustration on previous page.
5. Attach the fixture ground wire (green or green/yellow) to the ground wire from the outlet box (usually green insulation or bare) with a plastic wire connector and wrap the connection with electrical tape. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
6. Connect the neutral wires from the ballast (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
7. Connect the hot wires (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
8. Attach Canopy (B) with the fixture body to the affixed Mounting Plate (A) and secure with Canopy Screws (C) using Allen Wrench (D).
9. Restore power to outlet box and check operation of fixture.
10. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

HEIGHT ADJUSTMENT INSTRUCTIONS

CAUTION: Any rewiring should be done based on the circuit diagram shown at the bottom to avoid LED electrical appliances burning out.



1. Loosen the set screws on top of the cord clips using Allen Wrench (D).
2. Determine the hanging length for each of the drops. Pull the hanging cords out through the cord clips and extend to the desired ceiling height (refer to illustrations on the right).
3. Replace the screws and tighten to lock hanging cords in place using Allen Wrench (D).
4. Cut off the excess wiring with a wire cutter. Remove the wire connectors using pliers.
5. Take apart the connection cord and set aside.
6. Use a pair of wire strippers to remove about 1/2" (13mm) of insulation from each wire.

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

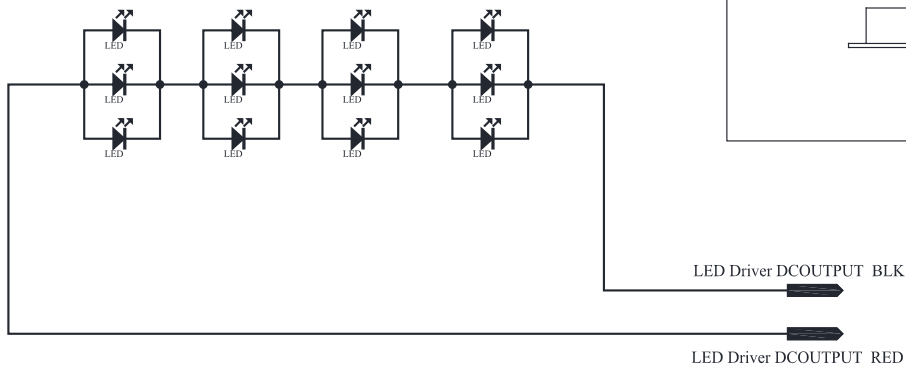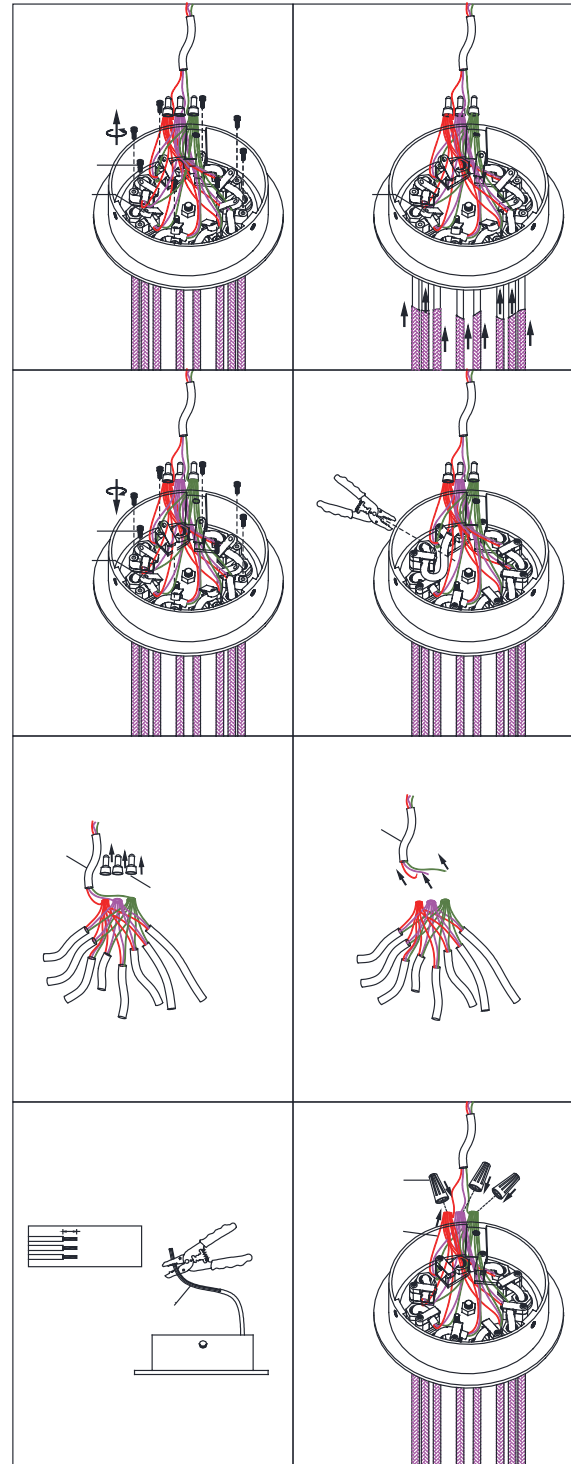

Driver model: LD028H-CU10030-M28E

FCC COMPLIANCE:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC COMPLIANCE:

This Class B digital apparatus complies with CAN ICES-005 (B) /NMB-005(B).

RESTORATION HARDWARE
15 KOCH ROAD
CORTE MADERA, CA 94925
1-800-762-1005