


# RESTORATION HARDWARE

Revised August 14, 2008

## FT-17 San Pietro Fountain (7 pieces)

## COMPONENTS AND PARTS LIST

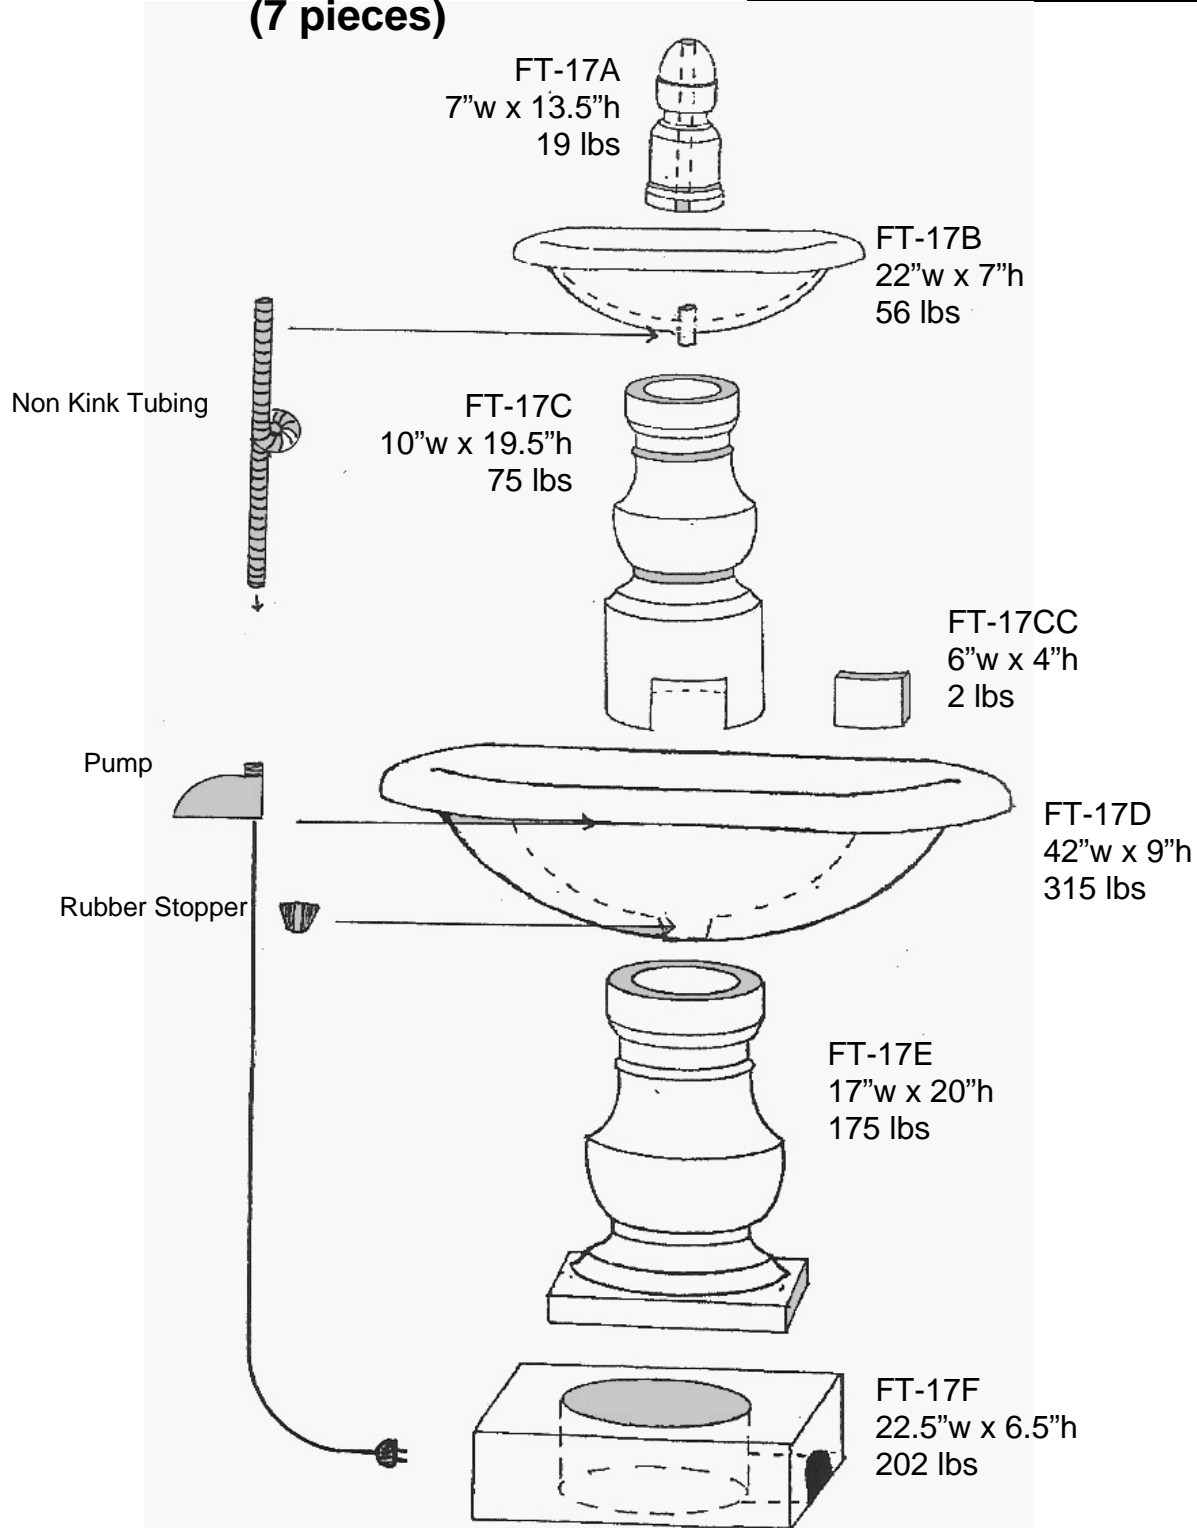

### Pump Kit Parts List

- 300 pump (1)
- Approx. 24" length of 1/2" black non-kink tubing (1)
- # 7 rubber stopper (1)
- Wedges (4)
- Hose clamps (3)
- Plumber putty (1)

Note – Hose clamps may be used as flow restrictor

## FT-17 San Pietro Fountain

(7 pieces)

Revised August 14, 2008

### **ASSEMBLY AND GENERAL FOUNTAIN INSTRUCTIONS**

1. Make sure you are assembling your fountain on a level surface.
2. Be sure to check the leveling of the fountain after each component installation. If fountain components are not properly leveled, the water will not flow correctly.
3. Place the Base (FT-17F) into position where the fountain will be installed.
4. Place the large pedestal (FT-17E) on top of the base.
5. Place the large bowl (FT-17D) on top of the pedestal. Make sure that the bowl is leveled and centered.
6. Feed the pump cord through the hole in the large bowl and down through the pedestal leaving enough cord length to work with the pump outside the pump cover.
7. Wrap a piece of putty around the cord where you will be placing the stopper.
8. Fit cord into stopper
9. Place a piece of putty inside the length of the slit in the stopper
10. Wrap putty around outside of stopper ensuring that the slit and the cord hole are covered and sealed
11. Press stopper firmly into the hole of basin
12. Place the small pedestal (FT-17C) over the pump in the center of the large bowl. Ensure it is level and centered in the large bowl.
13. Pull the pump cord all the way through the pedestal and run the cord through the channel on the bottom.
14. To ensure a level installation, bring the pump cord out through the channel in the bottom of the basin.
15. Place a hose clamp over one end of the ½" non kink tubing.
16. Connect that end of the tubing to the bottom of the small bowl (FT-17B). Tighten the hose clamp to ensure a good seal.
17. While the middle bowl is being held up over the middle pedestal, carefully feed the tubing down through the pedestal and large bowl.
18. Place the small bowl down onto the small pedestal. Ensure it is level and centered on the pedestal.
19. If you wish to use the 3<sup>rd</sup> hose clamp as a flow restrictor, you must install it on the tubing at this point.
20. Place a hose clamp over the other end of the ½" non kink tubing.
21. Connect that end of the tubing to the pump outlet and tighten the hose clamp.
22. Place the finial (FT-17A) into the middle bowl by feeding the protruding copper pipe from the bowl into the copper pipe hole in the finial.
23. Install the pump cover door (FT-17CC) into the opening of the pump cover.
24. Fill the large bowl with water.
  - a. NOTE: Do not run fountain without sufficient water. If the pump is allowed to run dry, it can damage the pump.

## FT-115 Belvedere Fountain

(7 pieces)

Revised August 14, 2008

### **WINTER CARE AND GENERAL FOUNTAIN INSTRUCTIONS**

#### **- W I N T E R   C A R E -**

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover your Campania Fountain with a Campania Fountain Cover, or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

#### **- G E N E R A L   F O U N T A I N   T I P S -**

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on

grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.